

# MOHAWK



## INSTALLATION & OPERATION MANUAL

### MP-18-SERIES TOUCHSCREEN

### ELECTRIC/HYDRAULIC

### PORTABLE LIFT

### 2, 4, 6 & 8 POST ARRANGEMENTS

#### MOHAWK RESOURCES LTD.

65 VROOMAN AVENUE

P. O. BOX 110

AMSTERDAM, NY 12010

TOLL FREE: 1-800-833-2006

FAX: 1-518-842-1289

LOCAL: 1-518-842-1431

File: MP-18-Series Touchscreen 12-1-2015.doc

Rev: 12/1/2015

Part No. : 601-800-389

**READ MANUAL THOROUGHLY  
BEFORE INSTALLING,  
OPERATING OR SERVICING THIS  
LIFT !!**

**Deliver these instructions to lift  
owner/user/employer along with other  
instructional materials furnished with  
this lift.**



See Manual for specific Models  
Certified to ANSI/ALI ALCTV.

# IMPORTANT SAFETY INSTRUCTIONS

When using this garage equipment, basic safety precautions should always be followed, including the following:

- 1. Read all instructions.**
2. Inspect lift daily. Do not operate if it malfunctions or problems have been encountered.
3. Never attempt to overload the lift. The manufacturer's rated capacity is shown on the identification label on the power side column. Do not override the operating controls or the warranty will be void.
4. Only trained and authorized personnel should operate the lift. Do not allow customers or bystanders to operate the lift or be in the lift area.
5. Position the lift support forks to contact the vehicle tires. Raise the lift until the forks contact the tires. Check forks for secure contact with the vehicle tires, then raise the lift to the desired working height.
6. NOTE: Always use all 4 posts to raise and support vehicle.
7. Note that the removal or installation of some vehicle parts may cause a critical load shift in the center of gravity and may cause the vehicle to become unstable. Refer to the vehicle manufacturer's service manual for recommended procedures.
8. Always keep the lift area free of obstructions and debris. Grease and oil spills should always be cleaned up immediately.
9. Never raise vehicle with passengers inside.
10. Before lowering check area for any obstructions.
11. Before driving vehicle between the posts, position the lift forks to allow vehicle to freely enter lifting area. To not hit or run over forks as this could damage the lift and/or the vehicle.
12. Before removing the vehicle from the lift area, position the lift forks to allow vehicle to freely leave lifting area. To not hit or run over forks as this could damage the lift and/or the vehicle.
13. Care must be taken as burns can occur from touching hot parts.
14. Do not operate equipment with a damaged cord or if the equipment has been dropped or damaged – until a qualified serviceman has examined it.
15. Do not let cords hang over tables, benches or counters or come in contact with hot manifolds or moving fan blades.
16. If an extension cord is necessary, a cord with a current rating equal to or more than that of the equipment should be used. Cords rated for less current than the equipment may overheat. Care should be taken to arrange the cord so that it will not be tripped over or pulled.
17. Always unplug the equipment from electrical outlet when not in use. Never use the cord to pull the plug from the outlet. Grasp plug and pull to disconnect.
18. Let equipment cool completely before pulling away. Loop cord loosely around equipment when storing.
19. To reduce the risk of fire, do not operate equipment in the vicinity of open containers of flammable liquids (gasoline).
20. Adequate ventilation should be provided when working on operating internal combustion engines.
21. Keep hair, loose clothing, fingers, and all parts of body way from moving parts.
22. To reduce the risk of electrical shock, do not use on wet surfaces or expose to rain.
23. Use only as described in this manual. Use only manufacturer's recommended attachments.
- 24. ALWAYS WEAR SAFETY GLASSES.** Everyday eyeglasses have only impact resistant lenses, and they are NOT safety glasses.

**SAVE THESE INSTRUCTIONS**

### MP-Series AC Model Names (with Touchscreens):

<i><b>Mohawk Model Name</b></i>	<i><b>Number of Posts:</b></i>	<i><b>Total Lift Capacity (lbs):</b></i>	<i><b>----- Fork Lengths -----</b></i>			
			<i><b>Post 1&amp;2</b></i>	<i><b>Post 3&amp;4</b></i>	<i><b>Post 5&amp;6</b></i>	<i><b>Post 7&amp;8</b></i>
MP-18-705	2	36,000	15"	N/A	N/A	N/A
MP-18-713	2	32,000	22" W	N/A	N/A	N/A
MP-18-706	4	72,000	15"	15"	N/A	N/A
MP-18-730	4	68,000	15"	22" W	N/A	N/A
MP-18-714	4	64,000	22" W	22" W	N/A	N/A
MP-18-707	6	108,000	15"	15"	15"	N/A
MP-18-758	6	104,000	15"	15"	22" W	N/A
MP-18-759	6	100,000	15"	22" W	22" W	N/A
MP-18-715	6	96,000	22" W	22" W	22" W	N/A
MP-18-708	8	144,000	15"	15"	15"	15"
MP-18-760	8	140,000	15"	15"	15"	22" W
MP-18-761	8	136,000	15"	15"	22" W	22" W
MP-18-762	8	132,000	15"	22" W	22" W	22" W
MP-18-716	8	128,000	22" W	22" W	22" W	22" W
<b>Notes:</b> <b>W - Designates Wider Fork/Carriage Version.</b> <b>All Posts with 22" Forks are Rated 16,000 lbs each.</b>						

### MP-Series 24 VDC Model Names (with Touchscreens):

<i><b>Mohawk Model Name</b></i>	<i><b>Number of Posts:</b></i>	<i><b>Total Lift Capacity (lbs):</b></i>	<i><b>----- Fork Lengths -----</b></i>			
			<i><b>Post 1&amp;2</b></i>	<i><b>Post 3&amp;4</b></i>	<i><b>Post 5&amp;6</b></i>	<i><b>Post 7&amp;8</b></i>
MP-18-605	2	36,000	15"	N/A	N/A	N/A
MP-18-613	2	32,000	22" W	N/A	N/A	N/A
MP-18-606	4	72,000	15"	15"	N/A	N/A
MP-18-630	4	68,000	15"	22" W	N/A	N/A
MP-18-614	4	64,000	22" W	22" W	N/A	N/A
MP-18-607	6	108,000	15"	15"	15"	N/A
MP-18-658	6	104,000	15"	15"	22" W	N/A
MP-18-659	6	100,000	15"	22" W	22" W	N/A
MP-18-615	6	96,000	22" W	22" W	22" W	N/A
MP-18-608	8	144,000	15"	15"	15"	15"
MP-18-660	8	140,000	15"	15"	15"	22" W
MP-18-661	8	136,000	15"	15"	22" W	22" W
MP-18-662	8	132,000	15"	22" W	22" W	22" W
MP-18-616	8	128,000	22" W	22" W	22" W	22" W
<b>Notes:</b> <b>W - Designates Wider Fork/Carriage Version.</b> <b>All Posts with 22" Forks are Rated 16,000 lbs each.</b>						

HAVE A QUESTION?

**Call your local  
Mohawk distributor  
For parts, service and technical support.**

Distributor Place Card Here

Please have this unit's model and serial number when calling for service.

Model Number \_\_\_\_\_

Serial Number \_\_\_\_\_

**OR CONTACT:**

**MOHAWK RESOURCES LTD.**

65 Vrooman Ave.

P.O. Box 110

Amsterdam, NY 12010

Toll Free: 1-800-833-2006

Local: 1-518-842-1431

Fax: 1-518-842-1289

Internet: [www.MOHAWKLIFTS.com](http://www.MOHAWKLIFTS.com)

E-Mail: [Service@MOHAWKLIFTS.com](mailto:Service@MOHAWKLIFTS.com)



# MOHAWK WARRANTIES

EFFECTIVE DATE: 12/1/2015\*  
READ THIS WARRANTY IN ITS ENTIRETY

## **GENERAL WARRANTY INFORMATION:**

MOHAWK'S OBLIGATION UNDER THIS WARRANTY IS LIMITED TO REPAIRING OR REPLACING ANY PART OR PARTS RETURNED TO THIS FACTORY, TRANSPORTATION CHARGES PREPAID BY CUSTOMER WITH AUTHORIZED RETURN (RGA), WHICH PROVE UPON INSPECTION TO BE DEFECTIVE AND WHICH HAVE NOT BEEN MISUSED. DAMAGE OR FAILURE TO ANY PART DUE TO FREIGHT DAMAGE OR LACK OF REQUIRED REGULAR DOCUMENTED MAINTENANCE IS NOT COVERED UNDER THIS WARRANTY. ALL WARRANTY CLAIMS MUST BE PERFORMED IN ACCORDANCE TO MOHAWK'S WARRANTY PARTS RETURN POLICY (CONTACT MOHAWK'S SERVICE DEPARTMENT FOR MORE INFORMATION).

THIS WARRANTY DOES NOT COVER MIS-DIAGNOSING OF UNIT OR PARTS RETURNED THAT ARE NON-DEFECTIVE. THIS WARRANTY DOES NOT COVER ANY CONSEQUENTIAL OR INCIDENTAL DAMAGES INCLUDING, BUT NOT LIMITED TO, LOST REVENUES OR BUSINESS HARM. THIS EQUIPMENT HAS BEEN DESIGNED FOR USE IN NORMAL VEHICLE MAINTENANCE APPLICATIONS. A SPECIFIC INDIVIDUAL WARRANTY MUST BE ISSUED FOR UNITS THAT DEVIATE FROM INTENDED USAGE, SUCH AS HIGH CYCLE USAGE IN INDUSTRIAL APPLICATIONS, OR USAGE IN EXTREMELY ABUSIVE ENVIRONMENTS. MOHAWK RESERVES THE RIGHT TO DECLINE RESPONSIBILITY WHEN REPAIRS OR MODIFICATIONS HAVE BEEN MADE OR ATTEMPTED BY OTHERS WITHOUT WRITTEN AUTHORIZATION FROM MOHAWK RESOURCES LTD.. THIS WARRANTY DOES NOT COVER LABOR OR TRANSPORTATION. THIS WARRANTY DOES NOT COVER DOWNTIME EXPENSES INCURRED WHEN UNIT IS IN REPAIR. **THE LIFT MUST BE REGISTERED WITHIN 30 DAYS OF INSTALLATION BY MAILING SUPPLIED WARRANTY REGISTRATION CARD TO MOHAWK AND MUST BE SIGNED BY A LICENSED ELECTRICIAN.** THE MODEL NUMBER AND SERIAL NUMBER OF THE EQUIPMENT MUST BE FURNISHED WITH ALL WARRANTY CLAIMS. THIS WARRANTY STATEMENT CONTAINS THE ENTIRE AGREEMENT BETWEEN MOHAWK RESOURCES LTD. AND THE PURCHASER UNLESS OTHERWISE SPECIFICALLY EXPRESSED IN WRITING. THIS NON-TRANSFERABLE WARRANTY APPLIES TO THE ORIGINAL PURCHASER ONLY.

THIS WARRANTY DOES NOT COVER NORMAL SURFACE WEAR ITEMS, ITEMS SUBJECT TO ABRASION, OR ITEMS USED IN A CORROSIVE ENVIRONMENT. SOME ITEMS ON LIFT ARE SUBJECT TO NORMAL "WEAR AND TEAR" AND ARE NOT COVERED UNDER THIS WARRANTY.

## **STRUCTURAL AND MECHANICAL COMPONENTS (ALL LIFTS):**

STRUCTURAL AND MECHANICAL COMPONENTS OF THIS UNIT ARE GUARANTEED FOR THE BELOW STATED TIME FRAME, SPECIFIC TO MODEL LISTED, FROM THE DATE OF SHIPMENT FROM FACTORY, AGAINST DEFECTS IN WORKMANSHIP AND/OR MATERIALS WHEN LIFT IS INSTALLED AND USED ACCORDING TO SPECIFICATIONS.

**25-YEARS STRUCTURAL / 10 YEARS MECHANICAL:** TWO-POST MODELS A-7, SYSTEM IA-10, LC-12, LMF-12, TP-16, TP-18, TP-20, TP-26, TP-30. STRUCTURAL ITEMS COVERED INCLUDE LEG, CARRIAGE, SWING ARM AND SLIDER WELDMENTS (EXCLUDING NORMAL WEAR AREAS AS STATED ABOVE). MECHANICAL ITEMS COVERED INCLUDE ROLLER BEARINGS AND LIFTING CHAIN.

**5-YEAR:** MODELS TL-7.

**3-YEAR:** MODELS TR-19, TR-25, FL-25, TR-30, TR-33, TR-35, TR-50, TR-75, TR-110, TR-120, MP-SERIES LIFTS.

**2-YEAR:** MODELS PARALLELOGRAM SERIES LIFTS.

**1-YEAR:** MODELS TD-1000, TD-2000, CT-1000, USL-6000.

## **POWER UNIT (ALL LIFTS):**

ALL POWER UNIT COMPONENTS (MOTOR, PUMP AND RESERVOIR) ARE GUARANTEED FOR TWO YEARS FOR PARTS, FROM THE DATE OF SHIPMENT FROM FACTORY, AGAINST DEFECTS IN WORKMANSHIP AND/OR MATERIALS WHEN THE LIFT IS INSTALLED, WIRED BY A LICENSED ELECTRICIAN AND USED ACCORDING TO SPECIFICATIONS.

## **ELECTRICAL COMPONENTS (ALL LIFTS):**

ALL ELECTRICAL COMPONENTS (EXCLUDING MOTOR) ARE GUARANTEED FOR ONE YEAR FOR PARTS, FROM THE DATE OF SHIPMENT FROM FACTORY, AGAINST DEFECTS IN WORKMANSHIP AND/OR MATERIALS WHEN THE LIFT IS INSTALLED AND USED ACCORDING TO SPECIFICATIONS. SEE WARRANTY EXCEPTIONS SECTION FOR BATTERIES.

## **PNEUMATIC-AIR COMPONENTS (ALL LIFTS):**

ALL PNEUMATIC (AIR) COMPONENTS (I.E. AIR CYLINDERS AND POPPET AIR VALVES) ARE GUARANTEED FOR ONE YEAR FOR PARTS, FROM THE DATE OF SHIPMENT FROM FACTORY, AGAINST DEFECTS IN WORKMANSHIP AND/OR MATERIALS WHEN THE LIFT IS INSTALLED AND USED ACCORDING TO SPECIFICATIONS. COMPONENTS IN A PNEUMATIC SYSTEM THAT ARE NOT PROPERLY REGULATED, LUBRICATED AND CONDITIONED WITH AN AIR DRYING SYSTEM ARE NOT COVERED UNDER WARRANTY.

## **HYDRAULIC COMPONENTS (ALL LIFTS):**

EXCLUDING CYLINDERS AND PUMPS (COVERED IN OTHER SECTIONS), ALL HYDRAULIC COMPONENTS (I.E. VALVES AND FITTINGS) ARE GUARANTEED FOR ONE YEAR FOR PARTS, FROM THE DATE OF SHIPMENT FROM FACTORY, AGAINST DEFECTS IN WORKMANSHIP AND/OR MATERIALS WHEN THE LIFT IS INSTALLED AND USED ACCORDING TO SPECIFICATIONS.

**HYDRAULIC CYLINDERS (MODEL SPECIFIC LIFTS):**

THE FOLLOWING MODELS ARE GUARANTEED FOR 5 YEARS (PARTS ONLY), FROM DATE OF SHIPMENT FROM FACTORY, FOR HYDRAULIC CYLINDERS, AGAINST DEFECTS IN WORKMANSHIP AND/OR MATERIALS WHEN THE LIFT IS INSTALLED AND USED ACCORDING TO SPECIFICATIONS: TWO-POST MODELS A-7, SYSTEM IA-10, LC-12, LMF-12, TP-16, TP-18, TP-20, TP-26, TP-30.

ALL OTHER MODELS ARE GUARANTEED FOR TWO YEARS (PARTS ONLY), FROM THE DATE OF SHIPMENT FROM FACTORY, FOR HYDRAULIC CYLINDERS, AGAINST DEFECTS IN WORKMANSHIP AND/OR MATERIALS WHEN THE LIFT IS INSTALLED AND USED ACCORDING TO SPECIFICATIONS (EXCLUDING USL-6000, WHICH IS ONE YEAR).

THE “*EXTENDED LIFETIME CYLINDER SEAL WARRANTY*” (BELOW) IS APPLICABLE TO THE FOLLOWING MOHAWK LIFTS ONLY: TWO-POST MODELS A-7, SYSTEM IA-10, LC-12, LMF-12, TP-16, TP-18, TP-20, TP-26, TP-30. SEE MOHAWK’S “*EXTENDED LIFETIME CYLINDER SEAL WARRANTY*” FOR SPECIFIC WARRANTY PROVISIONS FOR HYDRAULIC CYLINDERS.

THE “*EXTENDED LIFETIME CYLINDER SEAL WARRANTY*” IS AS FOLLOWS:

AS THE ORIGINAL PURCHASER OF A MOHAWK LIFT MANUFACTURED BY MOHAWK RESOURCES, LTD. YOU ARE ENTITLED TO AN EXTENDED CYLINDER SEAL WARRANTY.

MOHAWK’S OBLIGATION UNDER THIS WARRANTY IS LIMITED TO SUPPLYING MODEL SPECIFIC CYLINDER SEALS. THE CUSTOMER IS RESPONSIBLE FOR SHIPPING AND HANDLING OF THE SEALS. MOHAWK IS NOT RESPONSIBLE/LIABLE FOR THE REBUILD OF CYLINDERS BY OTHERS. THIS WARRANTY IS NON-TRANSFERABLE AND RUNS TO THE ORIGINAL PURCHASER ONLY.

**STANDARD OPTIONS (ALL LIFTS):**

ALL STANDARD OPTIONS OF THIS UNIT ARE GUARANTEED FOR ONE YEAR FOR PARTS, FROM THE DATE OF SHIPMENT FROM FACTORY, AGAINST DEFECTS IN WORKMANSHIP AND/OR MATERIALS WHEN LIFT IS INSTALLED AND USED ACCORDING TO SPECIFICATIONS.

**CUSTOM LIFTS AND CUSTOM OPTIONS:**

ALL “CUSTOM” LIFTS AND/OR “CUSTOM” OPTIONS ARE GUARANTEED FOR ONE YEAR FOR PARTS, FROM THE DATE OF SHIPMENT FROM FACTORY, AGAINST DEFECTS IN WORKMANSHIP AND/OR MATERIALS WHEN LIFT IS INSTALLED AND USED ACCORDING TO SPECIFICATIONS.

**WARRANTY EXCEPTIONS (ALL LIFTS):**

**ADJUSTMENTS:** THIS WARRANTY DOES NOT COVER CASUAL AND ROUTINE ADJUSTMENTS SUCH AS, BUT NOT LIMITED TO: FITTINGS, SENSORS AND SWITCHES, ANCHOR BOLT RE-TIGHTENING, OR ANY SHIMMING OR ADJUSTMENTS REQUIRED DURING A PROPER AND PROFESSIONAL INSTALLATION BY A QUALIFIED INSTALLER.

**MAINTENANCE AND INSPECTIONS:** IF THIS UNIT IS NOT MAINTAINED AND INSPECTED IN ACCORDANCE TO THE RELEVANT SECTIONS IN THE USERS MANUAL FOR THIS SPECIFIC MODEL, WARRANTY IS VOID. OSHA, ANSI AND MOHAWK REQUIRE THAT RECORDS MUST BE MAINTAINED TO PROVE THAT INSPECTIONS AND MAINTENANCE OF THIS UNIT HAVE BEEN ROUTINELY PERFORMED BY QUALIFIED INDIVIDUALS.

**ABUSE:** IF THIS UNIT IS FOUND TO BE OVERLOADED (PURPOSELY OR UNKNOWNLY), USED IN A SITUATION BEYOND ITS INTENDED FUNCTION, NOT MAINTAINED & INSPECTED REGULARLY, USED IN AN ABUSIVE ENVIRONMENT OR BEYOND NORMAL SHOP USAGE, THIS WARRANTY IS VOID IN ITS ENTIRETY.

**NON-EXISTENT PROBLEMS:** FOR SERVICE VISITS, PART REPLACEMENTS, LABOR, ETC. FOR PARTS FOUND TO BE NON-DEFECTIVE, OR FOR A UNIT DIS-FUNCTION THAT DOES NOT EXIST, IT IS THE LIFT OWNER THAT REQUESTED THE SERVICE VISIT WHO BEARS THE RESPONSIBILITY OF ALL RELATED EXPENSES.

**BATTERIES:** ALL BATTERIES CARRY THE BATTERY MANUFACTURER’S WARRANTY. MAINTENANCE REQUIREMENTS AND ABUSE PROVISIONS ARE AS STATED BY THE BATTERY MANUFACTURER. REFER TO BATTERY MANUFACTURER’S WARRANTY.

**SPECIAL/MODIFIED INSTALLATIONS:** THIS WARRANTY DOES NOT COVER “NON-TRADITIONAL” INSTALLATIONS. INSTALLATIONS ARE TO BE DONE ACCORDING TO SPECIFICATIONS, OR THE WARRANTY IS VOID.

**WEARABLE COMPONENTS:** SOME ITEMS ON LIFTS ARE SUBJECT TO NORMAL “WEAR AND TEAR” AND ARE NOT COVERED UNDER THIS WARRANTY.

**NON-VEHICLE / RE-PURPOSED LIFTS:** THIS WARRANTY DOES NOT COVER LIFTS THAT ARE “RE-PURPOSED” TO RAISE AND LOWER EQUIPMENT THAT ARE NOT CONSIDERED VEHICLES.

**\* THIS WARRANTY SUPERSEDES ALL OTHER WARRANTY POLICIES PREVIOUSLY STATED AND IN ALL OTHER MOHAWK PRODUCT SPECIFIC LITERATURE (MANUALS, BROCHURES, ETC.).**

Rev 12/1/2015

# CONTENTS

## TEXT

	<b>PAGE</b>
GENERAL NOTES & WARNINGS .....	1
LIFT LIMITATIONS .....	2
POWER SUPPLY REQUIREMENTS .....	3
OPTIONAL EQUIPMENT .....	4
LIFT SPECIFICATIONS (15" FORK MODEL) .....	5
LIFT SPECIFICATIONS (22" FORK MODEL) .....	6
DESIGN & CONSTRUCTION FEATURES .....	7
MOBILE LIFT SET-UP .....	8-9
MOBILE LIFT OPERATION .....	10-11
LIFT FINAL CHECKOUT .....	12
SAFETY TIPS .....	13
MAINTENANCE INSTRUCTIONS .....	14
EXPLANATION OF COMPUTER SYSTEM .....	15
TROUBLE SHOOTING .....	16-17
MAINTENANCE & SERVICE CHART .....	18

## PARTS

	<b>DWG NO.</b>
MASTER POST ASSEMBLY (15" FORKS) .....	MP-0400-A-010
SLAVE POST ASSEMBLY (15" FORKS) .....	MP-0400-A-011
MASTER POST ASSEMBLY (22" FORKS) .....	MP-0400-A-012
SLAVE POST ASSEMBLY (22" FORKS) .....	MP-0400-A-013
JACK ASSEMBLY .....	MP-0400-A-003
POWER UNIT ASSEMBLY .....	MP-0400-A-004
FLOOR ROLLER ASSEMBLY .....	MP-0500-A-001
LOCK ASSEMBLY .....	MP-0600-A-001
CARRIAGE ASSEMBLY .....	MP-0700-A-001
CYLINDER ASSEMBLY .....	MP-0900-A-001
MASTER BOX ASSEMBLY .....	MP-1300-A-003
MASTER PANEL ASSEMBLY .....	MP-1300-A-004
SLAVE BOX ASSEMBLY .....	MP-1300-A-012
SLAVE PANEL ASSEMBLY .....	MP-1300-A-013
COMMUNICATION CABLE ASSEMBLY .....	MP-1300-A-005
POWER CABLE ASSEMBLY .....	MP-1300-A-006
DUMMY PLUG (A-YELLOW) ASSEMBLY .....	MP-1300-A-010
DUMMY PLUG (B-RED) ASSEMBLY .....	MP-1300-A-011
STRING POT ASSEMBLY .....	MP-1300-A-014
PENDANT ASSEMBLY (OPTIONAL) .....	MP-1300-A-020

## ILLUSTRATIONS

JACK OPERATION
JACK RELIEF SETTING
MASTER AND SLAVE ENCLOSURE PARTS DESCRIPTIONS
CABLE IDENTIFICATIONS
WARNINGS PICTOGRAM
CAUTIONS PICTOGRAM
SAFETY INSTRUCTIONS PICTOGRAM

## SCHEMATICS

	<b>DWG NO.</b>
HYDRAULIC SCHEMATIC .....	MP-1400-A-002
ELECTRICAL SCHEMATIC (3 PHASE STANDARD) .....	MP-0400-A-001 (Pg 1 of 2)
POWER SWITCHING CIRCUIT DIAGRAM .....	MP-0400-A-001 (Pg 2 of 2)
MASTER BOX WIRING (3 PHASE) .....	MP-0400-A-003 (Pg 1 of 2)
SLAVE BOX WIRING (3 PHASE) .....	MP-0400-A-003 (Pg 2 of 2)
ENCLOSURE DOOR WIRING .....	MP-0400-A-004
ELECTRICAL SCHEMATIC (1 PHASE OPTIONAL) .....	MP-0400-A-006
MASTER BOX WIRING (1 PHASE OPTIONAL) .....	MP-0400-A-008 (Pg 1 of 2)
SLAVE BOX WIRING (1 PHASE OPTIONAL) .....	MP-0400-A-008 (Pg 2 of 2)

## OPTIONS

ALL INFORMATION, ILLUSTRATIONS, AND SPECIFICATIONS IN THIS MANUAL ARE BASED ON THE LATEST PRODUCT INFORMATION AVAILABLE AT THE TIME OF PRINTING. WE RESERVE THE RIGHT TO MAKE CHANGES AT ANY TIME WITHOUT NOTICE.

# GENERAL NOTES & WARNINGS

RECOMMENDATIONS BY THE INDIVIDUAL USER OR USING ORGANIZATION FOR IMPROVING THIS PUBLICATION OR ANY ASPECT OF THE PRODUCT ARE ENCOURAGED AND SHOULD BE FORWARDED IN WRITING TO:

**MOHAWK RESOURCES LTD, SERVICE DEPT, 65 VROOMAN AVENUE, AMSTERDAM, NY 12010**

THIS IS NOT A VEHICLE LIFTING PROCEDURE MANUAL AND NO ATTEMPT IS MADE OR IMPLIED HEREIN TO INSTRUCT THE USER IN LIFTING METHODS PARTICULARLY TO THE INDIVIDUAL APPLICATION OF THE EQUIPMENT DESCRIBED IN THIS MANUAL. RATHER, THE CONTENTS OF THIS MANUAL ARE INTENDED AS A BASE LINE FOR OPERATION, MAINTENANCE, TROUBLE SHOOTING, AND PARTS LISTING OF THE UNIT AS IT STANDS ALONE AND AS IT IS INTENDED AND ANTICIPATED TO BE USED IN CONJUNCTION WITH OTHER EQUIPMENT.

PROPER APPLICATION OF THE EQUIPMENT DESCRIBED HEREIN IS LIMITED TO THE PARAMETERS DETAILED IN THE SPECIFICATIONS AND THE USES SET FORTH IN THE DESCRIPTIVE PASSAGES. ANY OTHER PROPOSED APPLICATION OF THIS EQUIPMENT SHOULD BE DOCUMENTED AND SUBMITTED IN WRITING TO MOHAWK RESOURCES LTD. FOR EXAMINATION. THE USER ASSUMES FULL RESPONSIBILITY FOR ANY EQUIPMENT DAMAGE, PERSONAL INJURY, OR ALTERATION OF THE EQUIPMENT DESCRIBED IN THIS MANUAL OR ANY SUBSEQUENT DAMAGES.

DO NOT WELD, APPLY HEAT, OR MODIFY THIS EQUIPMENT IN ANY MANNER WITHOUT WRITTEN AUTHORIZATION FROM MOHAWK RESOURCES LTD. CERTAIN ALLOY OR HEAT-TREATED COMPONENTS MAY BE DISTORTED OR WEAKENED, RESULTING IN AN UNSAFE CONDITION. MOHAWK RESOURCES LTD. IS NOT RESPONSIBLE FOR DISTORTIONS, WHICH RESULT FROM WELDING ON THIS EQUIPMENT AFTER MANUFACTURING IS COMPLETED. UNAUTHORIZED WELDING, APPLICATION OF HEAT, OR MODIFICATION OF THIS EQUIPMENT VOIDS ANY AND / OR ALL APPLICABLE WARRANTIES COVERING THIS EQUIPMENT.

ALL WARRANTIES APPLICABLE TO THIS EQUIPMENT ARE CONTINGENT ON STRICT ADHERENCE TO THE MAINTENANCE SCHEDULES AND PROCEDURES IN THIS MANUAL.

KEEP ALL SHIELDS AND GUARDS IN PLACE. ENSURE ALL SAFETY MECHANISMS ARE OPERABLE. KEEP HANDS, FEET, AND CLOTHING AWAY FROM POWER-DRIVEN AND MOVING PARTS.

## **WARNING**

DO NOT INSTALL THIS UNIT IN A PIT OR DEPRESSION DUE TO FIRE OR EXPLOSION RISK

## **IMPORTANT NOTE**

A **LEVEL FLOOR** IS SUGGESTED FOR A PROPER INSTALLATION SITE AND WILL ENSURE LEVEL LIFTING. ANY MAJOR SLOPE CHANGES WILL AFFECT THE UNIT'S LEVEL LIFTING PERFORMANCE. IF A FLOOR IS OF QUESTIONABLE SLOPE, CONSIDER A SURVEY OF THE SIGHT AND / OR THE POSSIBILITY OF POURING A NEW LEVEL CONCRETE SLAB SECTION. SIMPLY STATED, FOR OPTIMUM LEVEL LIFTING, THE EQUIPMENT, AT BEST, CAN LIFT ONLY AS LEVEL AS THE FLOOR ON WHICH IT IS LOCATED... AND SHOULD NOT BE EXPECTED TO COMPENSATE FOR DRASTIC FLOOR SLOPE DIFFERENCES.

THIS EQUIPMENT MUST BE USED ON A LEVEL **CONCRETE FLOOR WITH A MINIMUM THICKNESS OF 4-1/2" ON GRADE**. THE CONCRETE MUST BE AGED AT LEAST (28) **TWENTY EIGHT** DAYS PRIOR TO INSTALLATION AND HAVE A MINIMUM COMPRESSIVE STRENGTH OF **3000 PSI**. DO NOT USE THIS UNIT ON ANY ASPHALT SURFACE.

DO NOT USE THIS UNIT ON A SECOND FLOOR OR ANY GROUND FLOOR WITH A BASEMENT BENEATH WITHOUT WRITTEN AUTHORIZATION FROM THE BUILDING ARCHITECT.

## **CAUTION**

THE EQUIPMENT DESCRIBED IN THIS MANUAL COULD BE POTENTIALLY DANGEROUS IF IMPROPERLY OR CARELESSLY OPERATED. FOR THE PROTECTION OF ALL PERSONS AND EQUIPMENT, ONLY COMPETENTLY TRAINED OPERATORS WHO ARE CRITICALLY AWARE OF THE PROPER OPERATING PROCEDURES, POTENTIAL DANGERS, AND SPECIFIC APPLICATION OF THIS EQUIPMENT SHOULD BE ALLOWED TO TOUCH THE CONTROLS AT ANY TIME.

SAFE OPERATION OF THIS EQUIPMENT IS DEPENDENT ON USE, IN COMPLIANCE WITH THE OPERATION PROCEDURES OUTLINED IN THIS MANUAL ALONG WITH THE MAINTENANCE AND INSPECTION PROCEDURES WITH CONSIDERATION OF PREVAILING CONDITIONS.

THIS LIFT IS DESIGNED AND INTENDED **FOR USAGE AND STORAGE INDOORS ONLY**. MOHAWK DENIES ALL LIABILITY AND VOIDS WARRANTY IN SITUATIONS WHERE THIS LIFT IS USED OR STORED WHERE IT IS SUBJECTED TO THE OUTDOOR ELEMENTS AND TEMPERATURES.

THE EQUIPMENT DESCRIBED IN THIS MANUAL IS NEITHER DESIGNED NOR INTENDED FOR ANY APPLICATION ALONE OR IN CONJUNCTION WITH ANY OTHER EQUIPMENT THAT INVOLVES THE LIFTING OR MOVING OF **PERSONS**.

ALWAYS CONSULT THE VEHICLE LIFTING GUIDE FOR THE PROPER LIFTING POINTS ON ANY VEHICLE. THESE GUIDES ARE AVAILABLE FROM THE VEHICLE MANUFACTURERS. ALSO, REFER TO THE ANSI STANDARD "VEHICLE LIFT POINTS FOR SERVICE GARAGE LIFTING," ANSI/SAE J2184-OCT92, SAFETY MANUAL "LIFTING IF RIGHT," ALI/SM01, AND "VEHICLE LIFTING POINTS GUIDE" ALI/LP-GUIDE FOR PROPER POSITIONING OF VEHICLES ON LIFT.

AFTER LIFTING THE VEHICLE TO THE DESIRED HEIGHT, ALWAYS LOWER THE UNIT ONTO THE MECHANICAL SAFETIES. THE FORMING OF GOOD OPERATIONAL WORK HABITS WILL ELIMINATE OVERSIGHTS IN THE USE OF PROVIDED SAFETY DEVICES.

# APPENDAGE:

Rev (9/1/2012)

## LIFT ENVIRONMENT LIMITATIONS:

Mohawk prohibits the outdoor installation of this standard lift, which is APPROVED FOR INDOOR USAGE ONLY, in a normal garage type environment. Any concerns in applications that expose the lift to additional environmental effects, such as paint booths, wash bays, outdoors, high or low temperatures, etc. must be addressed to our engineering department, where provisions could/may be made to the lift to accommodate the area of use. Our engineering department must be made aware in advance of these conditions and any additional code requirements that must be met.

Also, the foundation for which this lift must be installed on must comply to the minimum specifications as set forth in this manual. Any drainage slopes in the bay where the lift is to be installed must be directed away from the posts to prevent water accumulation at the post bases.

Standard floor requirements are contained within this manual. For installation within a seismic area, a qualified person must be consulted to address seismic loads and other local or state requirements.

## LOCKOUT/TAGOUT REQUIREMENTS:

The start switch provided with this unit must not be used as a primary disconnecting means. A separate disconnecting means must be provided in accordance with all applicable codes. It is the responsibility of the owner/user of this unit to provide a proper lockout/tagout device for this unit before or during installation in conformance to ANSI Z244.1 and any local/state/national electrical codes and any OSHA regulations.

## OTHER LIFT LIMITATIONS:

All Mohawk MP-Series lifts must accomplish three main criteria in order to lift a vehicle safely:

1. **Proper capacity.** All MP-Series lifts are designed to lift standard vehicles within their rated capacity within the capacity of the lift rating. Any vehicles exceeding the capacity must not be raised. Ensure that individual columns are used within their capacity and are not overloaded (ie. heavy ended vehicles may overload the rear pair of columns).
2. **Proper engagement of tires/frame:** ensure tires are fully engaging all tires or proper frame components of vehicle. Ensure frame components used are capable of supporting vehicle.
3. **Proper flooring.** Use lifts on floors complying to required specs stated within this manual.

This lift is not intended to be driven on or off of, as this may damage the lift and the vehicle.

**This lift is not intended for the lifting of people.**

Care must be observed when removing any heavy components from a vehicle and thereby drastically shifting the vehicle center of gravity (i.e. engine removal, transmission removal, etc.). The use of jack stands at the front and rear ends of the vehicle is highly recommended when performing this type of work.

File: MP-Appen.doc

# POWER SUPPLY REQUIREMENTS (AC Units)

## **IMPORTANT:**

It is user's responsibility to provide all wiring for electrical hook-up prior to installation and to insure that the electrical installation conforms to local building codes. Where required, it is the user responsibility to provide an electrical isolation switch (per lockout/tag-out requirements stated in ANSI Z244.1) located in close proximity to the lift that will enable emergency stop capability and isolate electrical power from the lift for any servicing requirements.

The power supply connection must comply with the following.

## **For VAC Units, Disconnectable Cable Power Feed to Lift:**

If using a plug with the flexible cable connection provided, a plug must be provided that is rated as shown in the table below for the particular model, voltage and phase of the equipment supplied. This plug must be of the NEMA locking type with a ground connection and must have UL, CSA or other equivalent listing. Consult the plug manufacturer's installation instructions for connecting the plug to the cable. Refer to the electrical schematics in this manual for the proper connection of the power supply to the lift. Refer below to wire color designations and proper selection of feed cable. Consult and adhere to all local and national codes applying to the installation and use of this product.

## **VAC Wire Color Designations:**

### 3 Phase (Standard):

Red: L1 (X)  
Black: L2 (Y)  
White: L3 (W)  
Green: Ground (G)

### 1 Phase (Optional):

Red: L1 (X)  
Black: L2 (Y)  
White: Not Used (W)  
Green: Ground (G)

## **VAC Required Cable Specification:**

All power feed cable to this lift must be of Type SO, SOOW, or SOW, rated 600 V, 90 Degree C. The maximum length of the main power feed cable and inter-connection means (plugs) must not exceed 30 feet from the main post to the power feed box. The plug must be provided that is rated as shown in the table below for the particular model, voltage and phase of the equipment supplied.

<b>MOHAWK RESOURCES, LTD.</b> <b>MP-18 SERIES</b> <b>ELECTRICAL RATINGS:</b>
<b>MP-18-SERIES - 2 POSTS</b> 5 HP - 60 HZ <input type="checkbox"/> 208-230 VAC, 1 PHASE, 20 AMP * <input type="checkbox"/> 208-230 VAC, 3 PHASE, 20 AMP <input type="checkbox"/> 460-480 VAC, 3 PHASE, 10 AMP <input type="checkbox"/> 575-600 VAC, 3 PHASE, 8 AMP
<b>MP-18-SERIES - 4 POSTS</b> 10 HP - 60 HZ <input type="checkbox"/> 208-230 VAC, 1 PHASE, 40 AMP * <input type="checkbox"/> 208-230 VAC, 3 PHASE, 40 AMP <input type="checkbox"/> 460-480 VAC, 3 PHASE, 20 AMP <input type="checkbox"/> 575-600 VAC, 3 PHASE, 16 AMP
<b>MP-18-SERIES - 6 POSTS</b> 15 HP - 60 HZ <input type="checkbox"/> 208-230 VAC, 1 PHASE, 60 AMP * <input type="checkbox"/> 208-230 VAC, 3 PHASE, 60 AMP <input type="checkbox"/> 460-480 VAC, 3 PHASE, 30 AMP <input type="checkbox"/> 575-600 VAC, 3 PHASE, 24 AMP
<b>MP-18-SERIES - 8 POSTS</b> 20 HP - 60 HZ <input type="checkbox"/> 208-230 VAC, 1 PHASE (NOT AVAILABLE) <input type="checkbox"/> 208-230 VAC, 3 PHASE (NOT AVAILABLE) <input type="checkbox"/> 460-480 VAC, 3 PHASE, 40 AMP <input type="checkbox"/> 575-600 VAC, 3 PHASE, 32 AMP
<small>* PUMP SIZE AND LIFT SPEED OF 1 PHASE MODELS HALF OF 3 PHASE MODELS TO MAINTAIN LOW AMPS.</small>
<small>PN #601-800-210</small>

## POWER SUPPLY REQUIREMENTS (DC Units)

This lift comes with (2) 12 VDC batteries in series to provide a 24 VDC system. A separate 120 VAC power supply is only required when charging the post. Each post comes equipped with a 120 VAC, 60 HZ receptacle which accepts a 120 VAC extension cord. The minimum amp draw is 3 amps per post. Use sizes of plug, cord and power supply as follows:

### Plug Requirements:

NEMA Type 5-15 (Female), 125 VAC, 2 Pole, 3 Wire Grounding, 15 Amp Rated.

### Cord Requirements:

3 Wire, 125 VAC, 15 Amp Rated, Oil Resistant, Type G, SO, STO, or W. (Maximum Length is 50 feet)

### Power Requirements:

115-120 VAC, 2 Pole, 3 Wire Grounding, 60 Hz, 3 Amps minimum per post. Size circuit breaker to NEC and local codes.

**WARNING:** Keep in mind that branching extension cords between posts will multiply the amp draw.

(i.e. 6 posts will collectively draw 18 amps).

**NOTE THAT THESE POSTS WILL NOT OPERATE AND CHARGE AT THE SAME TIME. REMOVE THE POWER LEADS TO THE CHARGER RECEPTACLE PRIOR TO LIFT USAGE.**

## **OPTIONAL EQUIPMENT**

Note: Refer to Option Equipment Section in the back of this manual for specific user instructions for option available for this lift.

The standard mobile lift is suitable to lift wheeled vehicles by the tires. It normally comes in pairs of columns totaling 2, 4, 6 or 8 column systems. Ordering additional **dummy plugs** and **power cables (if AC)** may enable one lift to be used in a variety of combinations simultaneously.

A **hand control pendant** is available and can be connected to any column.

For AC models, the standard power supply requirements for the MP-18 series mobile lifts is 208-230 VAC, 3 phase. Optional power supply configurations of **208-230 VAC, Single Phase** or **480 VAC, 3 Phase** or **575 VAC, 3 Phase** are available upon request. Note: Refer to Power Supply Requirements section in this manual for availability with respect to post configurations.

If it is desired to raise the vehicle by the frame, this can be done by using optional **chassis lifting beams** or optional **frame contact adapters**. The chassis lift beam fits into the cradle where the tire would normally fit and spans between a pair of columns. Frame contact adapters convert a pair of mobile lift columns into a 2-column frame engaging lift. Refer to the ANSI standard "Vehicle Lift Points for Service Garage Lifting," ANSI/SAE J2184-Oct92, safety manual "Lifting it Right," ALI/SM01, and "Vehicle Lifting Points Guide" ALI/LP-Guide for proper positioning of vehicles on lift.

If it is desired to raise fork trucks, a **fork truck adapter kit** is available, which converts a pair of mobile lift columns into a 2-column pad engaging lift.

For lifting applications involving side wing plows or RV's with side extensions, where the forks of the mobile lifts can not reach to the tires, **wing plow adapters** are available. These adapters span between a pair of columns to achieve engagement of the tires in the same manner of the column forks.

For lifting of vehicles with dual tires, floatation tires, or "super singles", **longer forks** are available. Note that the longer fork lifts have reduced capacity.

**Jack Stands** are also available that support the vehicle in the raised position for maintenance or to permit using the lift for other vehicles.

### **NOTE:**

The use of any adapters on this lift may reduce the capacity of this lift. Refer to the capacities of the adapters used.

## **WARNING!**

Use only options manufactured by MOHAWK RESOURCES LTD with this lift. Options manufactured by others and used on this lift may result in bodily harm, damage to lift and other equipment, and will void lift warranty, Mohawk Resources Ltd liability, and the ALI certification of the lift.



MP-18 SERIES POST SPECIFICATIONS:

- CAPACITY:

18,000 LB EACH
- STROKE:

67 INCHES
- LIFTING SPEED:

67 SECONDS
- POWER REQUIRED:

208 VAC, 3Ø STD
- AMPS:

VARIABLE - SEE POST QTY
- POST QUANTITY:

2, 4, 6 OR 8
- MAX TIRE SIZE:


48 INCH DIA
- FORK LENGTH:

15 INCH
- FORK WIDTH:

10 INCH MIN, 22 1/2 MAX
- LOCK POSITIONS:

3" INTERVALS STARTING @ 12"


15" FORKS

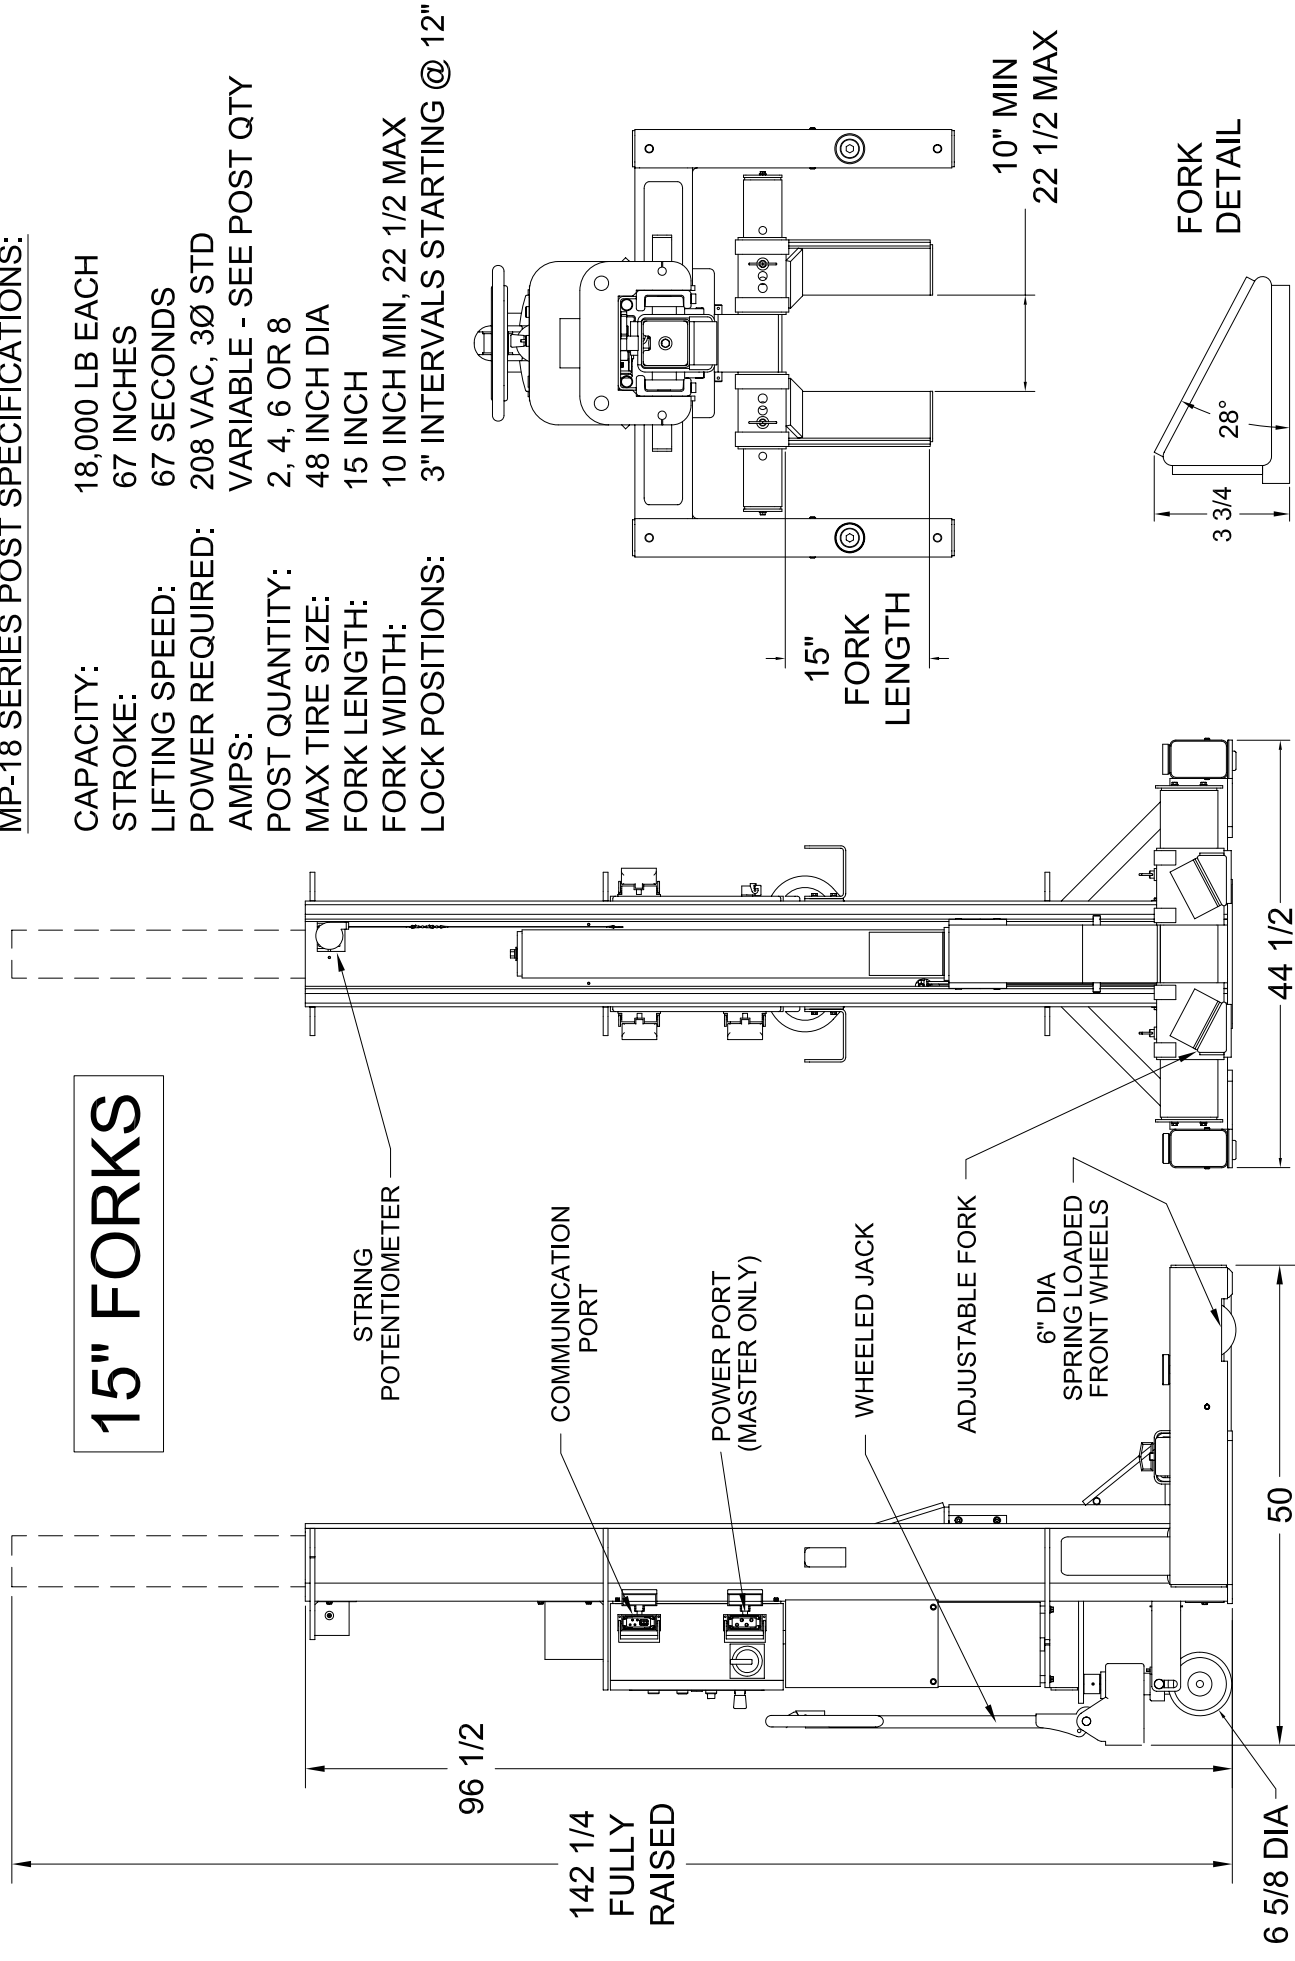

NOTICE OF CONFIDENTIAL INFORMATION		NOTES:		TOLERANCES:		SCALE		DRAWN		MOHAWK RESOURCES LTD.			
INFORMATION CONTAINED HEREIN IS CONFIDENTIAL AND PROPERTY OF MOHAWK RESOURCES LTD. WHERE DRAWING IS FURNISHED TO OTHERS IT SHALL BE USED SOLELY FOR PURPOSES OF INSPECTION, INSTALLATION, OR MAINTENANCE. THE INFORMATION SHALL NOT BE USED OR DISCLOSED BY THE RECIPIENT FOR ANY OTHER PURPOSES WHATSOEVER.		1. REMOVE ALL SHARP CORNERS & EDGES.		ANGULAR ± 1°		0.1		rww7089		TITLE Mobile Post Lift Post Specifications, 15" Forks DRAWING NUMBER MP-0100-A-002			
		2. UNLESS OTHERWISE SPECIFIED, SURFACE FINISH TO BE 125 RMS.		FRACTIONAL ± .030		CHECKED		APPROVED					
		3. WELDING MEDIUM SHALL CONFORM TO AWS SPECIFICATIONS TO E-70XX ELECTRODES OR E-70T1 CODE 5.3 FLUX CORE WIRE ONLY.		DECIMAL ± .000		DATE 8/3/2005		WEIGHT 1410					
FILE NAME MP-0100-A-002		NEXT ASSEMBLY		FROM N/A		LB.							

MP-18 SERIES POST SPECIFICATIONS:

- CAPACITY: 16,000 LB EACH  
STROKE: 67 INCHES  
LIFTING SPEED: 67 SECONDS  
POWER REQUIRED: 208 VAC, 3Ø STD  
AMPS: VARIABLE - SEE POST QTY  
POST QUANTITY: 2, 4, 6 OR 8  
MAX TIRE SIZE: 48 INCH DIA  
FORK LENGTH: 22 INCH  
FORK WIDTH: 6 3/4 INCH MIN, 19 1/2 INCH MAX  
LOCK SPACING: 3" INTERVALS STARTING @ 12"

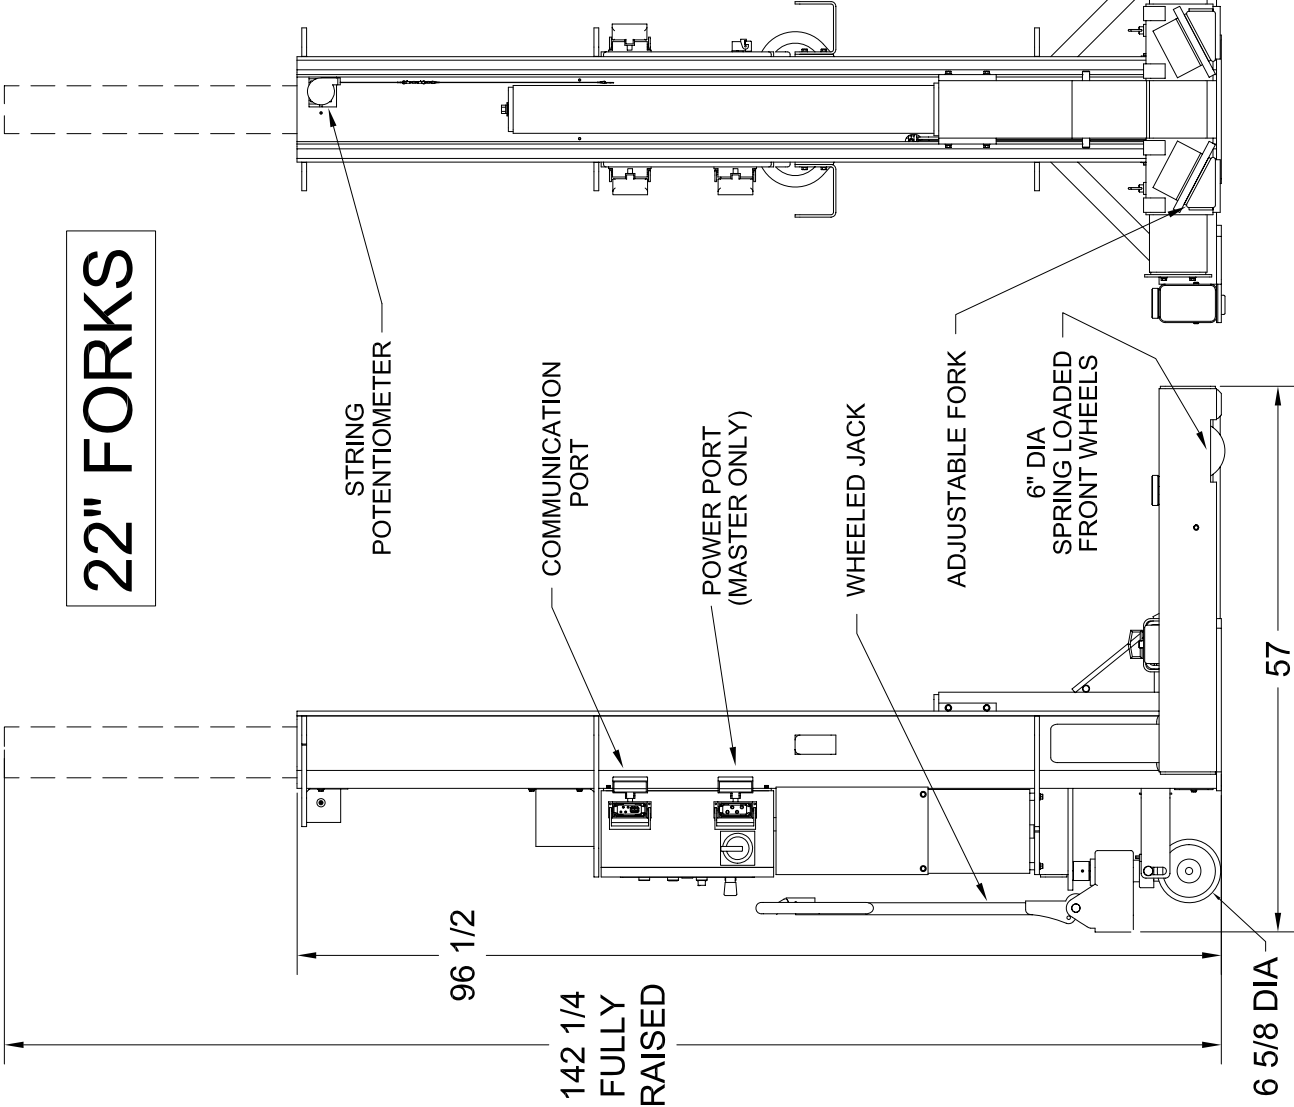

22" FORKS

STRING  
POTENTIOMETER

COMMUNICATION  
PORT

POWER PORT  
(MASTER ONLY)

WHEELED JACK

ADJUSTABLE FORK

6" DIA  
SPRING LOADED  
FRONT WHEELS

FORK  
DETAIL

C-SIZE

NOTICE OF CONFIDENTIAL INFORMATION

INFORMATION CONTAINED HEREIN IS CONFIDENTIAL AND PROPERTY OF MOHAWK RESOURCES LTD.. WHERE DRAWING IS FURNISHED TO OTHERS IT SHALL BE USED SOLELY FOR PURPOSES OF INSPECTION, INSTALLATION, OR MAINTENANCE OF THE EQUIPMENT DESCRIBED HEREIN AND NOT FOR ANY OTHER PURPOSES WITHOUT THE WRITTEN CONSENT OF MOHAWK RESOURCES LTD..

- NOTES:
1. REMOVE ALL SHARP CORNERS & EDGES.
  2. UNLESS OTHERWISE SPECIFIED, SURFACE FINISH TO BE 125 RMS.
  3. WELDING MEDIUM SHALL CONFORM TO AWS SPECIFICATIONS TO E-70XX ELECTRODES OR E-70TT CODE 5.3 FLUX CORE WIRE ONLY.

TOLERANCES:  
ANGULAR ± 1°  
FRACTIONAL ± .030  
DECIMAL ± .030  
XXX ± .005  
FILE NAME  
MP-0100-A-003

NEXT ASSEMBLY

SCALE	CHECKED	DATE	WEIGHT	FROM	DRAWING NUMBER
0.1		9/12/2005	1475	N/A	MP-0100-A-003

DRAWN	APPROVED
rw7089	


TITLE	FROM
Mobile Post Lift Post Specifications, 22" Forks	N/A

MOHAWK RESOURCES LTD.
-----------------------

# 24 VDC 15" FORKS

## MP-18 (24 VDC) SERIES POST SPECIFICATIONS:

- CAPACITY:  
STROKE:  
LIFTING SPEED:  
POWER REQUIRED:  
BATTERY SPEC:  
POST QUANTITY:  
MAX TIRE SIZE:  
FORK LENGTH:  
FORK WIDTH:  
LOCK POSITIONS:
- 18,000 LB EACH  
67 INCHES  
90 SECONDS (VARIES W/ LOAD)  
120 VAC, 4 AMPS PER POST  
(FOR CHARGING BATTERIES)  
(2) 12 VDC DEEP CYCLE  
SEALED - MAINTENANCE FREE  
2, 4, 6 OR 8  
48 INCH DIA  
15 INCH  
11 1/2 INCH MIN, 24 1/4 MAX  
19 POSITIONS @ 3" INTERVALS  
STARTING @ 12"

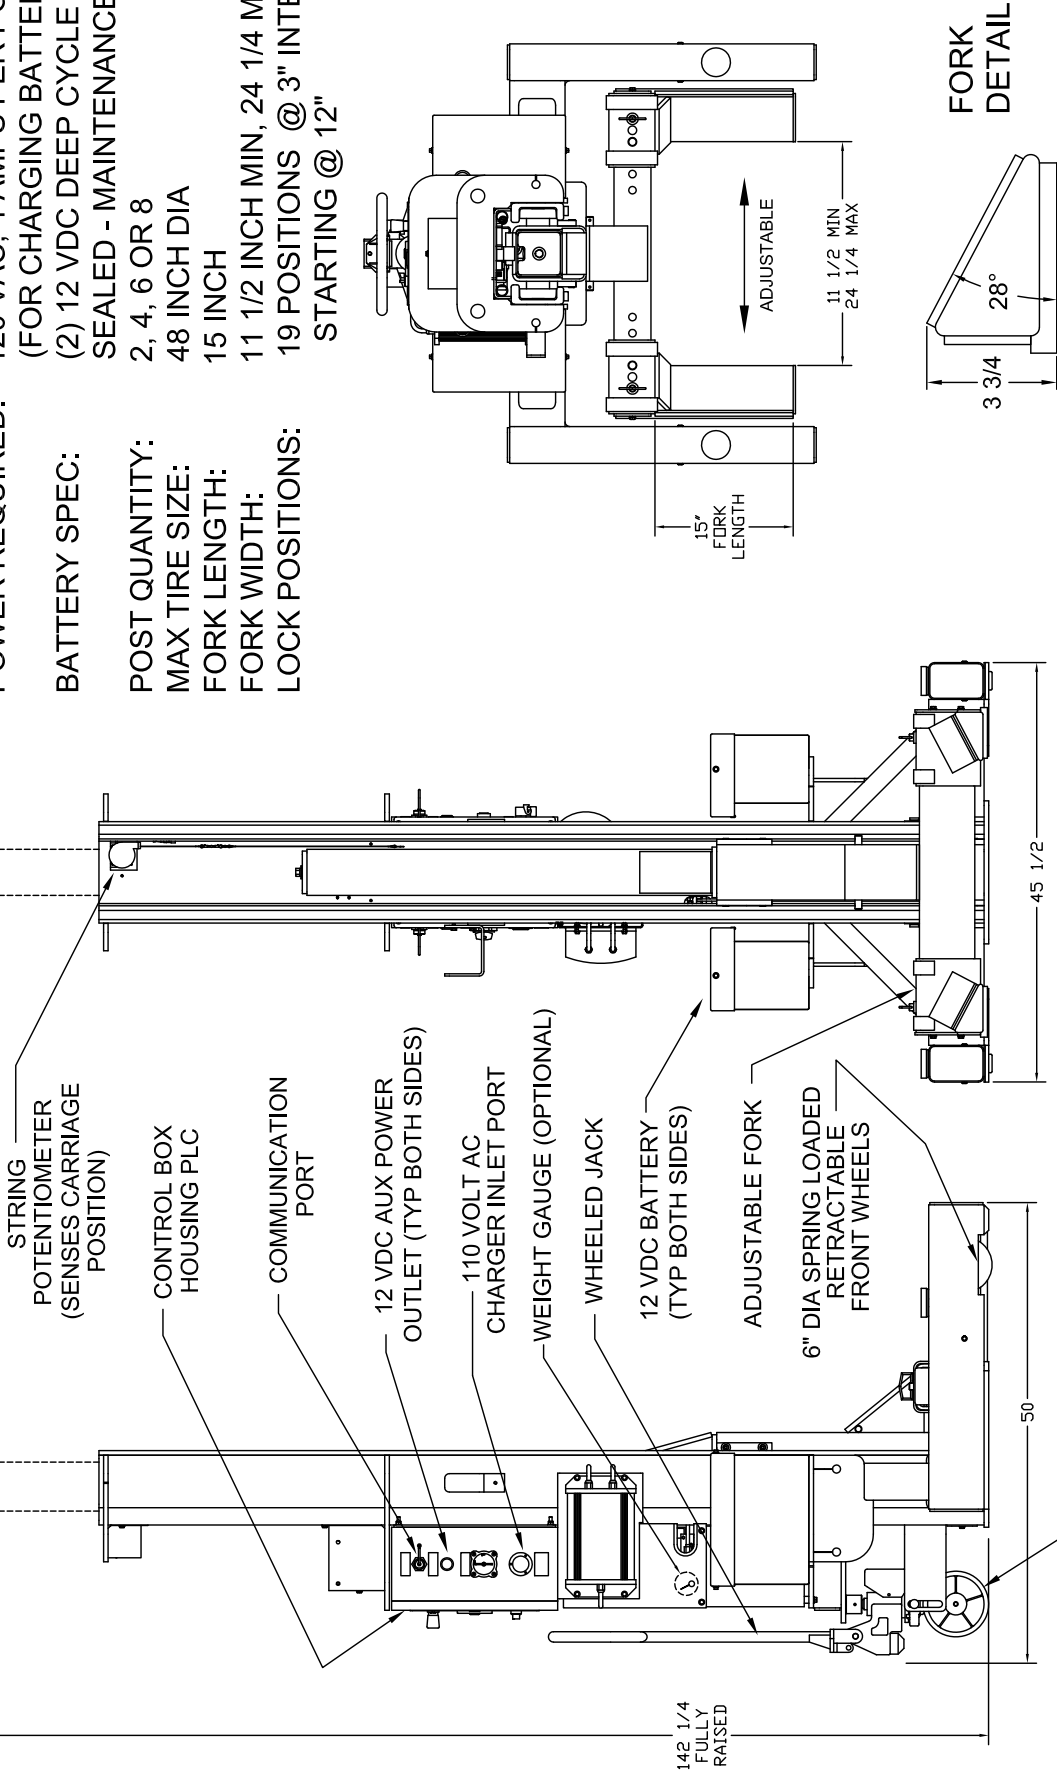

C-SIZE

### NOTICE OF CONFIDENTIAL INFORMATION


INFORMATION CONTAINED HEREIN IS CONFIDENTIAL AND PROPERTY OF MOHAWK RESOURCES LTD. IT SHALL BE USED SOLELY FOR PURPOSES OF INSPECTION, INSTALLATION, OR MAINTENANCE. THE INFORMATION SHALL NOT BE USED OR DISCLOSED BY THE RECIPIENT FOR ANY OTHER PURPOSES WHATSOEVER.

- NOTES:
1. REMOVE ALL SHARP CORNERS & EDGES.
  2. UNLESS OTHERWISE SPECIFIED, SURFACE FINISH TO BE 125 RMS.
  3. WELDING MEDIUM SHALL CONFORM TO AWS SPECIFICATIONS TO E-70XX ELECTRODES OR E-70T1 CODE 5.3 FLUX CORE WIRE ONLY.

TOLERANCES:	
ANGULAR	± 1.0
DECIMAL	± .030
XXX	± .030
XXXX	± .005
FILE NAME	MP-5400-A-002.dwg


SCALE	N/A	DRAWN	FWV7089	MOHAWK RESOURCES LTD.	
CHECKED		APPROVED		TITLE MP-18 (24VDC) w/15" Forks	
DATE		WEIGHT	L.B.	Specification Drawing	
NEXT ASSEMBLY		DRAWING NUMBER	MP-5400-A-002		

24 VDC  
22" FORKS  
(WIDER)

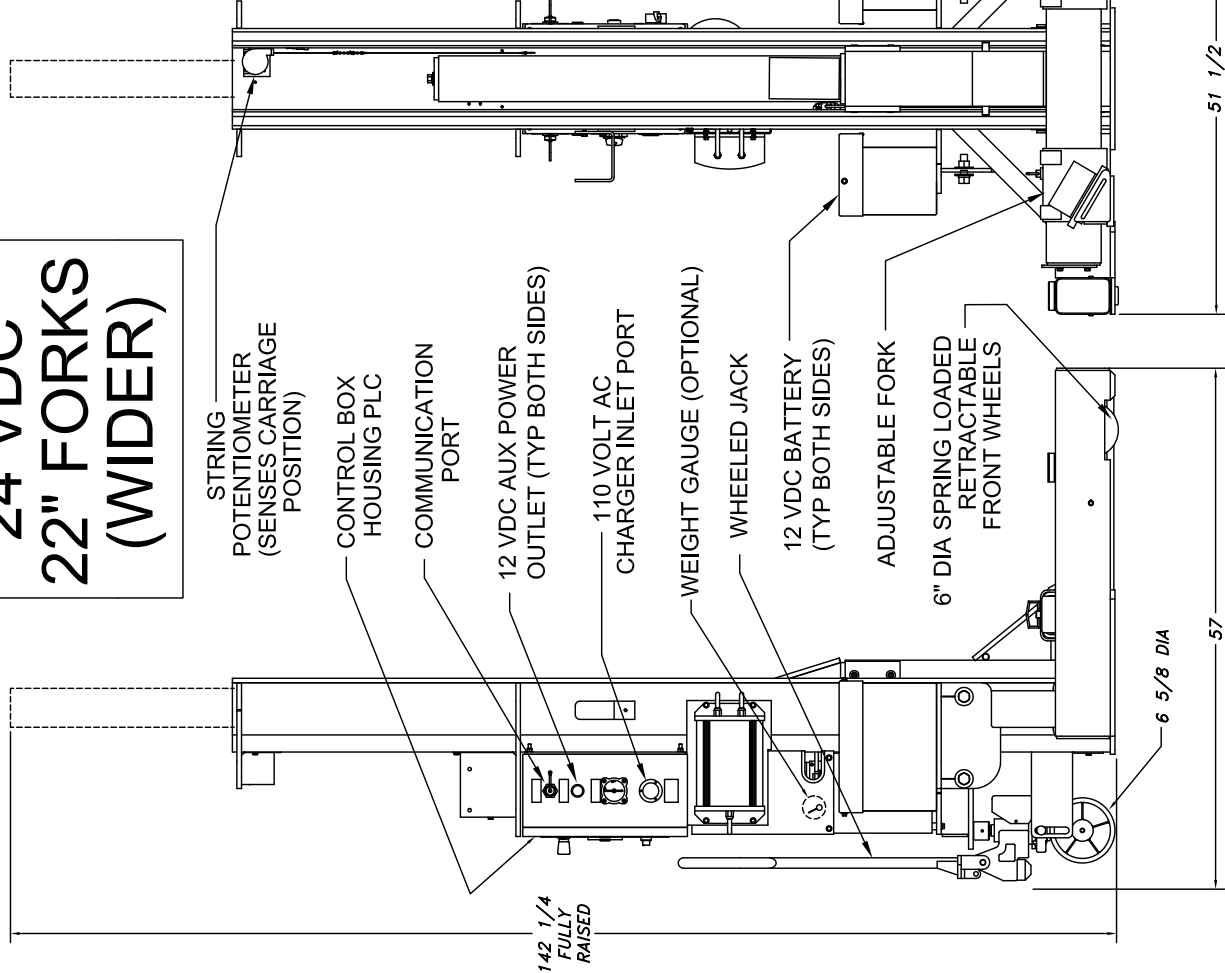

MP-18 (24 VDC) SERIES POST SPECIFICATIONS:

- CAPACITY: 16,000 LB EACH  
STROKE: 67 INCHES  
LIFTING SPEED: 90 SECONDS (VARIES W/LOAD)  
POWER REQUIRED: 120 VAC, 4 AMPS PER POST (FOR CHARGING BATTERIES)  
BATTERY SPEC: (2) 12 VDC DEEP CYCLE  
SEALED - MAINTENANCE FREE  
POST QUANTITY: 2, 4, 6 OR 8  
MAX TIRE SIZE: 53 INCH DIA  
FORK LENGTH: 22 INCH  
FORK WIDTH: 9 3/4 INCH MIN, 26" MAX  
LOCK POSITIONS: 19 POSITIONS @ 3" INTERVALS STARTING @ 12"

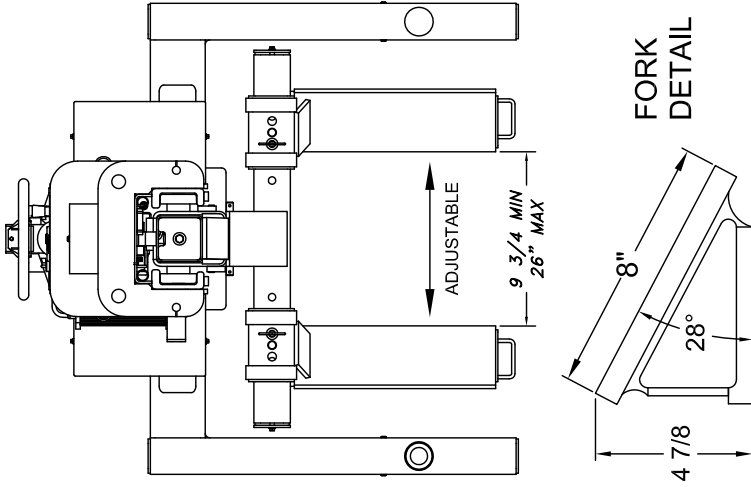

C-size

NOTICE OF CONFIDENTIAL INFORMATION

INFORMATION CONTAINED HEREIN IS CONFIDENTIAL AND PROPERTY OF MOHAWK RESOURCES LTD., WHERE DRAWING IS FURNISHED TO OTHERS IT SHALL BE USED SOLELY FOR PURPOSES OF INSPECTION, INSTALLATION, REPAIR, MAINTENANCE, OR FOR INFORMATION NOT TO BE DISCLOSED BY THE RECIPIENT FOR ANY OTHER PURPOSES WHATSOEVER.

- NOTES:
1. REMOVE ALL SHARP CORNERS & EDGES, UNLESS OTHERWISE SPECIFIED, SURFACE FINISH TO BE 125 RMS.
  2. FINISH TO BE 125 RMS.
  3. WELDING MEDIUM SHALL CONFORM TO AWS SPECIFICATIONS TO E-70XX ELECTRODES OR E-70T1 CODE 53 FLUX CORE WIRE ONLY.

TOLERANCES:
ANGULAR ± 1.0°
FRACTIONAL ± .030
DECIMAL ± .030
0.XXX ± .005
FILE NAME
MP-5400-A-016.dwg

SCALE	N/A
CHECKED	
DATE	
NEXT ASSEMBLY	

DRAWN	rw7089	MOHAWK RESOURCES LTD.
APPROVED		TITLE MP-18 (24VDC) w/22" Forks
WEIGHT	LB.	Specification Drawing
FROM	n/a	DRAWING NUMBER
		MP-5400-A-016

# DESIGN AND CONSTRUCTION

The standard mobile lift is suitable to lift wheeled vehicles by the tires. It normally comes in pairs of columns totaling 2, 4, 6 or 8 column systems. Each column consists of a rigid frame of three-wheel design for maneuverability, lifting carriages with tire forks, control panel, electric-hydraulic power unit, and hydraulic cylinder.

Two of the wheels are spring loaded and in fixed positions on the column base. The third wheel is steerable and hydraulically operated, permitting movement of the unloaded columns, but allowing the column to sit firmly on the floor before a load is applied.

For DC Models that use battery power, each post is identical except for post identification (Post ID), and each has communication outlets to attach to the other posts, forming configurations from 2 posts all the way up to 8 posts (see lift setup).

For AC Models, any single Master Column (#1, #3, #5 or #7) accepts the incoming electrical supply to the Master Column Panel and has electrical outlets for the remaining columns. **Only one incoming power supply is to be used.**

When the lift is raised or lowered in the “synchronized” mode the actual movement of each carriage is counted by each post’s PLC (programmed logic controller). If the movement of any carriage exceeds that of any other carriage in the system, the carriage is slowed down or stopped until the others catch up.

Each post houses the same controls, enabling the user to control the whole lift, a single post or a post-pair combo at any post desired. Post Pairs are designated as Post #1&2, #3&4, #5&6 and #7&8, regardless of where they are physically placed in the system.

A hydraulic cylinder, powered by an electric-hydraulic pump unit, controls the carriage movement. There is an internal relief valve on the pump unit, which prevents overloading of the carriage.

A separate automatically engaging back-up mechanical safety lock latch prevents lowering of the carriage in the event of failure of the hydraulic system.

All movement controls are of the “vigilance control” type which are operable only as long as the operator is depressing the button. As soon as the button is released the command for motion will stop.

All columns have controls for synchronized or individual column movement, plus an “Emergency Stop”.

Depressing the Emergency Stop button will stop all columns immediately and will not permit any column movement until the depressed button is reset.


# MOBILE LIFT SET-UP

THOROUGHLY READ THIS SECTION BEFORE OPERATING THE LIFT. IF YOU HAVE ANY QUESTIONS GET THEM ANSWERED BEFORE PROCEEDING. REFER TO ANSI/ALI ALIS “SAFETY REQUIREMENTS FOR INSTALLATION AND SERVICE OF AUTOMOTIVE LIFTS.”


1. Be sure that the floor is strong enough to support the lift before operating. Do not use the lift on asphalt surfaces, as the lift will sink (cause depressions in the asphalt) if the vehicle is on the lift for any extended period of time. Minimum recommended flooring is 4 ½” thick concrete with 3000 psi compressive strength on grade.

If it is necessary to use the lift on an asphalt surface, it is recommended to use a steel plate, a minimum thickness of 3/8” (8mm) which extends a minimum of 6” on all sides beyond the support points of the base of the lift. This will minimize sinking effect if the vehicle is raised for an extended period of time.

2. Be sure that the surface of the floor is relatively flat. If there is a slope of more than 3 degrees (1 inch decline over 20”) do not operate the lift. Relocate to a flatter surface.
3. Verify adequate ceiling clearance to raise the vehicle without the top of the vehicle coming in contact with any obstruction. If necessary, measure the lowest point to determine how high you can raise the vehicle. Minimum height required is tallest vehicle height plus 67”
4. Drive the vehicle to the working spot. Do not drive the vehicle over the cables of the lift. The cables should be arranged in a “U” shape around the entry of the vehicle or the cables should be disconnected and stored before moving the vehicle.
5. Ensure posts pairs are opposite each other at each axle (Post Pairs are 1&2, 3&4, 5&6, 7&8). Push the cradle forks of each post around each tire. Be sure to push them in as far as possible. The wheel rim should be larger than the opening in between the forks. The posts should be centered with the tires, avoiding any offset loading of the posts. See figure below. Ensure that fork pins are placed in holes at fork tubes.

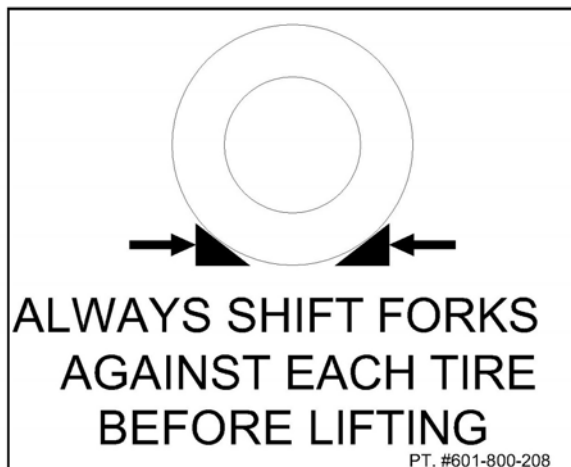

6. Press the release lever to lower all jacking wheels on back of all posts after positioning.
7. Connect the communication cables from post to post in a daisy-chain fashion. For example: Posts 1 to 3 to 4 to 2 for a 4-post setup. Place dummy plugs (one red and one yellow if AC unit) at the posts at the end of the chain. (See figure below) Note: this lift will not power up or function properly unless all communication cables and both dummy plugs are connected.

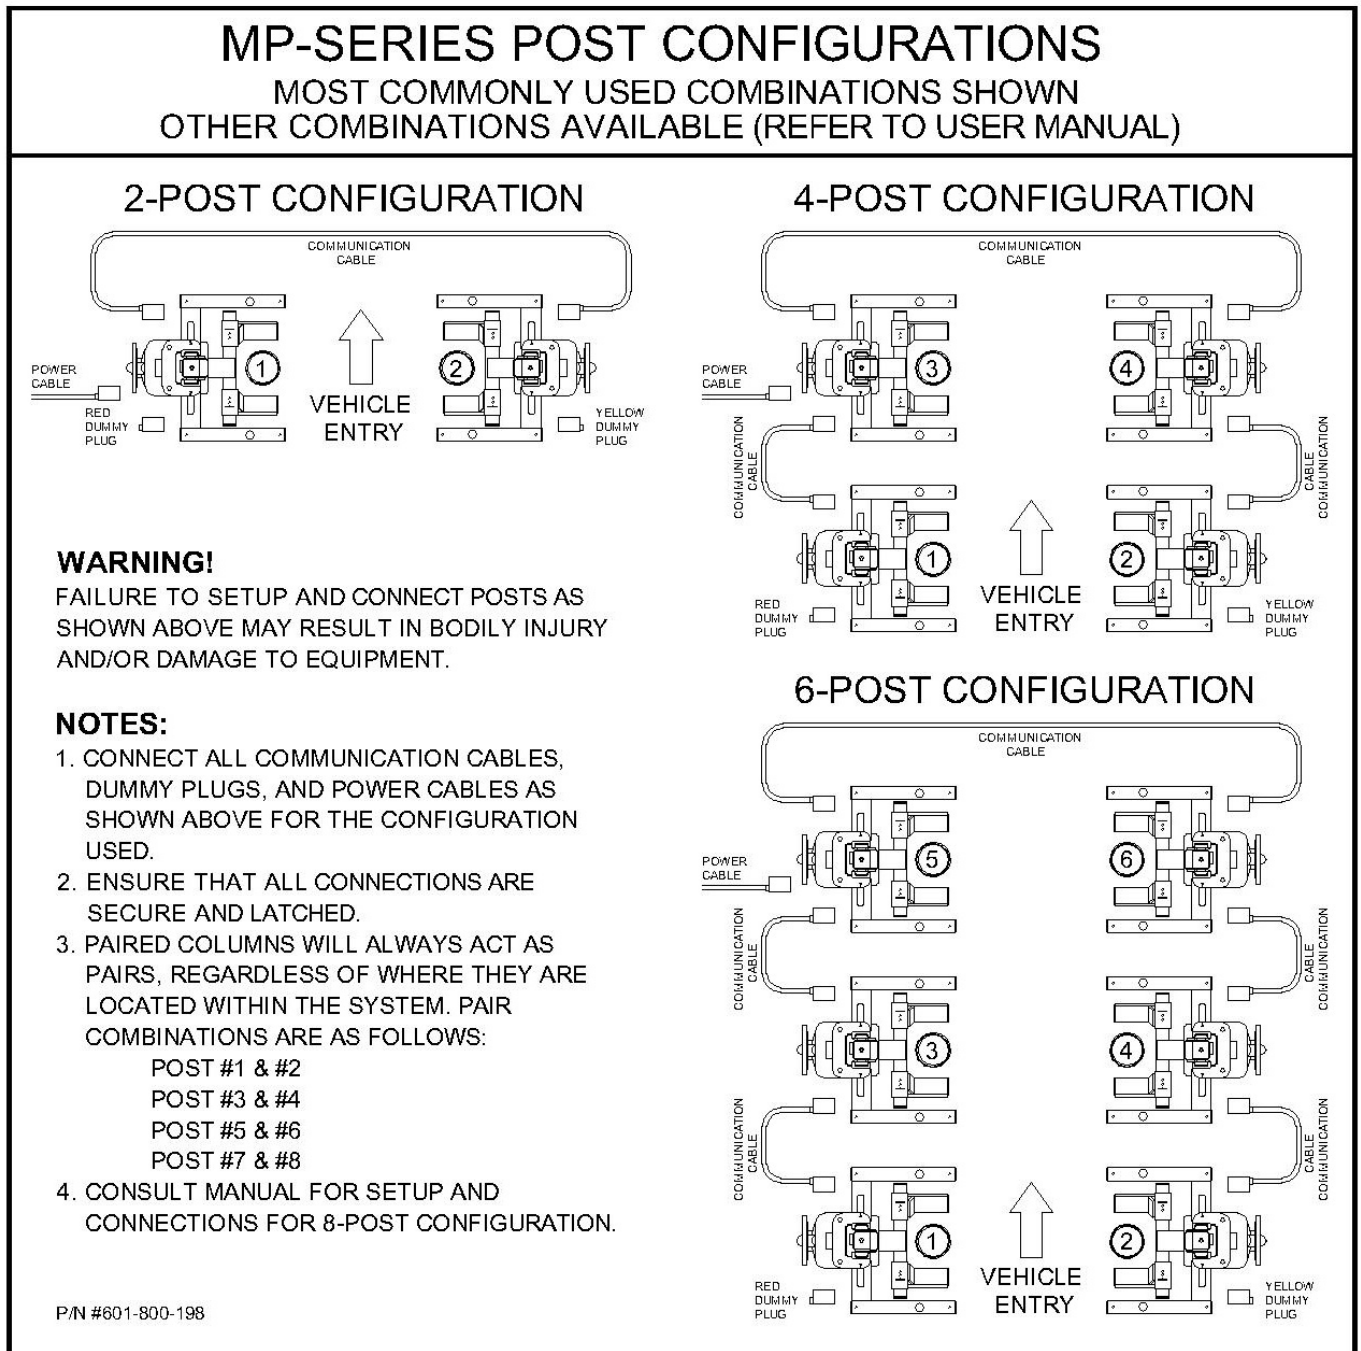

8. IF AC Lift, connect the power cable to the appropriate master column. (See figure above)
9. IF DC, unplug all power leads to chargers on all posts.

# MOBILE LIFT OPERATION

1. Perform Lift Setup as stated in previous section.
2. Disengage all E-STOP buttons at each post by turning them clockwise to release them. If AC Lift, turn on the main switch to the lift at the powered column (column that has the main power cable connected to it). If DC Lift, each individual lift column will need to be turned on.
3. Notice that the displays will indicate which posts are communicating in the system. Verify this configuration to continue operation. The system is now ready to operate.

## 4. **SINGLE WHEEL OPERATION**

Go to each wheel and engage each tire with the forks. To raise only a single wheel, turn the selector switch to SINGLE at the post that control is desired, while pressing the RAISE button. The SINGLE operation is to be used only to initially engage the tires and for slight equalization adjustments.

During lift operation, if single wheel lifting, lowering or parking is desired, turn the selector switch to SINGLE at the post that control is desired, while pressing the RAISE button.

**BE VERY CAREFUL WHEN DOING THIS OPERATION THAT THE VEHICLE REMAINS STABLE AND THAT THE SIDE OF THE VEHICLE DOES NOT COME IN CONTACT WITH THE COLUMN.**

NOTE: If the SINGLE switch is released while the UP or DOWN button is still pressed the hoist will operate in default ALL synchronized mode (All posts will be controlled).

## 5. **RAISING ALL WHEELS**

This lift controls default to controlling ALL the columns in the system (selector switch is spring returned to ALL). Press the RAISE button to raise the lift. Keep the pressure on the button until the vehicle is raised to the desired position. If necessary, use a second person to observe the area not seen by the operator.

## 6. **PARKING ALL WHEELS (ON MECHANICAL LOCKS)**

This lift controls default to controlling ALL the columns in the system. Press the PARK button to lower the lift onto the mechanical locks. Keep the pressure on the button until the vehicle is completely lowered onto the locks. If necessary, use a second person to observe the area not seen by the operator.

## 7. **LOWERING ALL WHEELS**

This lift controls default to controlling ALL the columns in the system. Press the LOWER button to lower the lift. Keep the pressure on the button until the vehicle is lowered to the desired position. If necessary, use a second person to observe the area not seen by the operator.

NOTE: If lift in park position (on mechanical locks), you will have to raise lift off of locks first, then lower. Lift will not automatically rise off of lock when pressing lower.



**NOTE:** IF FOR ANY REASON, THE LIFT BECOMES INOPERATIVE IN THE RAISED POSITION WITH A VEHICLE ON IT, CONTACT YOUR LOCAL MOHAWK REPRESENTATIVE OR THE MOHAWK FACTORY.

## 8. **PAIR OPERATION**

To raise, lower or park only a pair of wheels, turn the selector switch to PAIR at the post pair that control is desired, while pressing the RAISE, LOWER or PARK button.

NOTE: Be sure that the set of wheels on the ground is free to move as the effective distance between the front and rear wheels becomes less as one pair of wheels is higher or lower than the other pair. Keep the height difference between pairs as low as practical.

NOTE: If the PAIR switch is released while the UP or DOWN button is still pressed the hoist will operate in default ALL synchronized mode (All posts will be controlled).

## 9. **RESET OPERATION (if needed)**

To re-establish a respective post-to-post synchronized state of the lift (whether all carriages are perfectly level with each other or not), press and hold the RESET button for 15 seconds. The system will then think that all posts are level with each other in the relative state that they are in. This feature is often used after major SINGLE and PAIR operations have altered the synchronized state and the user wishes to re-establish level condition. This feature is also used to turn off faults.

## **LIFTING EXAMPLE:**

Now that all the setup and operations instructions have been presented, an example of a typical lifting application is shown using an DC unit:

A mechanic is to perform maintenance on a school bus. He drives the vehicle into the bay. He then unplugs any power cables to the charger inlets on all of the posts to be used. He jacks each post with the pallet jack and moves them to each of the tires in the post configuration shown in the setup diagram. Pushing the posts firmly against the tires, he checks to ensure that the forks are slid inward as far as possible to engage the tires. He presses the pallet jack release on each column. He then connects the communication cables and dummy plugs to all the posts as shown in the setup diagram.

He is now ready to use the lift. He turns the main switch to "Operate Lift" and releases the E-Stop Button on each post of the system. Once this is done, all the displays should illuminate. He reads the post communication screen to verify that all the columns are present and accounted for on the display. He presses the appropriate button on the screen to verify the post set-up. The lift system is now ready to operate.

The mechanic then goes to each post and presses UP and SINGLE for a short moment to engage each tire with the forks until the spring loaded wheels of the post retract and the post feet are flattened on the floor. (The SINGLE function is to be used for slight adjustments and to initially engage the tires ONLY). The mechanic then presses UP and raises the vehicle to the desired height. Then the PARK button is pressed and held until the vehicle stops on the mechanical locks.

The mechanic is now able to work on the vehicle. Once done, he presses UP to lift the vehicle off of the mechanical locks. The DOWN button is pressed to lower the lift to the ground. If any adjustments were made (like SINGLE or PAIR) which made the lift level vary from the floor level, the lift may experience a fault when lowered to the floor. Pressing RESET will clear this fault and allow further lowering. Also, reversing the adjustments by pressing SINGLE or PAIR will allow the user to lower the lift fully to the floor.

Once vehicle is fully lowered, cables are stored and posts are jacked up and pulled away.

**LIFT FINAL CHECKOUT (AFTER INSTALLATION):**  
**REV (9/1/2012)**

**THIS PROCEDURE OUTLINES THE FINAL CHECKS TO MAKE AFTER INITIAL INSTALLATION OF THE LIFT UNIT.**

**REPEAT THIS PROCEDURE IF THE LIFT IS RELOCATED.**

**AFTER THE LIFT IS FULLY ASSEMBLED, RAISE THE LIFT EMPTY A FEW TIMES TO VERIFY:**

- PROPER POWER INPUT TO ALL POSTS (NOT APPLICABLE TO DC COLUMNS)
- PROPER COMMUNICATION OF ALL POSTS IN SYSTEM
- POST RECOGNITION OF ALL POSTS IN SYSTEM
- ALL POSTS RAISING SMOOTHLY AND ALL SYNCHRONIZED
- NO LEAKS PRESENT AT ANY FITTING JUNCTIONS
- LOCKS ARE ENGAGING ON ALL POSTS SIMULTANEOUSLY AS LIFT IS RAISING
- LOCKS ARE DIS-ENGAGING ON ALL POSTS WHEN LOWERING BUTTON DEPRESSED.
- LOCKS ARE RE-ENGAGING AFTER DIS-ENGAGED.
- LIFT IS NOT DRIFTING DOWN WHEN RAISED (RAISE LIFT, THEN STOP, AND VERIFY DRIFT DOWN OF CYLINDERS)
- NO VIBRATIONS FROM LOOSE CLAMPING, ETC.

ONCE THIS IS COMPLETE, LOCATE A REPRESENTATIVE VEHICLE INTO THE LIFTING AREA.

USE A VEHICLE THAT WEIGHS AT LEAST 50 PERCENT OF THE CAPACITY OF THE LIFT.

OBSERVING LIFTING PROCEDURES CONTAINED IN THIS MANUAL TO POSITION THE VEHICLE ONTO THE LIFT.

**RAISE LIFT APPROXIMATELY 1 FOOT. VERIFY THE FOLLOWING:**

- ALL POSTS RAISING SMOOTHLY AND ALL SYNCHRONIZED
- NO LEAKS PRESENT AT ANY FITTING JUNCTIONS
- LOCKS ARE ENGAGING ON ALL POSTS SIMULTANEOUSLY AS LIFT IS RAISING (SOME VARIANCE EXPECTED)
- LIFT IS NOT DRIFTING DOWN WHEN RAISED (RAISE LIFT, THEN STOP, AND VERIFY DRIFT DOWN OF CYLINDERS)
- NO VIBRATIONS FROM LOOSE CLAMPING, ETC.

**PRESS PARK. VERIFY THE FOLLOWING:**

- ALL POSTS LOWERING ONTO LOCKS

**RAISE LIFT A FEW INCHES, THEN PRESS LOWER. VERIFY THE FOLLOWING:**

- ALL POSTS LOWERING SMOOTHLY AND ALL SYNCHRONIZED
- NO LEAKS PRESENT AT ANY FITTING JUNCTIONS
- NO VIBRATIONS FROM LOOSE CLAMPING, ETC.
- LOCKS ARE NOT RE-ENGAGING WHILE LOWERING

**RAISE LIFT TO FULL STROKE. VERIFY THE FOLLOWING:**

- ALL POSTS RAISING SMOOTHLY AND ALL SYNCHRONIZED
- NO LEAKS PRESENT AT ANY FITTING JUNCTIONS
- LOCKS ARE ENGAGING ON ALL POSTS SIMULTANEOUSLY AS LIFT IS RAISING (SOME VARIANCE EXPECTED)
- LIFT IS NOT DRIFTING DOWN WHEN RAISED (RAISE LIFT, THEN STOP, AND VERIFY DRIFT DOWN OF CYLINDERS)
- NO VIBRATIONS FROM LOOSE CLAMPING, ETC.

**LOWER LIFT ONTO LOCKS. VERIFY THE FOLLOWING:**

- ALL LOCKS ARE ENGAGING UPON DESCENT
- PROPER SYNCHRONIZATION OF TRACKS

**RAISE LIFT 3 INCHES, THEN LOWER VEHICLE TO FLOOR. VERIFY THE FOLLOWING:**

- ALL POSTS LOWERING SMOOTHLY AND ALL SYNCHRONIZED
- NO LEAKS PRESENT AT ANY FITTING JUNCTIONS
- NO VIBRATIONS FROM LOOSE CLAMPING, ETC.
- LOCKS ARE NOT RE-ENGAGING WHILE LOWERING

ENSURE THAT ALL MANUALS AND OTHER INSTRUCTIONAL MATERIALS ARE DELIVERED TO OWNER/USER/EMPLOYER.

ENSURE THAT USERS ARE INSTRUCTED IN THE SAFE AND PROPER USER OF THE LIFT.

**THIS ENDS THE FINAL CHECKOUT OF LIFT.**

File: Final Checkout MP-Series.doc

# AUTOMOTIVE LIFT SAFETY TIPS

Post these safety tips where they will be constant reminder to your lift operator.

For information specification to the lift, always refer to the lift manufacturer's manual

1. Inspects your lift daily. Never operates if it malfunctions or if it has broken or damaged parts. Repairs should be made with original equipment parts.
2. Operating controls are designed to close when released. Do not block open or override them.
3. Never overload your lift. Manufacturers rated capacity is shown on nameplate affixed to the lift.
4. Positioning of the vehicle and operation of the lift should be done only by trained and authorized personnel.
5. Never raise vehicle with anyone inside it. Customers or bystanders should not be in the lift. During operation.
6. Always keep lift area free of obstructions, grease, tools, trash and other debris.
7. Before driving vehicle in lift area, position arms and posts to provide unobstructed clearance. Do not hit or run over the lift arms, adapters, or axle supports. This could damage the lift or vehicle.
8. Load vehicle on lift carefully. Push the cradle forks of each post around each tire. Be sure to push them in as far as possible. The wheel rim should be larger than the opening in between the forks. The posts should be centered with the tires, avoiding any offset loading of the posts. Verify by raising lift until forks engage tires to ensure secure contact. Raise lift the desired working heights. CAUTION: if you are working under the vehicle, lift should be raised high enough for locking device to be engaged.
9. Note that with some vehicles, the removal (or installation) of components may cause a critical shift in the centre of gravity and results in raised vehicle instability. Refer to the vehicle manufacturer's service manual for recommended procedures when vehicle components are removed.
10. Before lowering lift, be sure tool trays, stands, etc. are removed from under the vehicle. Release locking devices before attempting to lower lift.
11. Before removing vehicle from lift area, position lift arms and supports to provide and unobstructed exit (refer back to No. 7)

These "Safety Tips" along with "Lifting it Right" a general lift safety manual, are presented as an industry service by the Automotive Lift Institute. For more information on this topic, writes to ALI, PO Box 85, Cortland, NY 13045

# MAINTENANCE INSTRUCTIONS

1. The channel sections where the carriage bearings ride against should be cleaned and lubricated twice a year (once every 6 months) using a light lubricant (WD-40). The channel sections where the slide blocks ride against should be cleaned and lubricated twice a year (once every 6 months) using a light lubricant (WD-40).
2. The main carriage bearings are factory lubricated and may require additional periodic lubrication. If additional lubrication is desired, it is recommended to use CAM2 – Multipurpose #2 Grease (Part No. 86035) or equivalent. Use approximately 2 oz. per bearing.
3. Weekly, or whenever the hoist is used after any extended down time, the power supply and communication cables should be checked to make sure that there are no nicks or cuts which may reduce or compromise the insulation. Use a de-greasing cleaner to clean all cables so they maintain their visibility (Ensure cables are disconnected when cleaning them and do not spray cleaner on end connections). Also, check visually the hydraulic line connections for leaks and tighten or repair as necessary.
4. The hydraulic fluid should be changed once every two years using new Dexron III ATF. Drain the reservoir tank only when the carriage is in the lowered position. Fill with 3.25 US gallons per reservoir.
5. Every three months check snap rings on wheels and carriage lock. Apply a light coating of lubricant to pins as needed (WD-40).
6. In case of electrical break down have qualified service personnel service the lift using only factory direct replacement parts.
7. Call your Distributor or Factory direct if you have any questions with regards to operating the lift or need of replacement parts.

## **NOTE:**

**ONLY TRAINED LIFT SERVICE PERSONNEL ARE PERMITTED TO REPLACE WORN OR BROKEN PARTS.**

**REPLACE FAULTY PARTS WITH GENUINE MOHAWK RESOURCES LTD. FACTORY DIRECT PARTS ONLY.**

# EXPLANATION OF ELECTRICAL SYSTEMS

## **AC Electrical Power System**

There are two types of columns with this system, master and slave. The only difference between them is that the master columns allow main power entry and main power control. Once the power is feed a master column, a low power 24 VAC signal is sent through the system to detect if the following conditions are met:

1. The main switch of the master column with the power cable connected is turn on.
2. All the communication cables are connected to all the columns in the system.
3. Both dummy plugs are connected at the ends of the system.

Once these conditions are met, the main power contactor at the powered master column is activated, allowing power distribution to all the columns in the system. Power is provided to all the PLCs (programmed logic controllers) in the system. Once the PLCs are powered, they “search” for each other, establishing a network for synchronizing and controlling the lift as a system.

## **DC Electrical Power System:**


All columns in this system are identical and need to be connected and individually turned on to be active within a lift system. Power is derived from (2) 12 VDC batteries in series, providing 24 VDC for each post. No power is transmitted from column to column, only communication.

Each post also comes provided with its own dual bank battery charger. An outlet on the side of the box is provided to power the battery charger. Power must be removed from the battery charger outlet to allow usage of the column. If power is present at the battery charger outlet, the post will not turn on. This is to prevent using the lift while it is charging, which could potentially damage the batteries and the charger.

# EXPLANATION OF TOUCHSCREEN COMPUTER SYSTEM

## SYSTEM ACTIVATION:

With respect to controls, all posts on this system are identical (on AC posts, there are master or slave columns, only difference being power feed). After the posts are connected as described in the lift setup, the lift is ready to be activated. As each post is turned on, they “search” for each other, establishing a shared network for synchronizing and controlling the lift as a system. For an AC unit, it is only necessary to power up the powered column. For a DC unit, it is necessary to turn on each individual column in the system.

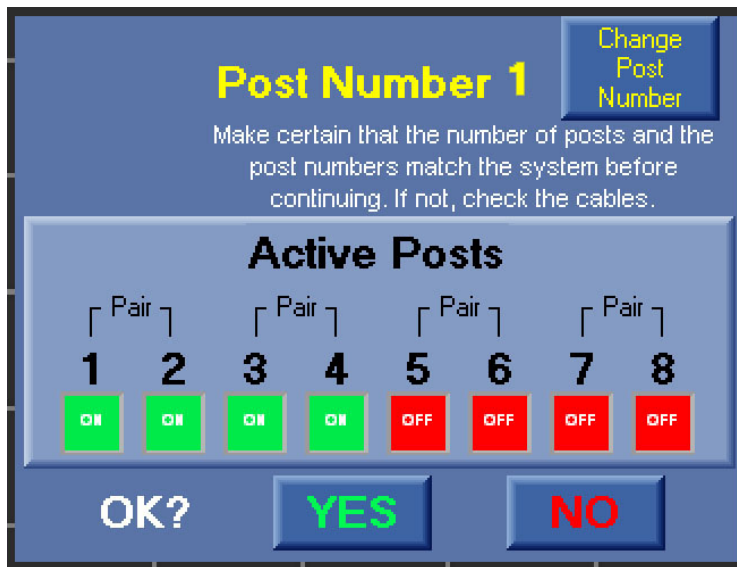


The first thing the user must do to operate the lift is to verify that the network is detecting the desired number of columns to use. Post presence will be affected by how many posts are connected in the system, if they are connected properly (see lift setup), if the dummy plugs are connected properly (see lift setup), and if they are turned on (to “Operate Lift”). Pressing “YES” will allow the user access to continue with the system usage.

Example Screen shows lift with 4 posts present in system, Post #1, #2,

#3, and #4. Pressing “YES” will allow user to continue.

## SYSTEM LOGIN:

After the post configuration is accepted, the Security Control screen will appear. The lift's password mode may either be "ENABLED" or "DISABLED", depending on Supervisor setup (described later in Supervisor Screens).

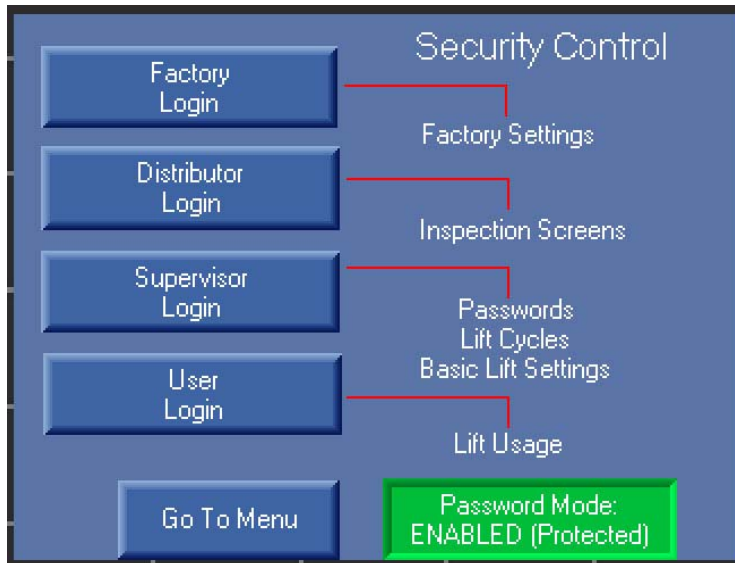


If it is displaying "ENABLED", the user will need to enter a password, depending on the level of security they wish to access the lift system. If it is just a normal user, a user login would be required. If it is factory personell trying to access factory settings, a factory login would be required. Supervisors would have their own login as well. All levels of login will obtain access to lift controls, but may not provide the same level of access to setting menus. Once login is accepted, press the "GO TO MENU" or any lift operational controls to continue.

If the screen is displaying "DISABLED", press the "GO TO MENU" or any lift operational controls to continue. No password is required.

## MAIN MENU:

Once the Main Menu is obtained, the user has various options. The user may access Factory, Supervisor, Maintenance, or Weight Display screens, or access the Security Level screen again. Some may not be accessible without the proper level of login clearance (i.e. the Factory Setup menus are only accessible after a factory login).

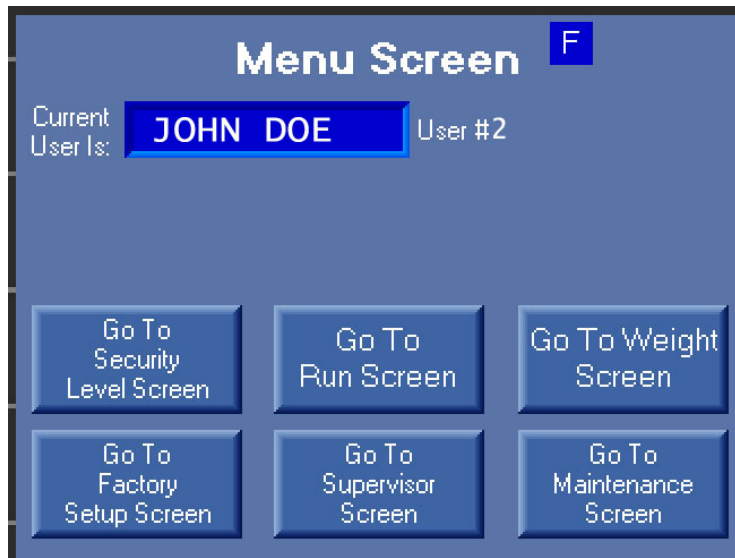

To operate the lift, the user may either press "GO TO RUN SCREEN" or press any operation control (Up, Down, or Unlock) and the lift will begin operating, and produce the Run Screen.

## OPERATION OF SYNCHRONIZED LIFTING OR LOWERING

Each PLC (programmable logic controller) is “addressed” which establishes its identity on the network. For example, post #1 has a PLC with address #1, etc. Once communication of the network of PLCs is established, each PLC senses control and position inputs from each other. **Be aware that pairs are designated as post #1&2, post #3&4, post #5&6, and post #7&8, regardless of where they are physically placed in the system.** Follow the setup diagram as shown on the lift column. (See Lift Setup)

The height of each carriage above floor level is measured by string potentiometers (see next section) and compared to the other carriages by the PLC network. During raising, if any one carriage position is higher than the lowest carriage, the higher (fastest) one slows down or stops to allow the lowest (slowest) one to catch up. During lowering, if any one carriage position is lower than the highest carriage, the lower one slows down or stops to allow the highest one to catch up. This is all done by shifting motor contactors and proportional solenoid valve.

When lifting in Pair or Single mode, relative counting is not done, resulting in the PLC’s seeing a “synchronized” state after this adjustment is made. There are limits on how far the lift will allow a Single post to raise/lower, and how far a Pair of posts can raise/lower relative to the rest of the system.


If you turn off the unit or press the Emergency Stop button, the computer position for each column is still retained and the columns will still maintain synchronized relative positions.

## FUNCTION OF STRING POTENTIOMETER (String-Pot)

There is a string potentiometer (string-pot) mounted on the top of each column, and connected to each carriage, which senses the movement of the carriage. The string-pot sends an absolute analog (4-20mA) signal to the PLC as the string is pulled in and out of the sensor. This signal is absolute, which means that the lift will always know the height of the lift, even when powered off and on again. This signal is directly translated into height position and can be witnessed by viewing the “Height in Inches” on the RUN SCREEN. If raising or lowering is not possible, manually pulling the string-pot cable, while the unit is powered and displaying the RUN SCREEN, will enable you to see the height changes, verifying functionality of the potentiometer.



## THE RUN SCREEN:

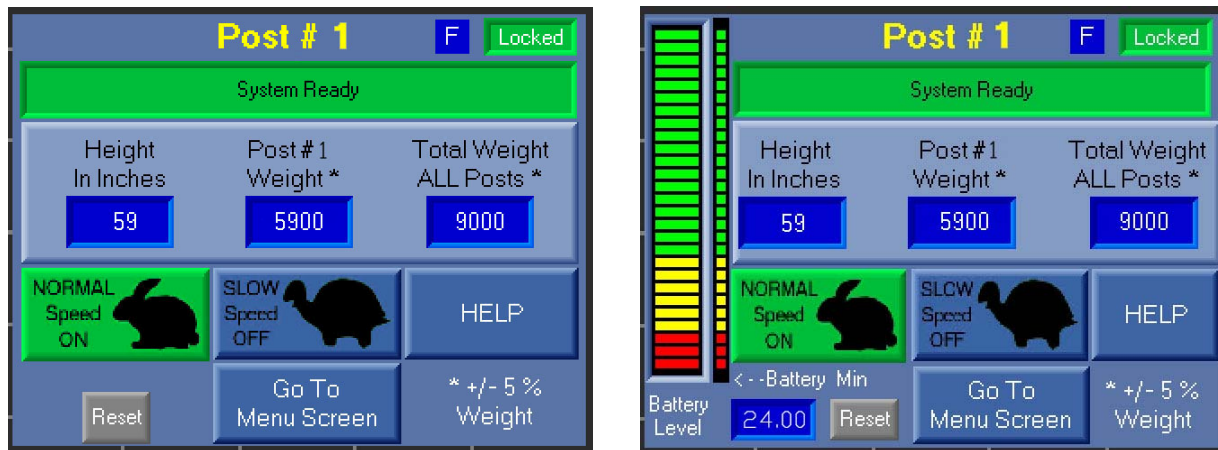

The RUN SCREEN displays a lot of information about the lift status.

**Post #** : Displays the post address of the viewed column.

**“Locked” (If present)**: If seen on top right, verifies that there is no hydraulic load on the lift. It is either fully lowered or fully lowered on mechanical locks.

**Battery Level Bars (on DC Units Only)**: Displays battery level of the individual 24 VDC column. Left Bar displays instantaneous voltage. Right Bar displays lowest batter level seen while running. When right bar is within yellow zone, lift is at a warning stage and should be charged. When right bar reaches red zone, lift will not operate until fully charged.

**“Battery Level” (on DC Units Only)**: Displays the instantaneous voltage for the individual 24 VDC column.

**“System Ready”**: Will display errors/faults on this banner if present.

**“Height in Inches”**: Will display the current post height in inches.

**“Post # XX Weight”**: Will display the load on the viewed column only (+/- 5%).

**“Total Weight ALL Posts”**: Will display the total added load on all columns of the system (+/- 5%).

**“NORMAL Speed ON/OFF”**: Press to achieve normal lifting/lowering speed.

**“SLOW Speed ON/OFF”**: Press to achieve slower lifting/lowering speed.

**“HELP”**: Provides further information in the event of any errors or faults.

**“RESET”**: Will reset the current level state of the lift to override any out of level issues. Must be pressed for at least 5 seconds to activate.

**“GO TO MENU SCREEN”**: Will send user back to MAIN MENU.

## Weight Display Screen

This screen will display the weight on each post in the system and the total weight on the lift system. (Note the tolerance of +/- 5% in weights shown). This weight does not deduct the weight of added lift accessories or adapters, such as chassis lift beams.

Weights *				
Post #1 Weight	Post #2 Weight	Post #3 Weight	Post #4 Weight	
4503	4487	6325	6407	
Post #5 Weight	Post #6 Weight	Post #7 Weight	Post #8 Weight	
0	0	0	0	
* +/- 5 % Weight				System Weight 21722
Go To Menu Screen				

## Factory Setup Screens:

These screens only accessible when security mode entered as factory with factory password.

Factory Setup 1			Factory Setup 2			
Post Number	Maximum System Weight	Warning Horn PSI	Position Feedback	Height In Inches	Pressure Feedback	Pressure In PSI
2	72000	100	12884	12.23	11555	1342
Go To Screen 2	Maximum Post Weight	Post Top Height	Go Back To Screen 1	Valve Output (Volts)	Velocity (In/Sec)	Change User Password
Go To Menu Screen	18000	66.5	Go To Screen 3	4.03	1.03	
	Serial Number	User Maximum Raise Height	Go To Menu Screen	Maximum Out Of Level Shut-Down	Out Of Level Shut-Down	Height Difference
	B2Q177	66.5		12.00	4.00	0.23
Low Battery Warning Voltage	Factory Setup 3	Low Battery Shutdown Voltage				
21.00	Good Battery Reset Warnings Voltage	20.00				
Go Back To Screen 2	24.00	Reset Lift Usage Data				
Go To Menu Screen		Hour-Meter				
		123.00				

These screens allow the ability to alter and/or view factory settings, such as:

Post Capacity

Serial Number

Pressure Calibration / Linear Potentiometer Calibration

Maximum Height Limit

Out of Level Parameters

Battery Warning Levels

## Maintenance Screens:

These screens are accessible only with Factory, Supervisor or Distributor clearance.

The first two screens provide service contact information, serial number, inspection dates and lift cycles.

The third screen and beyond provide alarm history information, providing information on the last 20 fault occurrences. There is also an I/O status screen which gives feedback on all buttons and input devices on the post to assist in troubleshooting.

Last Inspection Date		Serial Number	Lifting Cycles
Month	09	B2G154	135
Day	09		
Year	2012	For Service, Contact:	
Next Inspection Due		Mohawk Distributor	ACE LIFTS
Month	09	Mohawk Dist Phn	888-1234
Day	09	Mohawk Resources Ltd.	
Year	2013	65 Vrooman Ave	
Today's Time/Date		Amsterdam, NY 12010	
mm/dd/yy		1-800-833-2006	
01/01/04 10:00:00		Go To Menu Screen	Go To Screen 2

Last Inspection Date		Usage/Maint.	Total Lifting Cycles
Month	09	2	376
Day	09		
Year	2012	Total Lifting Cycles This Year	Total Lifting Cycles This Month
Set Inspection Date		220	45
Go Back To Screen 1		Total Lifting Cycles This Week	Total Lifting Cycles Today
Go To Screen 3		12	2
Go To Menu Screen		Total Lifting Cycles Since Inspection	Go To I/O Status Screen
		156	

Alarm History 1	
01/01/04 00:00 AM	Pressure Sensor Problem
01/01/04 00:00 AM	Communication Problem Detected
01/01/04 00:00 AM	AC Motor Overload - Post 8
01/01/04 00:00 AM	System Weight Limit Exceeded
01/01/04 00:00 AM	Emergency Stop Pressed - Post 1
01/01/04 00:00 AM	Low Battery Shutdown - Post 3
01/01/04 00:00 AM	Lock Did Not Release - Post 5
Next	Return

Push Button and Input Diagnostics:			
Phasing OK	Raise Button OFF	Lower Button OFF	Park Button OFF
Single Not Selected	Pair Not Selected	Lock Engaged	E-Stop Released
Go To Run Screen		Go To Menu Screen	

## Supervisor Screens:

These screens are accessible only with Supervisor or Factory clearance.

**Supervisor Setup**  
Current User: #0  
Supervisor Name: DAVE SMITH  
Supervisor Password: [Change]  
User #1 Name: JOHN DOE  
User #1 Password: [Change]  
User #2 Name: JOE SMITH  
User #2 Password: [Change]  
User #3 Name: BILL JONES  
User #3 Password: [Change]  
Next Screen | Return To Menu | User Data

**Supervisor Setup 2**  
Current User: #9  
User #4 Name: MIKE  
User #4 Password: [Change]  
User #5 Name: LARRY  
User #5 Password: [Change]  
User #6 Name: CHUCK  
User #6 Password: [Change]  
User #7 Name: SAM  
User #7 Password: [Change]  
User #8 Name: BOB  
User #8 Password: [Change]  
Next Screen | Return To Menu | Prev Screen

**Supervisor Setup 3**  
Password Functions:  
Operate Lift Without Passwords  
Lockout Minutes: 30  
Lockout Timer Is Enabled  
User Maximum Raise Height: 66.5  
Press to Change  
Return To Menu | Prev Screen

Within these screens, the Supervisor can setup various users with user names and passwords (up to 8 users). The 3<sup>rd</sup> setup screen allows the Supervisor to designate if the lift is to be used only with Passwords or in Free to use mode (without passwords). The lockout time can also be set. This is the time the lift can remain idle before a new password is needed to use it again. User maximum height can be set here as well can be set for a value less than the maximum lifting height (i.e. for low ceiling clearance).

From the 1<sup>st</sup> screen, the Supervisor can access the User Data, which will provide individual usage data for each user that is designated in the supervisor settings. This can be a very useful tool for tracking an individuals usage of the lift.

**User 1 Data**  
User #1: JOHN DOE  
Return To Menu

Cumulative Travel	Total Lifting Cycles
This Year: 29480.00	This Year: 220
This Month: 6030.00	This Month: 45
This Week: 1608.00	This Week: 12
Today: 268.00	Today: 2

## ERROR MESSAGES:

There are a variety of error messages that may display if certain situations arise.



Most often, a “Locks Not Engaged” screen will show if the lift is raised and not lowered completely on the mechanical locks. Other errors would be witnessed on the RUN SCREEN in the red banner in the center of the screen. There might be more than one error occurring. If this is the case, the display of the errors will alternate in the red banner. In the event of an error/fault, pressing the HELP button on the screen will provide additional assistance on why the error/fault occurred and what can be done to correct it. See below for a sample of

various errors and their help screens.

### Lock Release Help

Check the lock on the post # shown in the error message while attempting to lower the lift. Lift must be raised up off the lock to allow lock to retract/release. If lock is releasing, ensure that proximity sensor is lit. If it is not, the proximity sensor may need to be adjusted on the bracket. Consult user manual if additional investigation is needed. i.e. wiring.



[Go To Run Screen](#)

### AC Motor Overload Help

The motor overload relay on the designated post has tripped. Reset this by pressing the Red Reset Button on the overload.

If this does not correct the problem, a wire may be loose or disconnected from this overload relay. Refer to manual for wiring.


[Go To Run Screen](#)

### Wrong Phasing Help

The phase sensing relay in the system (AC systems only) has detected that the incoming power to the lift has either improper phasing or improper voltage. Confirm that incoming power is correct for the rating of the unit.

Reverse 2 of the 3 power leads on the incoming power cable as needed to remedy the problem.

Note that changing the plug may not fix this problem if this unit is used in multiple locations with power variances.



[Go To Run Screen](#)


### Communication Help

The system has lost communication with a post. Check the communication cables and dummy plugs for proper attachment.

For AC Systems, the unit uses one Dummy Plug A and one Dummy Plug B.

If this does not resolve problem, examine post that has lost com for blown fuse, tripped breaker, or wiring problems.

Consult user manual for wiring diagrams.




[Go To Run Screen](#)

### Height Sensor Help

The system has lost feedback from the height sensor that is located at the top of the post.

Ensure that this sensor is connected to plug from inside of column, and that the string is connected to bottom of carriage and is not broken.



[Go To Run Screen](#)

### High Limit Help

One of the posts in the system has reached the upper height limit as specified in the settings menus. Lowering is only allowed.

Refer to the menu settings for customized setting for upper height limit. Refer to user manual for factory default settings.

[Go To Run Screen](#)



### Low Battery Help

Battery Voltage Requirement for each post is 24 VDC.  
(two 12 VDC batteries in series.)

When post voltage drops below 21 VDC, a warning will be given and the user will be still be allowed to raise the lift.

When post voltage drops below 20 VDC, the unit will not raise until it is fully recharged above 24 VDC.

The implementation of a standard charging schedule for this lift is encouraged to achieve maximum battery life.

Go To  
Run Screen

### Out Of Level Help

The leveling system has detected that columns are out of synchronizing tolerance.

Either raise the lowest column (in Single Mode) or lower the highest column (in Single Mode) to bring the columns level.

Use of the manual override lowering valves on the left sides of the individual power units is also available if needed.

To manually lower a column, hold the lock release lever of the column, and pull the red knob on the override valve.

Go To  
Run Screen

### Post Weight Help

This system will not raise a vehicle if it detects any individual post that is overloaded beyond its rated load capacity.

If the system has detected that the load on a particular post is exceeding the rated load capacity of that post:

Verify the vehicle axle weights and confirm they do not exceed post capacities.

If weight of vehicle is within lifting specs, confirm pressure sensor settings are correct. Refer to manual.

If pressure sensor settings correct, pressure sensor may be defective. Consult Mohawk Service Dept.

Go To  
Run Screen

### Pressure Sensor Help

The system has lost feedback from the pressure sensor that is located at the left side of the power unit.

Ensure that this sensor is connected to plug from the bottom of the control box and that wires are not loose.

Refer to electrical wiring diagram in user manual for more details.



Go To  
Run Screen

### System Weight Help

This system will not raise a vehicle that is heavier than the rated load capacity of the lifting system.

If the system has detected that the weight of the vehicle is exceeding the rated load capacity of the lifting system:

Verify the vehicle weight and confirm this does not exceed the lift system capacity. More post may be required to lift load.

If weight of vehicle is within lifting specs, confirm pressure sensor settings are correct. Refer to manual.

If pressure sensor settings correct, pressure sensor may be defective. Consult Mohawk Service Dept.

Go To  
Run Screen

### E-Stop Help

Twist the E-Stop button Counter-Clockwise and release on the post # that is shown in the error message.

Repeat for other columns as needed.

The system will run only when ALL E-Stops are released.

If problems persist, check communication cables and dummy plugs and then consult manual for wiring diagrams.



Go To  
Run Screen

# TROUBLE SHOOTING

## **START-UP (AC Units):**

**Problem:** Upon power up, screen does not illuminate.

**Solution1:** Check to see that all communication cables are connected, dummy plugs are connected, all E-Stop buttons are released, power cable is connected, and main power switch is on at powered post.

**Solution2:** If Solution 1 does not produce results, have qualified electrician verify main power coming into system matches power requirements of lift. Check for tripped circuit breaker.

**Solution3:** If Solution 2 does not produce results, check for these items in the following order when lift power feed is unplugged. Check for tripped circuit breaker in powered master post, Verify 24 VDC power supply is powered in powered master post, Check for faulty 24 VDC relay of powered master post, Check for faulty coil in power contactor (large) in powered master post. Consult with qualified electrician.

**Solution4:** If Solution 3 does not produce results, check for Faulty E-Stops. Unplug power from system. Connect all communication cables, remove both dummy plugs, and release all E-Stop buttons. Verify continuity between pin 8 of one end of the system and pin 8 of the other end of the system. If continuity not present, probable faulty E-Stop in one of the posts or possible faulty communication cable. Remove posts from system to “home-in” on which post (or cable) is producing the problem.

**Solution5:** If Solution 4 does not produce results, check for Faulty communication cable. Verify continuity between pin 9 of one end of the system and pin 9 of the other end of the system. Verify continuity between pin 10 of one end of the system and pin 10 of the other end of the system. If continuity not present, possible faulty communication cable. Check each cable for pin to pin continuity.

**Problem:** Upon power up, after login, red bar on screen shows “incorrect power phase”

**Solution:** This is a power fault, which indicates that the power feed lines are reversed rotation. Have a qualified electrician reverse 2 lines of the incoming power to the lift.

**Problem:** Upon power up, red bar on screen shows “motor overload fault”

**Solution:** This is a motor overload fault, which indicates that the overload has tripped for the post that is blinking. Turn unit off and wait a minute or two until the overload resets itself automatically.

## **DURING OPERATION:**

**Problem:** After power up, not all posts are not shown on activation screen.

**Solution1:** Verify that all posts in system are turned on to “Operate Lift”. (DC Lift)

**Solution2:** Check for proper communication cable and dummy plug connection of all posts.  
(See lift setup)

**Solution3:** Possible faulty communication cable or dummy plug. Consult Mohawk Service department.

**Problem:** Lift stops and red bar on screen shows message.

**Solution:** This indicates a fault. Press the “HELP” button on the screen for more information on a remedy and possible cause. Refer to ERROR MESSAGE section of this manual.

**Problem:** Lift jack not raising lift or lift jack not collapsing when loaded.

**Solution:** Lift jack relief valve needs to be adjusted. Turn relief set screw clockwise to increase lifting ability of jack. Turn relief set screw counter-clockwise to reduce lifting ability of jack. See illustration in back of manual.

**Problem:** There is more than 1-1/2” height difference between carriages.

**Solution:** This may be due to the fact that one column was operated on SINGLE before operating the unit in the ALL mode. This may also be due to operating in the PAIR mode before operating in ALL mode.

**Problem:** Carriage is lowering on its own.

**Solution1:** Check that there are no oil leaks by checking around the column. If so, repair the leak condition.

**Solution2:** If Solution 1 does not produce results, check for leakage of cylinder piston seals. Remove black plastic vent tube from power unit reservoir tank port and see if any fluid is flowing out. If so, cylinder piston seals are leaking. Contact Mohawk’s Service department.

**Solution3:** If Solution 2 does not produce results, the lowering valve(s), located on the power unit may have collected some dirt, preventing them from sealing properly. Make sure that the carriage is lowered to floor level in order that there is no pressure in the system. Disconnect the power so that no one can start the unit. You can now remove the lowering valve(s). Disconnect the electrical leads from the solenoid using a screwdriver to remove the screw holding the two mating connectors. Remove the lowering valve(s) from the power unit and check to see that there is no foreign material in the valve ends, which prevent the balls from sealing. Remove the foreign material. If you cannot find any problem, replacement of valve may be required. Contact Mohawk’s Service department.

**Problem:** Lift not raising load.



Solution1: Lift may be overloaded. Verify weight on column by viewing screen. Remove weight if in excess of lift capacity.

Solution2 Relief valve may be out of adjustment. Contact Mohawk Service dept.

MODEL:
SERIAL NUMBER:
DATE OF INSTALLATION:

### SERVICE CHART

DATE	PART REPLACED / SERVICED	SERVICE COMPANY	SERVICED BY

### MAINTENANCE CHART


DATE	MAINTENANCE PERFORMED	SERVICE COMPANY	SERVICED BY

# MOHAWK



## PARTS (VAC Models)


MP-18-SERIES  
ELECTRIC/HYDRAULIC  
PORTABLE LIFT



# 15" FORKS

**NOTICE OF CONFIDENTIAL INFORMATION**

**D-SIZE**

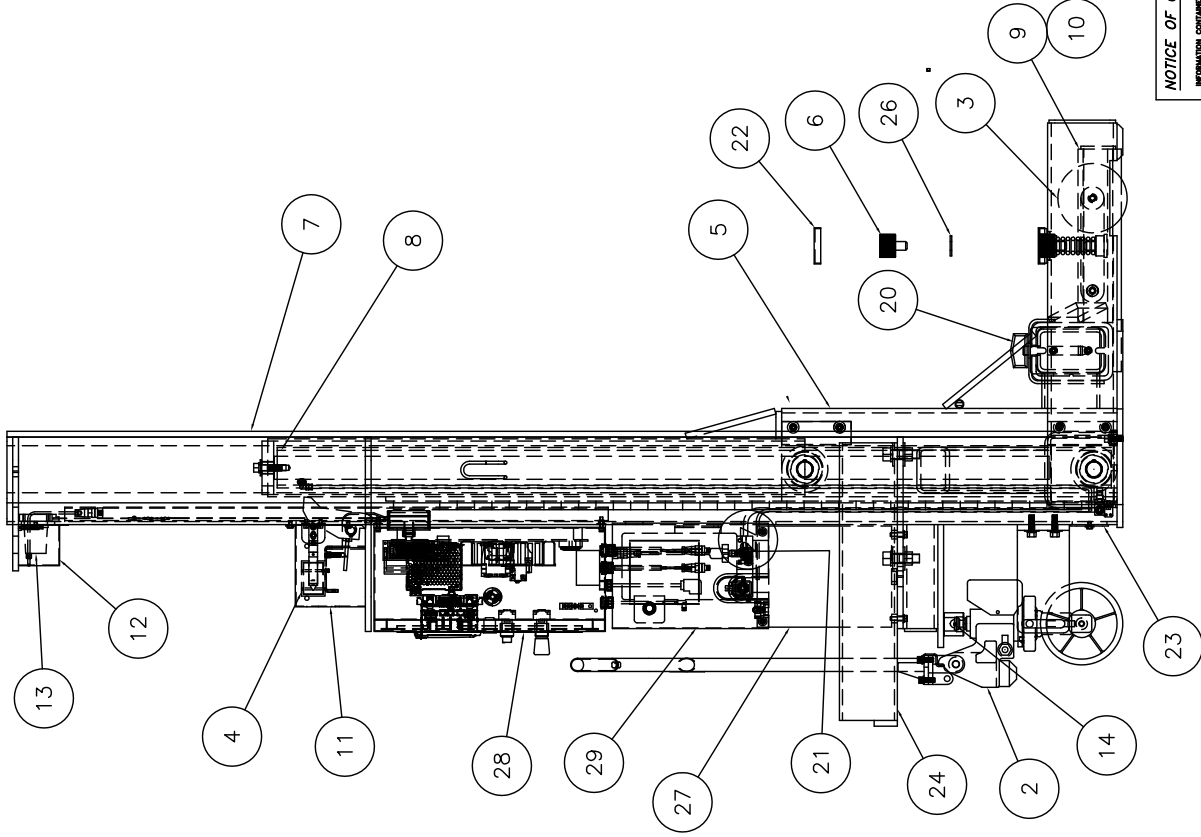

1  
(NOT SHOWN)

16 18  
AT ALL COVERS  
(TYP 11 PLACES)

22 19  
AT CABLE BRACKETS  
(TYP 4 PLACES)


15 17 19  
ATTACH PU ON POST SHELF  
(TYP 4 PLACES)

18 25 30 31  
FOR MOUNTING ELECTRICAL CONTROL BOX  
(TYP 4 PLACES)

# 15' FORKS

31	600-690-005	Nut, Nylon Lock, 1/4-20 NC	4	
30	600-710-013	Washer, Flat, #10	4	
29	MP-5300-A-004	PU Cover Assy (120 VAC)	1	
28	MP-6000-A-009	Slave Control Box Assy	1	
27	MP-6000-A-018	Power Unit Assy, 230/460 VAC, 3 Ph, W/ Prop Valve	1	
26	025-002-167	Washer (Drilling)	2	600-710-007 1 3/4 Dia x 3/4 ID x 9/64 Thk
25	600-650-008	Cap Screw, Socket Head, 1/4-20 NF x 1" Lg, Grade 5 Zinc Plated	4	
24	MP-0200-A-012	Packing Tube Assembly (7/06)	2	
23	P-150-P-004	Access Hole Cover	1	600-030-008 10ga x 3 1/4" x 6"
22	601-460-005	Cap Plastic, Red, 3" Dia x 1/2 Thk	2	
21	601-420-017	Elbow, 90 Deg, #6 ORB to #6 JIC	1	
20	600-900-006	Hitch Pin, 3/4 Dia x 4" Usable	2	
19	600-720-002	Washer, Lock, 5/16	4	.75 OD .312 ID .062Thk
18	600-710-004	Washer, Flat, 1/4	11	
17	600-710-003	Washer, Flat, 5/16	4	
16	600-640-039	Bolt, Hex Head, 1/4-20 NC x 3/8 Lg (Gr 5)	7	
15	600-640-001	Bolt, Hex Head, 5/16-18 NC x 1 1/4" Lg (Gr 5)	4	
14	600-630-003	Set Screw, 1/4-20 NC x 1/2 Lg	1	
13	MP-5100-A-014	String Pot Assembly, ANALOG	1	
12	MP-1100-P-003	Sensor Cover	1	600-030-014 16 Gauge
11	MP-5200-P-001	Lock Cover	1	600-030-014 16 Gauge
10	MP-1000-W-006	Fork Weldment, Right	1	
9	MP-1000-W-005	Fork Weldment, Left	1	
8	MP-0900-A-001	Cylinder Assembly	1	
7	MP-6200-W-002	Post Weldment	1	
6	MP-0800-P-024	Threaded Spring Retainer	2	600-090-019 2" Dia x 2 1/2 Lg
5	MP-0700-A-001	Carriage Assembly	1	
4	MP-5200-A-001	Lock Release Assy, 24 VDC	1	
3	MP-0500-A-001	Floor Roller Assembly	2	
2	MP-0400-A-007	Jack Assembly	1	
1	MP-0300-A-002	Tag & Decal Location - Slave Post	1	

NOTICE OF CONFIDENTIAL INFORMATION			
1. EXCEPT WHERE SHOWN OTHERWISE, ALL DIMENSIONS ARE IN INCHES. 2. UNLESS OTHERWISE SPECIFIED, SURFACE FINISH TO BE 125 RMS. 3. WELDING MEDIUM SHALL CONFORM TO AWS E-7011 CODE S3 FLUX CURE WIRE ONLY.			
ITEM NAME		DESCRIPTION	
ITEM		QTY	MATERIAL
ITEMS		SCALE	NOTE
1. EXCEPT WHERE SHOWN OTHERWISE, ALL DIMENSIONS ARE IN INCHES.		1/8" = 1'-0"	
2. UNLESS OTHERWISE SPECIFIED, SURFACE FINISH TO BE 125 RMS.		CHECKED	APPROVED
3. WELDING MEDIUM SHALL CONFORM TO AWS E-7011 CODE S3 FLUX CURE WIRE ONLY.		DATE	WEIGHT
		12/12/11	1500 LB
		NEXT ASSEMBLY	FROM
			MP-6100-A-004
			DRAWING NUMBER
			MP-6100-A-004

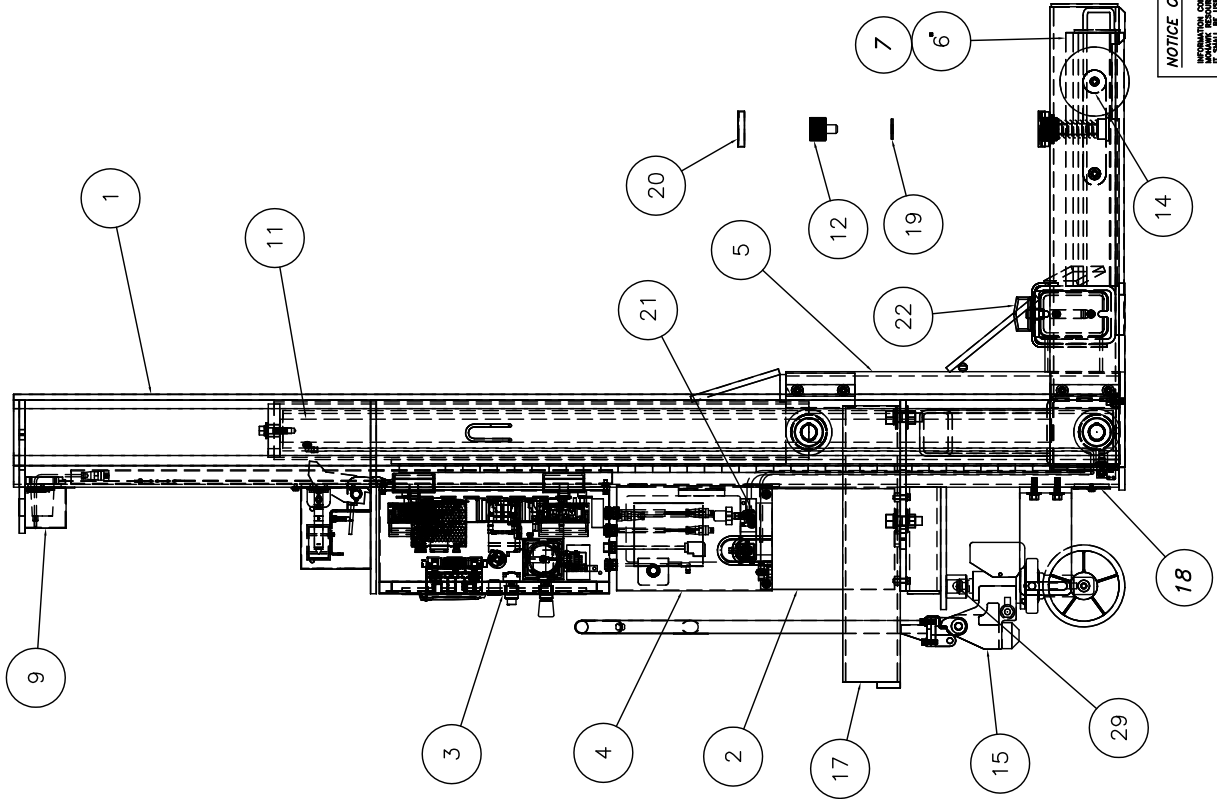

16  
(NOT SHOWN)

24 27  
AT ALL COVERS  
(TYP 7 PLACES)


23 25 28  
ATTACH PU ON POST SHELF  
(TYP 4 PLACES)

24 26 30 31  
FOR MOUNTING ELECTRICAL CONTROL BOX  
(TYP 4 PLACES)

# WIDER & LONGER (22" FORKS)

31	600-690-005	Nut, Nylon Lock, 1/4-20 NC	4	
30	600-710-013	Washer, Flat, #10	4	
29	600-630-003	Set Screw, 1/4-20 NC x 1/2 Lg	1	
28	600-640-001	Bolt, Hex Head, 5/16-18 NC x 1 1/4" Lg (Gr 5)	4	
27	600-640-039	Bolt, Hex Head, 1/4-20 NC x 3/8 Lg (Gr 5)	7	
26	600-650-008	Cap Screw, Socket Head, 1/4-20 NF x 1" Lg, Grade 5	4	
25	600-710-003	Washer, Flat, 5/16	4	
24	600-710-004	Washer, Flat, 1/4	11	.75 OD .312 ID .062Thk
23	600-720-002	Washer, Lock, 5/16	4	
22	600-900-006	Hitch Pin, 3/4 Dia x 4" Usable	2	
21	601-420-017	Elbow, 90 Deg, #6 ORB to #6 JIC	1	
20	601-460-005	Cap, Plastic, Red, 3" Dia x 1/2 Thk	2	
19	025-002-167	Washer (Oriling)	2	
18	P-150-P-004	Access Hole Cover	2	600-710-007 1 3/4 Dia x 3/4 ID x 9/64 Thk
17	MP-0200-A-012	Packing Tube Assembly (7/06)	2	600-030-008 10ga x 3 1/4" x 6"
16	MP-0300-A-003	Tag & Decal Location - Master Post	1	
15	MP-0400-A-007	Lock Assembly	1	
14	MP-0500-A-001	Floor Roller Assembly	2	
13	MP-5200-A-001	Lock Release Assy, 24 VDC	1	
12	MP-0800-P-024	Threaded Spring Retainer	2	600-090-019 2" Dia x 2 1/2 Lg
11	MP-0900-A-001	Cylinder Assembly	1	
10	MP-5200-P-001	Lock Cover	1	
9	MP-1100-P-003	Sensor Cover	1	600-030-014 16 Gauge
8	MP-5100-A-014	Siring Pot Assembly, ANALOG	1	
7	MP-1500-W-003	Fork Weldment, Left, LONGER(22")	1	
6	MP-1500-W-004	Fork Weldment, Right, LONGER (22")	1	
5	MP-1900-A-001	Carriage Assembly, (WIDER)	1	
4	MP-5300-A-004	PU Cover Assy (120 VAC)	1	
3	MP-6000-A-005	Master Control Box Assy	1	
2	MP-6000-A-018	Power Unit Assy, 230/460 VAC, 3 Ph, W/ Prop Valve	1	
1	MP-6200-W-004	Post Weldment, LONGER & WIDER	1	

NOTICE OF CONFIDENTIAL INFORMATION										MOHAWK RESOURCES LTD.																					
1. REMOVE ALL SHARP CORNERS & EDGES. 2. UNLESS OTHERWISE SPECIFIED, SURFACE FINISH TO BE PER RMS. 3. SPECIFICATIONS TO E-70XX ELECTRODES OR E-70T1 CODE 5.3 FLUX CORE WIRE ONLY.										TOLERANCES:		SCALE		DRAWN		G.CODE		TITLE		WIDER & LONGER 22"		Master Post Assembly		DRAWING NUMBER		MP-6100-A-005					
										ANGULAR		± .005		1/16		1/16		CHECKED		APPROVED		DATE		12/30/11		1650		L.B.		N/A	
										FINISH		± .005																			
										FILE NAME		MP-6200-A-																			
										MP-6100-A-005																					

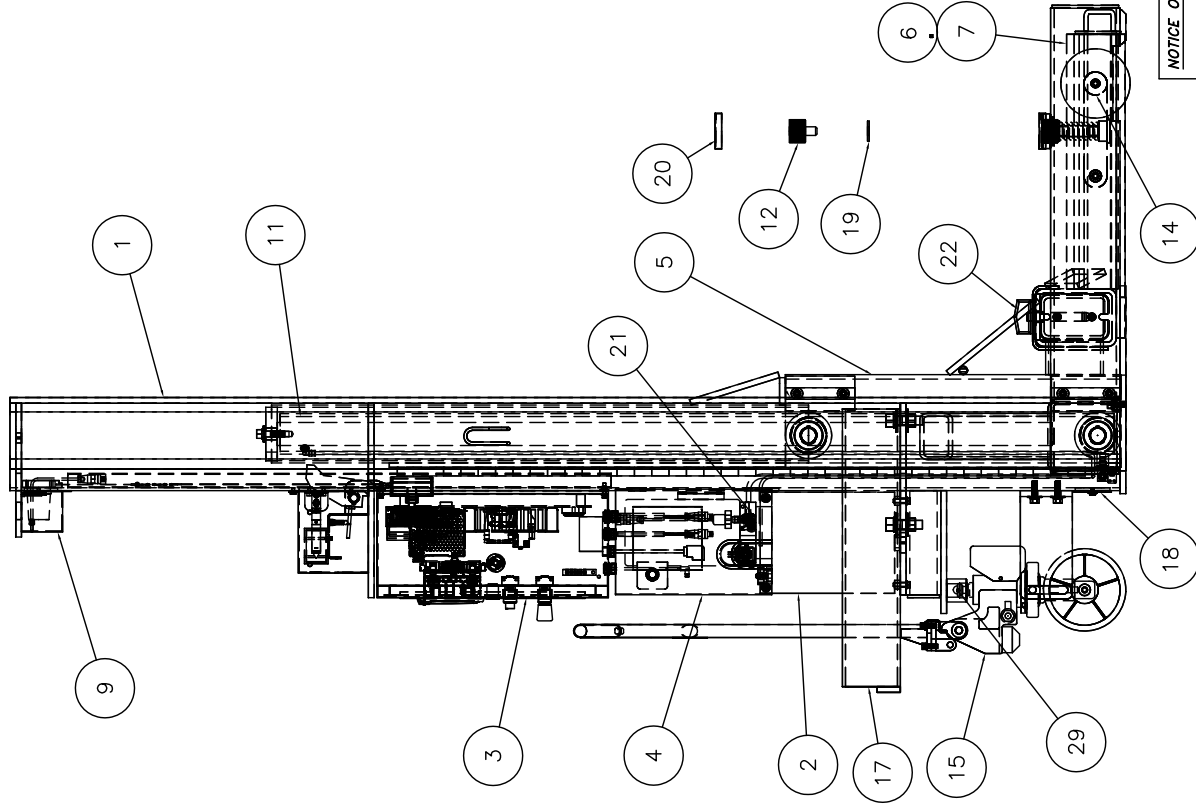

16  
(NOT SHOWN)

24 27  
AT ALL COVERS  
(TYP 7 PLACES)

23 25 28  
ATTACH PU ON POST SHELF  
(TYP 4 PLACES)

24 26 30 31  
FOR MOUNTING ELECTRICAL CONTROL BOX  
(TYP 4 PLACES)

# WIDER & LONGER (22" FORKS)

31	600-690-005	Nut, Nylon Lock, 1/4-20 NC	4		
30	600-710-013	Washer, Flat, #10	4		
29	600-630-003	Set Screw, 1/4-20 NC x 1/2 Lg	1		
28	600-640-001	Bolt, Hex Head, 5/16-18 NC x 1 1/4" Lg (Gr 5)	4		
27	600-640-039	Bolt, Hex Head, 1/4-20 NC x 3/8 Lg (Gr 5)	7		
26	600-650-008	Cap Screw, Socket Head, 1/4-20 NF x 1" Lg, Grade 5 Zinc Plated	4		
25	600-710-003	Washer, Flat, 5/16	4		
24	600-710-004	Washer, Flat, 1/4	11		.75 OD .312 ID .062Thk
23	600-720-002	Washer, Lock, 5/16	4		
22	600-900-006	Hitch Pin, 3/4 Dia x 4" Usable	2		
21	601-420-017	Elbow, 90 Deg, #6 ORB to #6 JIC	1		
20	601-460-005	Cap, Plastic, Red, 3" Dia x 1 1/2 Thk	2		
19	025-002-167	Washer (Drilling)	2	600-710-007	1 3/4 Dia x 3/4 ID x 9/64 Thk
18	P-150-P-004	Access Hole Cover	1	600-030-008	10ga x 3 1/4" x 6"
17	MP-0200-A-012	Packing Tube Assembly (7/06)	2		
16	MP-0300-A-004	Tag & Decal Location - Master Post	1		
15	MP-0400-A-007	Jack Assembly	1		
14	MP-0500-A-001	Floor Roller Assembly	2		
13	MP-5200-A-001	Lock Release Assy, 24 VDC	1		
12	MP-0800-P-024	Threaded Spring Retainer	2	600-090-019	2" Dia x 2 1/2 Lg
11	MP-0900-A-001	Cylinder Assembly	1		
10	MP-5200-P-001	Lock Cover	1	600-030-014	16 Gauge
9	MP-1100-P-003	Sensor Cover	1	600-030-014	16 Gauge
8	MP-5100-A-014	String Pot Assembly, ANALOG	1		
7	MP-1500-W-003	Fork Weldment, Left, LONGER(22")	1		
6	MP-1500-W-004	Fork Weldment, Right, LONGER(22")	1		
5	MP-1900-A-001	Carriage Assembly (WIDER)	1		
4	MP-5300-A-004	PU Cover Assy (120 VAC)	1		
3	MP-6000-A-008	Slave Control Box Assy	1		
2	MP-6000-A-018	Power Unit Assy, 230/460 VAC, 3 Ph, W/ Prop Valve	1		
1	MP-6200-W-004	Post Weldment, LONGER & WIDER	1		

NOTICE OF CONFIDENTIAL INFORMATION  
THIS DOCUMENT CONTAINS INFORMATION THAT IS CONFIDENTIAL AND PROPRIETARY TO MOHAWK RESOURCES LTD. IT SHALL BE USED ONLY FOR THE PURPOSES OF IMPROVING INSTALLATION OF MOHAWK RESOURCES LTD. FORK LIFTS AND SHALL NOT BE DISCLOSED BY THE RECIPIENT FOR ANY OTHER PURPOSES WHATSOEVER.

ITEM	NAME	DESCRIPTION	QTY	MATERIAL	NOTE
1	MP-6200-W-004	Post Weldment, LONGER & WIDER	1		
2	MP-6000-A-018	Power Unit Assy, 230/460 VAC, 3 Ph, W/ Prop Valve	1		
3	MP-6000-A-008	Slave Control Box Assy	1		
4	MP-5300-A-004	PU Cover Assy (120 VAC)	1		
5	MP-1900-A-001	Carriage Assembly (WIDER)	1		
6	MP-1500-W-004	Fork Weldment, Right, LONGER(22")	1		
7	MP-1500-W-003	Fork Weldment, Left, LONGER(22")	1		
8	MP-5100-A-014	String Pot Assembly, ANALOG	1		
9	MP-1100-P-003	Sensor Cover	1		
10	MP-5200-P-001	Lock Cover	1		
11	MP-0900-A-001	Cylinder Assembly	1		
12	MP-0800-P-024	Threaded Spring Retainer	2		
13	MP-5200-A-001	Lock Release Assy, 24 VDC	1		
14	MP-0500-A-001	Floor Roller Assembly	2		
15	MP-0400-A-007	Jack Assembly	1		
16	MP-0300-A-004	Tag & Decal Location - Master Post	1		
17	MP-0200-A-012	Packing Tube Assembly (7/06)	2		
18	P-150-P-004	Access Hole Cover	1		
19	025-002-167	Washer (Drilling)	2		
20	601-460-005	Cap, Plastic, Red, 3" Dia x 1 1/2 Thk	2		
21	601-420-017	Elbow, 90 Deg, #6 ORB to #6 JIC	1		
22	600-900-006	Hitch Pin, 3/4 Dia x 4" Usable	2		
23	600-720-002	Washer, Lock, 5/16	4		
24	600-710-004	Washer, Flat, 1/4	11		.75 OD .312 ID .062Thk
25	600-710-003	Washer, Flat, 5/16	4		
26	600-650-008	Cap Screw, Socket Head, 1/4-20 NF x 1" Lg, Grade 5 Zinc Plated	4		
27	600-640-039	Bolt, Hex Head, 1/4-20 NC x 3/8 Lg (Gr 5)	7		
28	600-640-001	Bolt, Hex Head, 5/16-18 NC x 1 1/4" Lg (Gr 5)	4		
29	600-630-003	Set Screw, 1/4-20 NC x 1/2 Lg	1		
30	600-710-013	Washer, Flat, #10	4		
31	600-690-005	Nut, Nylon Lock, 1/4-20 NC	4		

D-SIZE

MOHAWK RESOURCES LTD.  
TITLE WIDER & LONGER 22"  
Slave Post Assembly

DATE 12/20/11  
WEIGHT 1650 LB  
FROM MP-6100-A-006


SCALE 3/16  
CHECKED  
DRAWN

FILE NAME MP-6100-A-006  
NEXT ASSEMBLY

TOLERANCES  
FINISH  
DIMENSIONS  
± .030  
± .005  
± .005  
E-7011 CODE S3 FLUX CURVE WIRE ONLY

NOTES  
1. FINISH TO BE 32 RMS.  
2. FINISH TO BE 32 RMS.  
3. WELDING MEDIUM SHALL CONFORM TO AWS  
E-7011 CODE S3 FLUX CURVE WIRE ONLY.

#	DESCRIPTION	DATE	APPROVED
A	ADDED ITEM 8	09/13/2012	G.GORE
B	ADDED ITEM 9 AND NOTE	01/03/2014	G.GORE

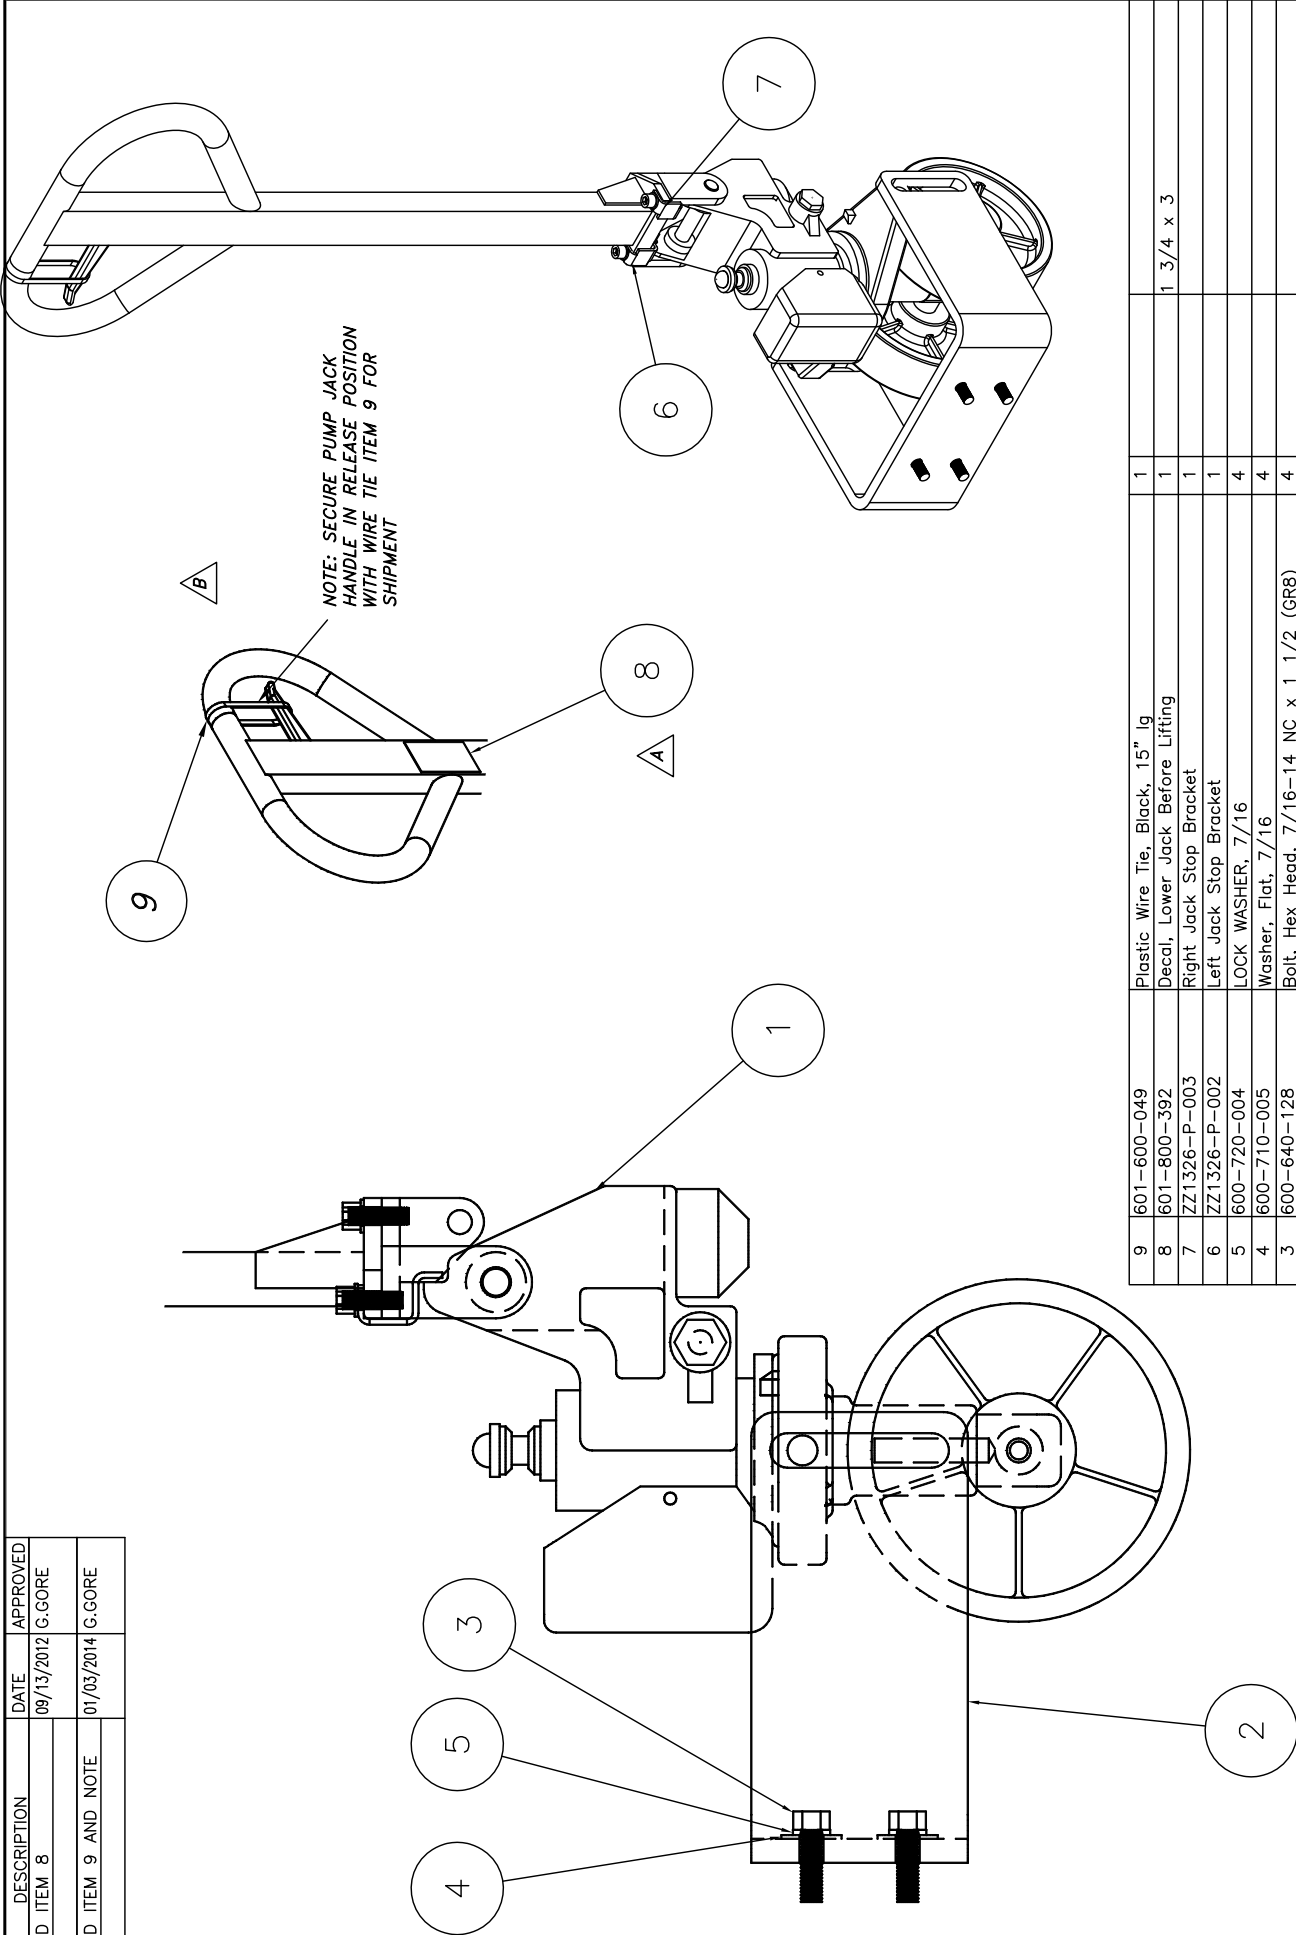

ITEM	NAME	TOLERANCES: ANGULAR DECIMAL DECIMAL DECIMAL DECIMAL	DESCRIPTION	SCALE	QTY	MATERIAL	NOTE
9	601-600-049		Plastic Wire Tie, Black, 15" lg	1/2	1		
8	601-800-392		Decal, Lower Jack Before Lifting		1		1 3/4 x 3
7	ZZ1326-P-003		Right Jack Stop Bracket		1		
6	ZZ1326-P-002		Left Jack Stop Bracket		1		
5	600-720-004		LOCK WASHER, 7/16		4		
4	600-710-005		Washer, Flat, 7/16		4		
3	600-640-128		Bolt, Hex Head, 7/16-14 NC x 1 1/2 (GR8)		4		
2	MP-0400-P-004		Jack Lower Support Bracket (HC Jack)		1	600-010-Long	1/2 Thk x 4 1/2" x 28 1/4
1	601-500-011		JACK DOLLEY		1		

**NOTICE OF CONFIDENTIAL INFORMATION**

INFORMATION CONTAINED HEREIN IS CONFIDENTIAL AND PROPERTY OF MOHAWK RESOURCES LTD. IT IS TO BE KEPT SECRET AND NOT DISCLOSED TO OTHERS WITHOUT THE WRITTEN PERMISSION OF MOHAWK RESOURCES LTD. FOR REPAIR, MAINTENANCE, OR REPRODUCTION. THE INFORMATION SHALL NOT BE USED OR DISCLOSED BY THE RECIPIENT FOR ANY OTHER PURPOSES WHATSOEVER.

NOTES:  
1. REMOVE ALL SHARP CORNERS & EDGES.  
2. UNLESS OTHERWISE SPECIFIED, SURFACE FINISH TO BE 125 RMS.  
3. WELDING MEDIUM SHALL CONFORM TO AWS SPECIFICATIONS TO E-70XX ELECTRODES OR E-7011 CODE 5.3 FLUX CORE WIRE ONLY.


FILE NAME: MP-0400-A-007

**MOHAWK RESOURCES LTD.**

DRAWN: G.GORE  
APPROVED: [Signature]  
DATE: 07/11  
WEIGHT: 47.5 LB.  
FROM: [Signature]  
DRAWING NUMBER: MP-0400-A-007



#	DESCRIPTION	DATE	APPROVED
A	1) VIEWS UPDATED	08/30/2005	dak0879
	2) WT WAS 7.92		

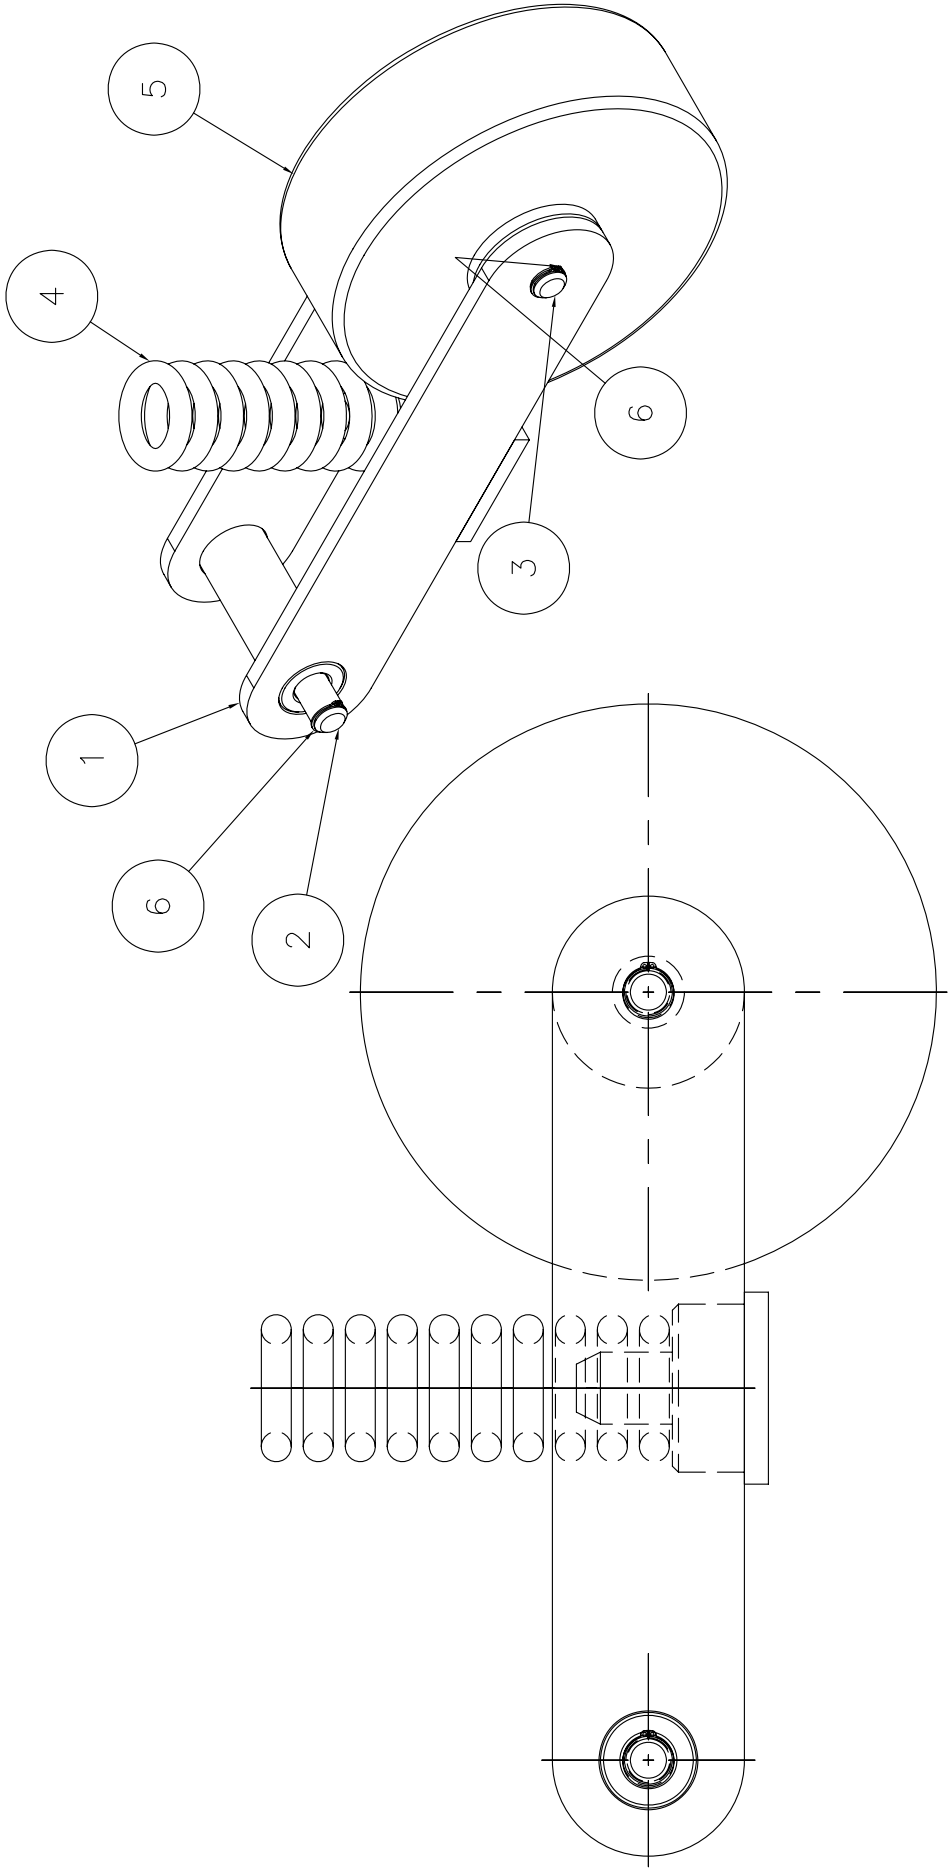


6	600-870-003	Snap Ring, Externdl, 1/2	4
5	600-920-018	Wheel, 6" Dia x 1/2 ID x 2 3/16 Hub	1
4	600-840-025	Spring, 4.25 Lg x 1.531 OD x .907 ID	1
3	MP-0500-P-006	Roller Axle Pin	1
2	MP-0500-P-005	Pivot Pin	1
1	MP-0500-W-001	Roller Pivot Weldment	1
ITEM	NAME	DESCRIPTION	QTY
Parts List			

NOTES:		TOLERANCES:	SCALE	DRAWN	MOHAWK RESOURCES LTD.	
1. REMOVE ALL SHARP CORNERS & EDGES.		ANGULAR ± 1°	1"0"=1'0"	rw7089	TITLE Mobile Post Lift	
2. UNLESS OTHERWISE SPECIFIED, SURFACE FINISH TO BE 125 RMS.		FRACTIONAL ± .030	CHECKED	APPROVED	Floor Roller Assembly	
3. WELDING MEDIUM SHALL CONFORM TO AWS SPECIFICATIONS TO E-70XX ELECTRODES OR E-70TT CODE 5.3 FLUX CORE WIRE ONLY.		DECIMAL ± .005	DATE	WEIGHT	FROM	DRAWING NUMBER
FILE NAME MP-0500-A-001.dwg		MP-0500-A-001.dwg	07/26/2004	7.84	N/A	MP-0500-A-001
NOTICE OF CONFIDENTIAL INFORMATION		INFORMATION CONTAINED HEREIN IS CONFIDENTIAL AND PROPERTY OF MOHAWK RESOURCES LTD. IT SHALL BE USED SOLELY FOR PURPOSES OF INSPECTION, INSTALLATION, OR MAINTENANCE. THE INFORMATION SHALL NOT BE USED OR DISCLOSED BY THE RECIPIENT FOR ANY OTHER PURPOSES WHATSOEVER.				

C-SIZE





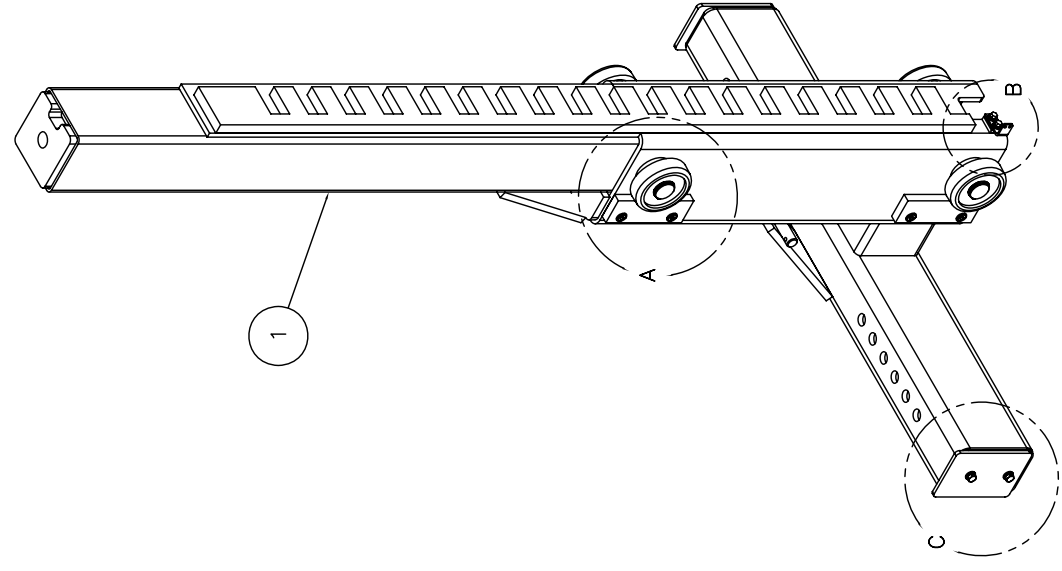

# WIDER


MOHAWK RESOURCES LTD.	Parts List	
MOBILE LIFT CARRIAGE ASSEMBLY	SCALE 1/4"	DRAWN JAW
	CHECKED	APPROVED
MP-1900-		
MP-1900-		
DATE 7/7/05	WEIGHT 300	DRAWING NUMBER MP-1900-A-001
NEXT ASSEMBLY		

**NOTICE OF CONFIDENTIAL INFORMATION**

INFORMATION CONTAINED HEREIN IS CONFIDENTIAL AND PROPERTY OF MONARK RESOURCES LTD., WHERE DRAWING IS FURNISHED TO OTHERS IT SHALL BE USED SOLELY FOR PURPOSES OF INSPECTION, INSTALLATION, OR MAINTENANCE. THE INFORMATION SHALL NOT BE USED OR DISCLOSED BY THE RECIPIENT FOR ANY OTHER PURPOSES WHATSOEVER.

*D-SIZE*

#	DESCRIPTION	DATE	APPROVED
A	Item 12 was 601-520-003	03/01/2005	rw77089
B	Item 10 was at 45 Degrees		
	Items 13, 14, 15 & 16 Added	07/06/2005	rw77089

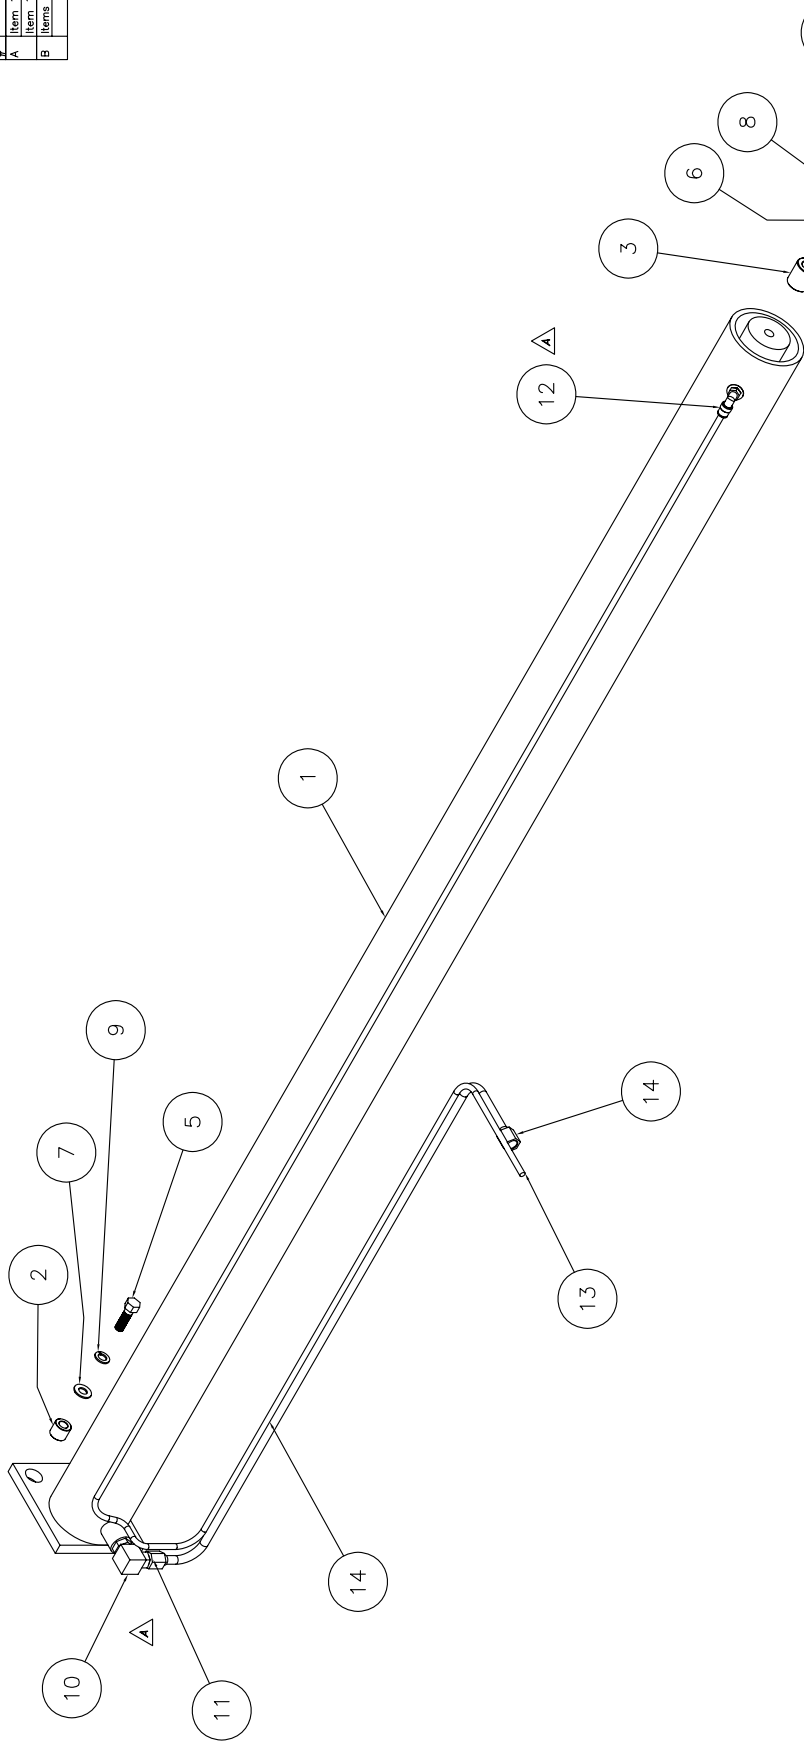

15  
USE TO SECURE BLACK  
TUBING TO CYLINDER BARREL  
(NOT SHOWN)

16  
USE TO SECURE BLACK  
TUBING TO HYDRAULIC LINE  
(NOT SHOWN)



ITEM	NAME	DESCRIPTION	QTY
16	601-600-029	Pull Tie, Black, 8 1/2" Long	6
15	601-600-021	Pull Tie, Black, 15" Long	4
14	MP-1200-A-002	Tube Assembly	1
13	MP-0900-P-401	Tubing, Black Plastic, 1/4" x 115" Long	1
12	601-520-002	90° Elbow Swiv, 1/8 NPT To 1/4 Tube	1
11	601-420-019	Straight, #6 ORB to #6 JIC	1
10	601-410-073	Velocity Fuse, 5 GPM	1
9	600-720-011	Washer, Lock, 3/8	2
8	600-720-005	Washer, Lock, 1/2	1
7	600-710-009	Washer, Flat, 3/8	2
6	600-710-008	Washer, Flat, 1/2	2
5	600-640-095	Bolt, Hex Head, 3/8-16 NC x 1 1/4 (GR8)	2
4	600-640-030	Bolt, Hex Head, 1/2-13 NC x 2" (GR8)	1
3	MP-0900-P-003	Cylinder Rod Bushing	1
2	MP-0900-P-002	Cylinder Base Bushing	2
1	MP-0900-P-001	Cylinder Assembly, Purchased	1

SCALE	DRAWN	MOHAWK RESOURCES LTD.
1/2" = 1'-0"	rw77089	
CHECKED	APPROVED	TITLE
		Mobile Post Lift
		Cylinder Assembly
DATE	WEIGHT	FIG#
07/06/2004	120	17/8
FILE NAME	DRIVING NUMBER	
MP-0500-A-001.dwg	MP-0500-A-001	

NOTICE OF CONFIDENTIAL INFORMATION  
INFORMATION CONTAINED HEREIN IS CONFIDENTIAL AND PROPERTY OF MOHAWK RESOURCES LTD. IT SHALL BE USED ONLY FOR THE PURPOSES OF PURCHASING, INSTALLATION, MAINTENANCE, REPAIR, OR REPLACEMENT OF EQUIPMENT OR BY THE RECIPIENT FOR ANY OTHER PURPOSES WITHOUT THE WRITTEN CONSENT OF MOHAWK RESOURCES LTD.

NOTES:  
1. FINISHES: ALL SHARP CORNERS & EDGES TO BE ROUNDED.  
2. UNLESS OTHERWISE SPECIFIED, SURFACE FINISH TO BE 125 RMS.  
3. WELDING: WELDING SHALL CONFORM TO AWS D1.1 FOR SHIELD METAL ARC WELDING (SMAW) OR E-7011 CODE S3 FLUX CURE WIRE (DAI.Y).

TOLERANCES:  
FINISH DIMS: ± .030  
HOLE DIMS: ± .005  
FILE NAME: MP-0500-A-001.dwg

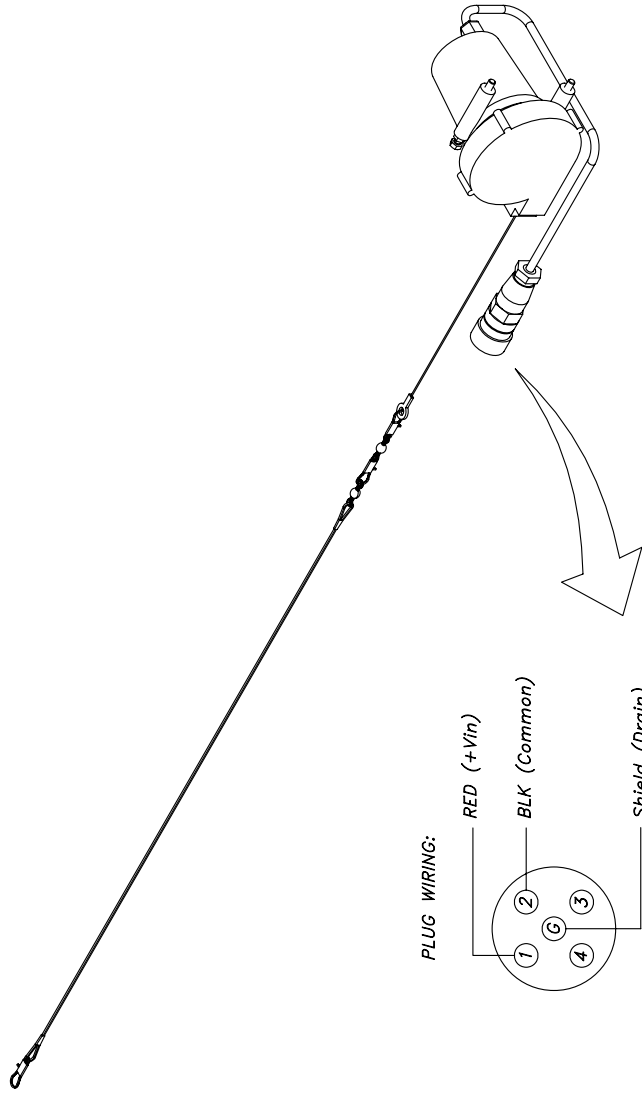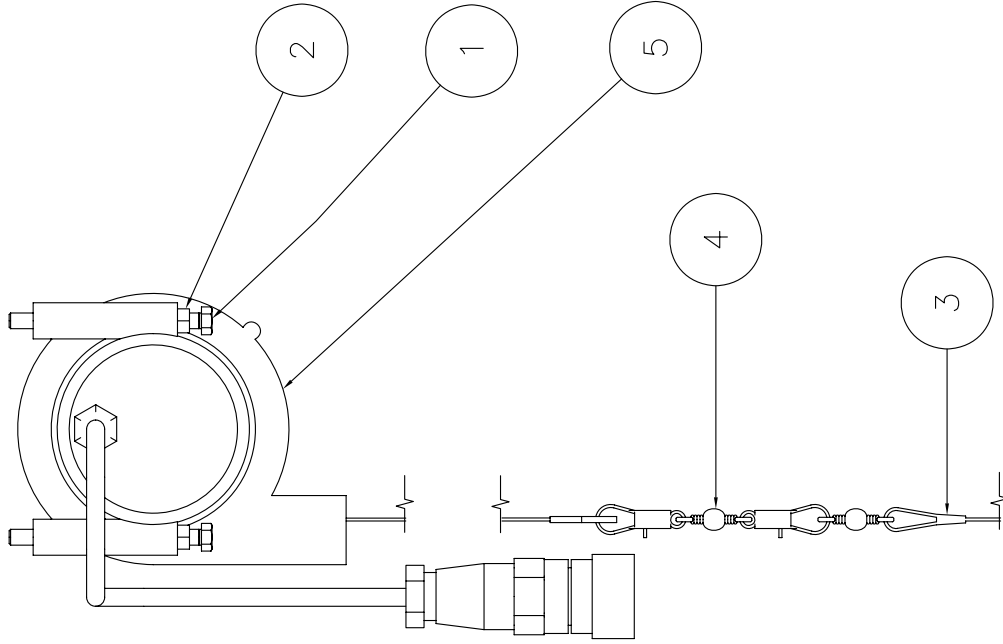


5	601-160-201	Linear Position Sensor, NEMA 4X, ANALOG	1
4	600-850-019	Double Swivel	1
3	600-850-018	Leader Line, 18" Long	1
2	600-680-028	Nut, Plain, #8-32 NC	2
1	600-600-021	Hex Machine Screw, #8-32NC x 2" Lg	2
ITEM	NAME	DESCRIPTION	QTY

C-SIZE

Parts List

NOTICE OF CONFIDENTIAL INFORMATION  INFORMATION CONTAINED HEREIN IS CONFIDENTIAL AND PROPERTY OF MOHAWK RESOURCES LTD. IT IS TO BE KEPT SECRET AND NOT DISCLOSED TO OTHERS WITHOUT THE WRITTEN PERMISSION OF MOHAWK RESOURCES LTD. FOR PURPOSES OF INSPECTION, REPAIR, OR MAINTENANCE. THE INFORMATION SHALL NOT BE USED OR DISCLOSED BY THE RECIPIENT FOR ANY OTHER PURPOSES WHATSOEVER.		NOTES: 1. REMOVE ALL SHARP CORNERS & EDGES. 2. UNLESS OTHERWISE SPECIFIED, SURFACE FINISH TO BE 125 RMS. 3. WELDING MEDIUM SHALL CONFORM TO AWS SPECIFICATIONS TO E-70XX ELECTRODES OR E-70TT CODE 5.3 FLUX CORE WIRE ONLY.		TOLERANCES: ANGULAR ± 1.0 DIMENSIONAL ± .030 DECIMAL ± .030 XXX ± .005		SCALE 1" = 1'-0"		DRAWN rw7089		MOHAWK RESOURCES LTD.	
		FILE NAME MP-5100-A-014.dwg		NEXT ASSEMBLY		CHECKED		APPROVED		TITLE Mobile Post Lift String Pot Assembly, ANALOG	
						DATE 11/2/2004		WEIGHT 0.70		FROM N/A	
										DRAWING NUMBER MP-5100-A-014	




4. PLUG ALL PORTS AND LABEL AS "FULL - SET @ 3200 PSI"

### 3. ASSEMBLE TO LIFT.


C-SIZE

INFORMATION CONTAINED HEREIN IS CONFIDENTIAL AND PROPERTY OF MOHAWK RESOURCES LTD., WHERE DRAWING IS FURNISHED TO OTHERS IT SHALL BE USED SOLELY FOR PURPOSES OF INSPECTION, INSTALLATION, OR MAINTENANCE. THE INFORMATION SHALL NOT BE USED OR DISCLOSED BY THE RECIPIENT FOR ANY OTHER PURPOSES WHATSOEVER.


FILE NAME
MB-6000-1-107

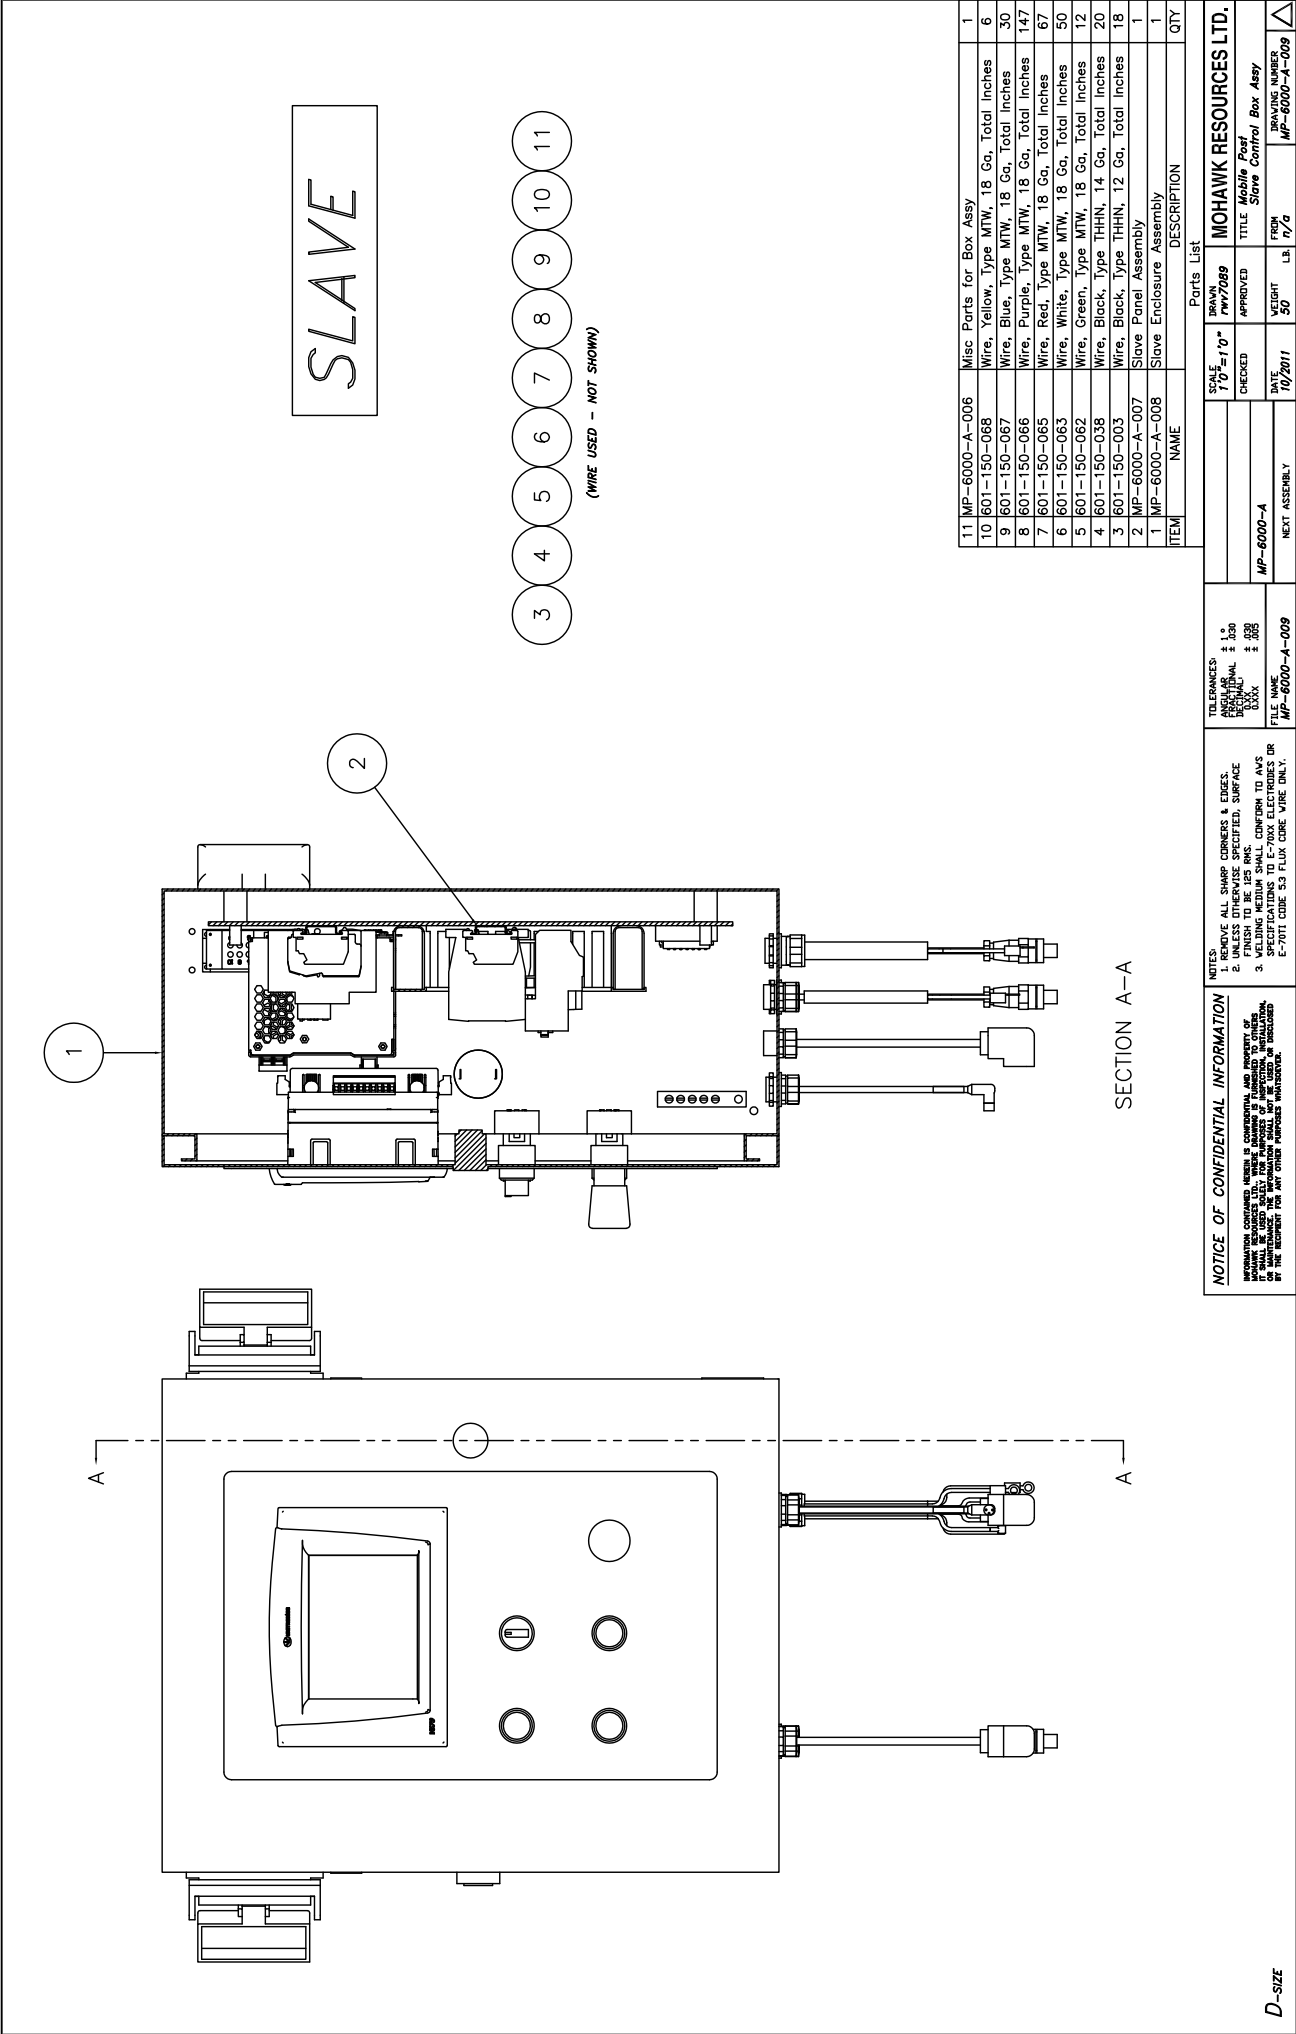



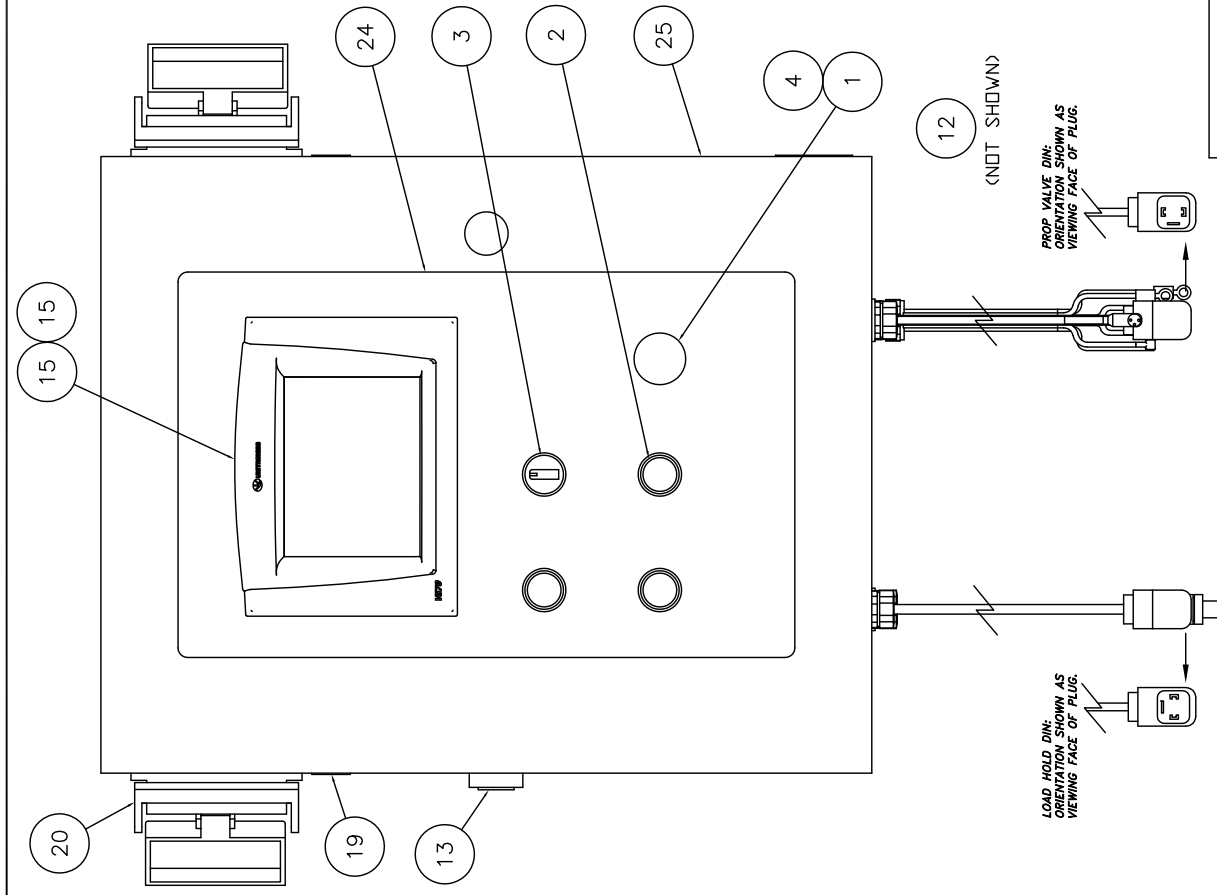

# SLAVE

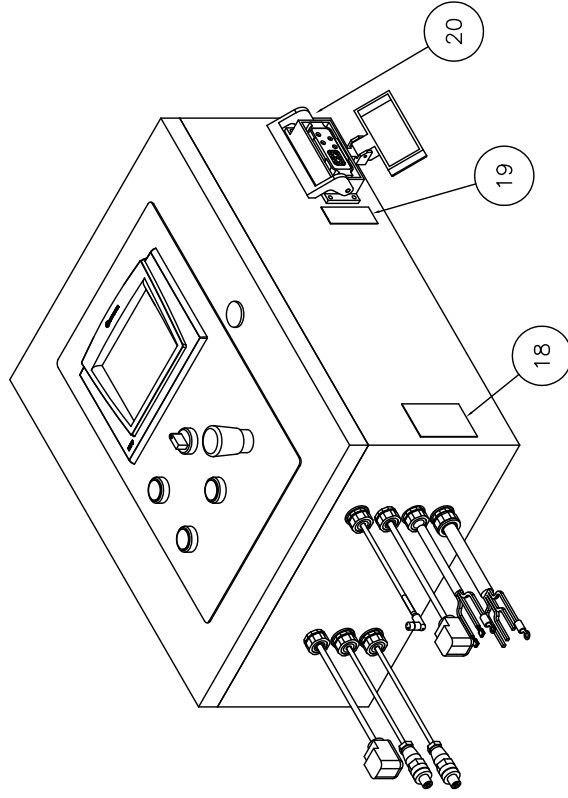

ITEM	NAME	DESCRIPTION	QTY	MATERIAL	NOTE
25	MP-6000-P-007	Slave Enclosure Drilling	1		
24	MP-6000-P-004	Control Decal, MP-Series (2013)	1		
23	MP-1300-P-400	Cable 14/4 SOW-A/50 x 4 Foot	1	601-150-037	10" x 14"
22	MP-1300-P-403	Cable, 16/3 SOW-A/50 x 7 Feet	1	601-150-061	
21	MP-1300-P-402	Cable, Shielded, 6/24 x 7 Feet	2	601-150-060	
20	MP-1300-A-008	Communication, Receptacle Assembly	2		
19	601-800-221	Decal, "COMMUNICATION"	1		3" x 2 1/2"
18	601-800-204	Decal, "208 VAC, 3 Phase"	1		2" x 3"
17	601-165-063	Straight Adapter, Red	3		
16	601-160-272	I/O Expansion Module	1		
15	601-160-271	PLC, w/Touchscreen, MP-Series 2012	1		
14	601-160-214	Quick-Disconnect Cable	1		
13	601-160-204	Piezo Sound Alarm, 24 VDC, Red	1		
12	601-160-169	Ground Bar	1		
11	601-160-154	DIN Cable Assembly w/ 4' Cable	2		
10	601-150-081	Isolated Ring Terminal	2		
9	601-150-080	Quick Connect Terminal, 0.187 x 0.020, Fully Insulated	2		
8	601-140-104	Circular Connector, 5 Pin, Male	1		
7	601-140-084	Straight Adapter, Blue	2		
6	601-140-046	Connector, 1/2 NPT, 1/2"-5/8" Cable (Brown)	1		
5	601-140-045	Straight Adapter, White	2		
4	601-110-078	Contact Block, NO	1		
3	601-110-081	Rotary Switch, 3 Position, Return to Center, 22mm	1		
2	601-110-080	Push Button, Green, 22mm	3		
1	601-110-079	E-Stop Button, Push & Turn, 22mm	1		

**NOTICE OF CONFIDENTIAL INFORMATION**


NOTES:	TOLERANCES:
1. REMOVE ALL SHARP CORNERS & EDGES.	ANGULAR ± 1.0
2. UNLESS OTHERWISE SPECIFIED, SURFACE FINISH TO BE 125 RMS.	FRACTIONAL ± .000
3. WELDING MEDIUM SHALL CONFORM TO AWS SPECIFICATIONS TO E-70XX ELECTRODES OR E-70T7 CODE. E-3, E-1, E-17, CODE, ONLY.	DECIMAL ± .030
	XXX ± .005
	XXXX ± .005
	FILE NAME

SCALE 1"=10'		DRAWN RM7089	MOHAWK RESOURCES LTD.	
CHECKED		APPROVED	TITLE Mobile Post Lift Master Enclosure Box Assembly	
DATE		WEIGHT	FROM	
MP-6000-A			DRAWING NUMBER	
			A	


*D*-SIZE

PG 1 OF 2



SLAVE

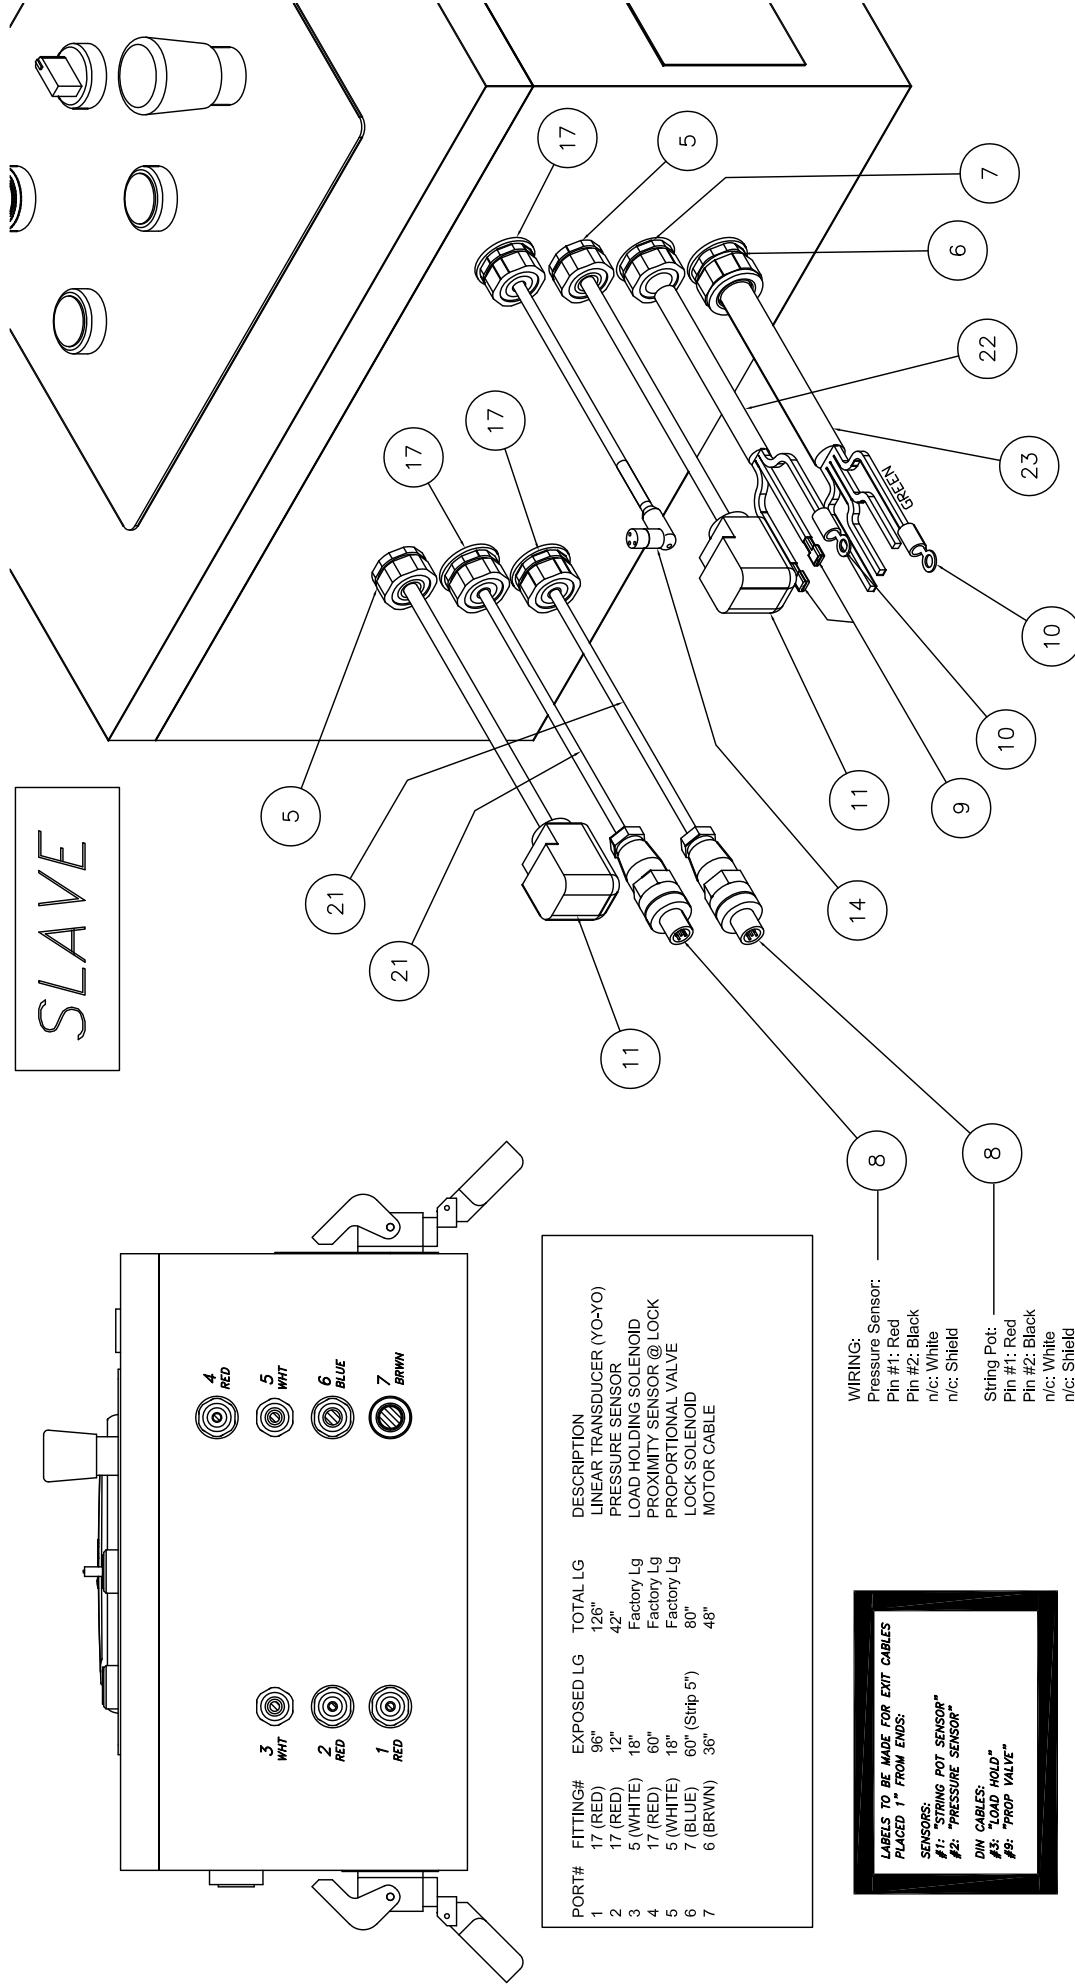

NOTES: 1. REMOVE ALL SHARP CORNERS & EDGES. 2. UNLESS OTHERWISE SPECIFIED, SURFACE FINISH TO BE AS PER CONFORM TO AWS SPECIFICATIONS TO E-70XX ELECTRODES OR E-70T1 CODE 5.3 FLUX CORE WIRE ONLY.	TOLERANCES: ANGULAR ± 1° LINEAR ± .005 HOLE DIA ± .005 HOLE DIA ± .005	SCALE: 1" = 10"	DRAWN: PW7089	APPROVED: PW7089	MOHAWK RESOURCES LTD. TITLE: Mobile Post Lift Master Enclosure Box Assembly
NOTICE OF CONFIDENTIAL INFORMATION INFORMATION ASSIGNED HEREIN IS CONFIDENTIAL AND PROPERTY OF MOHAWK RESOURCES LTD. WHILE DRAWING IS IN PROCESS TO OTHERS, IT IS TO BE KEPT SECRET AND NOT TO BE REPRODUCED OR TRANSMITTED IN ANY FORM OR BY ANY MEANS, ELECTRONIC OR MECHANICAL, INCLUDING PHOTOCOPYING, RECORDING, OR BY ANY INFORMATION STORAGE AND RETRIEVAL SYSTEM, WITHOUT THE WRITTEN PERMISSION OF MOHAWK RESOURCES LTD. BY THE SIGNATURE OF THE RECIPIENT FOR ANY OTHER PURPOSES UNLESS OTHERWISE SPECIFIED.	FILE NAME: MP-6000-A-008.dwg	DATE: 10/2011	WEIGHT: 26.5	FORM: N/A	DRAWING NUMBER: MP-6000-A-008

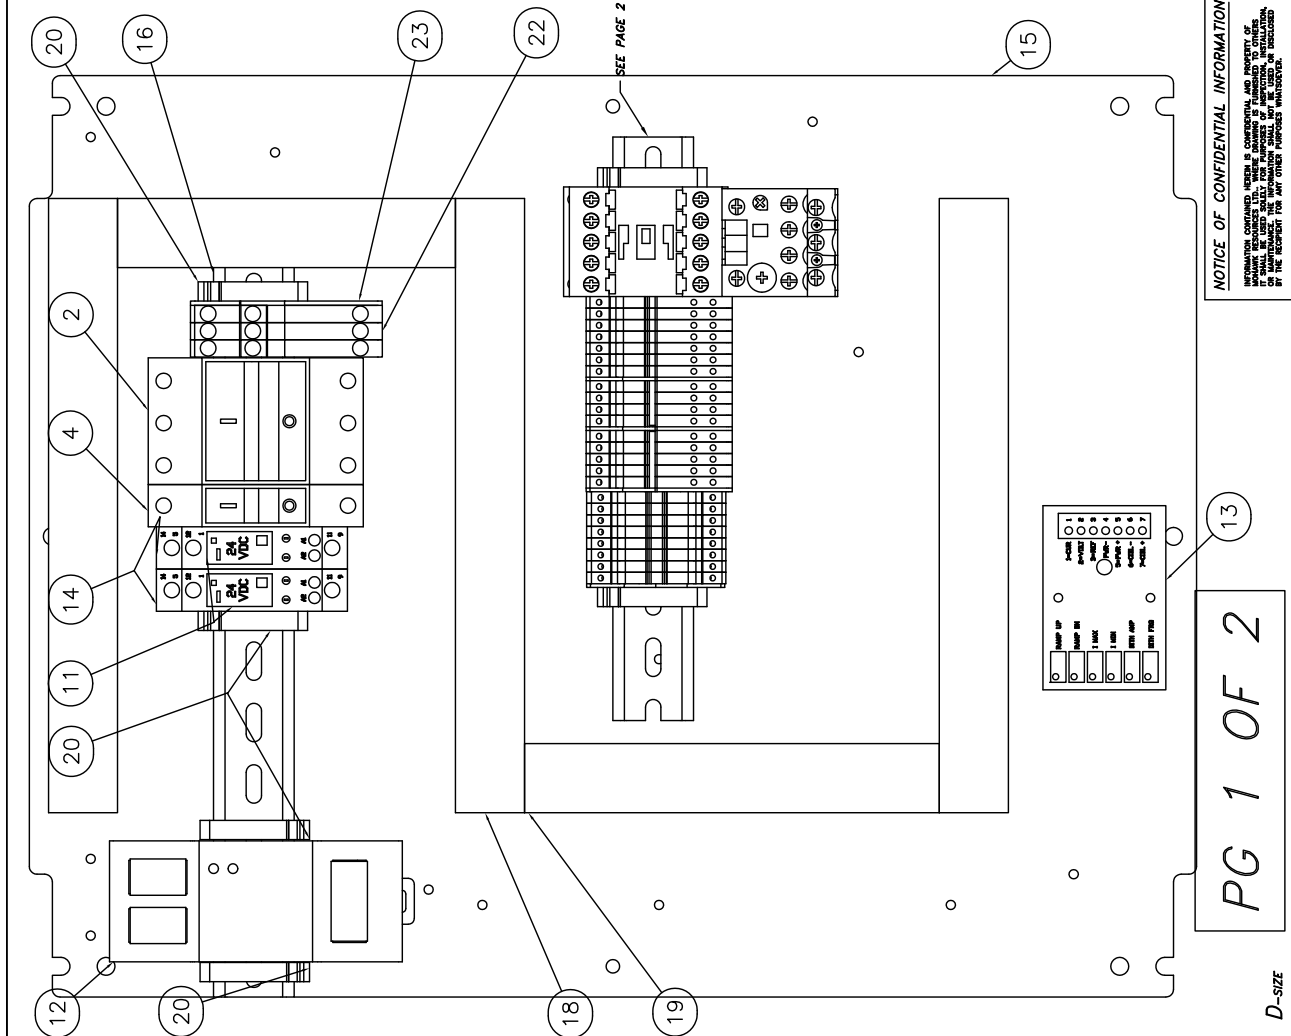

#	DESCRIPTION	DATE	APPROVED
A	1. Items rearranged, relays removed.	10/24/2012	rw7089
B	1. Item 5 was Qty 16. 2. Item 7 was Qty 3.	10/11/2013	rw7089
	3. Item 8 was Qty 13.		
	4. Item 9 was Qty 13.		
	5. Item 10 was Qty 13.		
	6. Item 11 was Qty 13.		
	7. Item 12 was Qty 13.		
	8. Item 13 was Qty 13.		
	9. Item 14 was Qty 13.		
	10. Item 15 was Qty 13.		
	11. Item 16 was Qty 13.		
	12. Item 17 was Qty 13.		
	13. Item 18 was Qty 13.		
	14. Item 19 was Qty 13.		
	15. Item 20 was Qty 13.		
	16. Item 21 was Qty 13.		
	17. Item 22 was Qty 13.		
	18. Item 23 was Qty 13.		
	19. Item 24 was Qty 13.		
	20. Item 25 was Qty 13.		
	21. Item 26 was Qty 13.		
	22. Item 27 was Qty 13.		
	23. Item 28 was Qty 13.		
	24. Item 29 was Qty 13.		
	25. Item 30 was Qty 13.		
	26. Item 31 was Qty 13.		
	27. Item 32 was Qty 13.		
	28. Item 33 was Qty 13.		
	29. Item 34 was Qty 13.		
	30. Item 35 was Qty 13.		
	31. Item 36 was Qty 13.		
	32. Item 37 was Qty 13.		
	33. Item 38 was Qty 13.		
	34. Item 39 was Qty 13.		
	35. Item 40 was Qty 13.		
	36. Item 41 was Qty 13.		
	37. Item 42 was Qty 13.		
	38. Item 43 was Qty 13.		
	39. Item 44 was Qty 13.		
	40. Item 45 was Qty 13.		
	41. Item 46 was Qty 13.		
	42. Item 47 was Qty 13.		
	43. Item 48 was Qty 13.		
	44. Item 49 was Qty 13.		
	45. Item 50 was Qty 13.		
	46. Item 51 was Qty 13.		
	47. Item 52 was Qty 13.		
	48. Item 53 was Qty 13.		
	49. Item 54 was Qty 13.		
	50. Item 55 was Qty 13.		
	51. Item 56 was Qty 13.		
	52. Item 57 was Qty 13.		
	53. Item 58 was Qty 13.		
	54. Item 59 was Qty 13.		
	55. Item 60 was Qty 13.		
	56. Item 61 was Qty 13.		
	57. Item 62 was Qty 13.		
	58. Item 63 was Qty 13.		
	59. Item 64 was Qty 13.		
	60. Item 65 was Qty 13.		
	61. Item 66 was Qty 13.		
	62. Item 67 was Qty 13.		
	63. Item 68 was Qty 13.		
	64. Item 69 was Qty 13.		
	65. Item 70 was Qty 13.		
	66. Item 71 was Qty 13.		
	67. Item 72 was Qty 13.		
	68. Item 73 was Qty 13.		
	69. Item 74 was Qty 13.		
	70. Item 75 was Qty 13.		
	71. Item 76 was Qty 13.		
	72. Item 77 was Qty 13.		
	73. Item 78 was Qty 13.		
	74. Item 79 was Qty 13.		
	75. Item 80 was Qty 13.		
	76. Item 81 was Qty 13.		
	77. Item 82 was Qty 13.		
	78. Item 83 was Qty 13.		
	79. Item 84 was Qty 13.		
	80. Item 85 was Qty 13.		
	81. Item 86 was Qty 13.		
	82. Item 87 was Qty 13.		
	83. Item 88 was Qty 13.		
	84. Item 89 was Qty 13.		
	85. Item 90 was Qty 13.		
	86. Item 91 was Qty 13.		
	87. Item 92 was Qty 13.		
	88. Item 93 was Qty 13.		
	89. Item 94 was Qty 13.		
	90. Item 95 was Qty 13.		
	91. Item 96 was Qty 13.		
	92. Item 97 was Qty 13.		
	93. Item 98 was Qty 13.		
	94. Item 99 was Qty 13.		
	95. Item 100 was Qty 13.		
	96. Item 101 was Qty 13.		
	97. Item 102 was Qty 13.		
	98. Item 103 was Qty 13.		
	99. Item 104 was Qty 13.		
	100. Item 105 was Qty 13.		
	101. Item 106 was Qty 13.		
	102. Item 107 was Qty 13.		
	103. Item 108 was Qty 13.		
	104. Item 109 was Qty 13.		
	105. Item 110 was Qty 13.		
	106. Item 111 was Qty 13.		
	107. Item 112 was Qty 13.		
	108. Item 113 was Qty 13.		
	109. Item 114 was Qty 13.		
	110. Item 115 was Qty 13.		
	111. Item 116 was Qty 13.		
	112. Item 117 was Qty 13.		
	113. Item 118 was Qty 13.		
	114. Item 119 was Qty 13.		

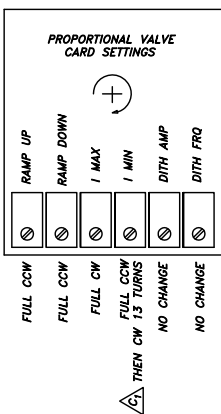

ITEM	NAME	DESCRIPTION	QTY	MATERIAL	SCALE		VENDOR		NOTE	MASS
					RAW	FIN	RAW	FIN		
23	601-150-122	END COVER, TERMINAL 1 IN - 2 OUT								
22	601-150-121	TERMINAL SPRING 1 IN - 2 OUT	3							
21	MP-6000-P-016	Wire Ducting, 1" x 2" High x 5 1/2" Long	1	601-165-069						
20	601-165-061	End Stop	6							
19	MP-6000-P-012	Wire Ducting, 1" x 2" High x 6 3/4" Long	1	601-165-069						
18	MP-6000-P-006	Wire Ducting, 1" x 2" High x 10" Long	3	601-165-069						
17	MP-6000-P-005	Din Rail, 9 1/2" Lg	1	601-160-081						
16	MP-6000-P-004	Din Rail, 12" Lg	1	601-160-081						
15	MP-6000-P-003	Panel Drilling	1							
14	601-160-275	Relay Socket, Screw Terminal	2							
13	601-160-274	Controller Driver Card (for Prop Valve)	1							
12	601-160-288	Power Supply, 120-230 VAC to 24 VDC, 5 AMP, (120 Watt)	1							
11	601-160-196	Relay Miniature, SPDT, 15 A, 24 VDC Coil, LED w/Bypass	2							
10	601-150-116	Top Jumper Bar, 5 Pole, Screwless	1							
9	601-150-115	Top Jumper Bar, 4 Pole, Screwless	1							
8	601-150-119	End Cover, Terminal, 1to1 Pass Thru	1							
7	601-150-118	End Cover, Terminal, 1in, 2out	3							
6	601-150-117	Terminal, Spring, 1to1 Pass Thru	8							
5	601-150-105	Terminal, Spring, 1in, 2out	16							
4	601-120-122	Circuit Breaker, 1 Pole, 5 Amp, C-CURVE	1							
3	601-120-125	Overload Protector, IEC, 9-13 Amp	1							
2	601-120-092	Circuit Breaker, 3 Pole, 16 Amp, C-CURVE	1							
1	601-100-094	IEC Contactor, 24 VDC Coil, 3 Pole	1							

**NOTICE OF CONFIDENTIAL INFORMATION**


Technical drawing of the terminal strip assembly, showing exploded and assembled views with numbered callouts:

- 1: Main terminal block
- 3: Mounting bracket
- 5: Terminal strip (x7)
- 5: Terminal strip (x4)
- 5: Terminal strip (x5)
- 6: Terminal strip (x8)
- 7: Mounting bracket
- 8: Mounting bracket
- 9: Mounting bracket
- 10: Mounting bracket
- 17: Mounting bracket
- 20: Mounting bracket

TERMINAL STRIP  
DETAIL:

***D-SIZE***

<p><b>NOTICE OF CONFIDENTIAL INFORMATION</b></p> <p>INFORMATION CONTAINED HEREIN IS CONFIDENTIAL AND PROPERTY OF MOHAWK RESOURCES LTD. IT SHALL BE USED SOLELY FOR PURPOSES OF INSPECTION, INSTALLATION OR MAINTENANCE. THE INFORMATION SHOWN MUST NOT BE USED, OR DISCLOSED TO ANY OTHER PARTY, WITHOUT THE WRITTEN PERMISSION OF MOHAWK RESOURCES LTD. THE DESIGN FOR ANY OTHER PARTS/COMPONENTS UNRELATED TO THIS DESIGN IS NOT TO BE REPRODUCED OR COPIED.</p>		<p><b>NOTES</b></p> <ol style="list-style-type: none"> <li>1. REMOVE ALL SHARP CORNERS &amp; EDGES.</li> <li>2. UNLESS OTHERWISE SPECIFIED, SURFACE FINISH TO BE 125 RMS.</li> <li>3. WELDING MEDIUM SHALL CONFORM TO AWS SPECIFICATIONS TO E-70XX ELECTRODES OR E-70XX CODE 53 FLUX CORE WIRE ONLY.</li> </ol>		<p><b>TOLERANCES</b></p> <p>ANGULAR ± 1°          DIMENSIONAL ± .030          HOLE DIA ± .005          SHAFT DIA ± .005          CHAMFER ± .005</p>		<p>SCALE  <b>1=1</b></p>		<p>DRAWN  <b>RWY7089</b></p>		<p><b>MOHAWK RESOURCES LTD.</b></p>	
				<p>CHECKED</p>		<p>APPROVED</p>		<p>TITLE  <b>MP SLUIT BOX - AC PANEL ASSEMBLY</b></p>			
				<p>DATE  <b>10/2011</b></p>		<p>FROM  <b>25</b></p>		<p>DRAWING NUMBER  <b>N/A</b></p>		<p>PROJECT  <b>MP-6000-A-007</b></p>	
				<p>FILE NAME  <b>MP-6000-A-007</b></p>		<p>REV  <b>1</b></p>		<p>DATE  <b>10/2011</b></p>		<p>BY  <b>25</b></p>	
				<p>DESCRIPTION  <b>MP-6000-A-007</b></p>		<p>REV  <b>1</b></p>		<p>DATE  <b>10/2011</b></p>		<p>BY  <b>25</b></p>	
				<p>DESCRIPTION  <b>MP-6000-A-007</b></p>		<p>REV  <b>1</b></p>		<p>DATE  <b>10/2011</b></p>		<p>BY  <b>25</b></p>	
				<p>DESCRIPTION  <b>MP-6000-A-007</b></p>		<p>REV  <b>1</b></p>		<p>DATE  <b>10/2011</b></p>		<p>BY  <b>25</b></p>	
				<p>DESCRIPTION  <b>MP-6000-A-007</b></p>		<p>REV  <b>1</b></p>		<p>DATE  <b>10/2011</b></p>		<p>BY  <b>25</b></p>	
				<p>DESCRIPTION  <b>MP-6000-A-007</b></p>		<p>REV  <b>1</b></p>		<p>DATE  <b>10/2011</b></p>		<p>BY  <b>25</b></p>	
				<p>DESCRIPTION  <b>MP-6000-A-007</b></p>		<p>REV  <b>1</b></p>		<p>DATE  <b>10/2011</b></p>		<p>BY  <b>25</b></p>	
				<p>DESCRIPTION  <b>MP-6000-A-007</b></p>		<p>REV  <b>1</b></p>		<p>DATE  <b>10/2011</b></p>		<p>BY  <b>25</b></p>	
				<p>DESCRIPTION  <b>MP-6000-A-007</b></p>		<p>REV  <b>1</b></p>		<p>DATE  <b>10/2011</b></p>		<p>BY  <b>25</b></p>	
				<p>DESCRIPTION  <b>MP-6000-A-007</b></p>		<p>REV  <b>1</b></p>		<p>DATE  <b>10/2011</b></p>		<p>BY  <b>25</b></p>	
				<p>DESCRIPTION  <b>MP-6000-A-007</b></p>		<p>REV  <b>1</b></p>		<p>DATE  <b>10/2011</b></p>		<p>BY  <b>25</b></p>	
				<p>DESCRIPTION  <b>MP-6000-A-007</b></p>		<p>REV  <b>1</b></p>		<p>DATE  <b>10/2011</b></p>		<p>BY  <b>25</b></p>	
				<p>DESCRIPTION  <b>MP-6000-A-007</b></p>		<p>REV  <b>1</b></p>		<p>DATE  <b>10/2011</b></p>		<p>BY  <b>25</b></p>	
				<p>DESCRIPTION  <b>MP-6000-A-007</b></p>		<p>REV  <b>1</b></p>		<p>DATE  <b>10/2011</b></p>		<p>BY  <b>25</b></p>	
				<p>DESCRIPTION  <b>MP-6000-A-007</b></p>		<p>REV  <b>1</b></p>		<p>DATE  <b>10/2011</b></p>		<p>BY  <b>25</b></p>	
				<p>DESCRIPTION  <b>MP-6000-A-007</b></p>		<p>REV  <b>1</b></p>		<p>DATE  <b>10/2011</b></p>		<p>BY  <b>25</b></p>	
				<p>DESCRIPTION  <b>MP-6000-A-007</b></p>		<p>REV  <b>1</b></p>		<p>DATE  <b>10/2011</b></p>		<p>BY  <b>25</b></p>	
				<p>DESCRIPTION  <b>MP-6000-A-007</b></p>		<p>REV  <b>1</b></p>		<p>DATE  <b>10/2011</b></p>		<p>BY  <b>25</b></p>	
				<p>DESCRIPTION  <b>MP-6000-A-007</b></p>		<p>REV  <b>1</b></p>		<p>DATE  <b>10/2011</b></p>		<p>BY  <b>25</b></p>	
				<p>DESCRIPTION  <b>MP-6000-A-007</b></p>		<p>REV  <b>1</b></p>		<p>DATE  <b>10/2011</b></p>		<p>BY  <b>25</b></p>	
				<p>DESCRIPTION  <b>MP-6000-A-007</b></p>		<p>REV  <b>1</b></p>		<p>DATE  <b>10/2011</b></p>		<p>BY  <b>25</b></p>	
				<p>DESCRIPTION  <b>MP-6000-A-007</b></p>		<p>REV  <b>1</b></p>		<p>DATE  <b>10/2011</b></p>		<p>BY  <b>25</b></p>	
				<p>DESCRIPTION  <b>MP-6000-A-007</b></p>		<p>REV  <b>1</b></p>		<p>DATE  <b>10/2011</b></p>		<p>BY  <b>25</b></p>	
				<p>DESCRIPTION  <b>MP-6000-A-007</b></p>		<p>REV  <b>1</b></p>		<p>DATE  <b>10/2011</b></p>		<p>BY  <b>25</b></p>	
				<p>DESCRIPTION  <b>MP-6000-A-007</b></p>							

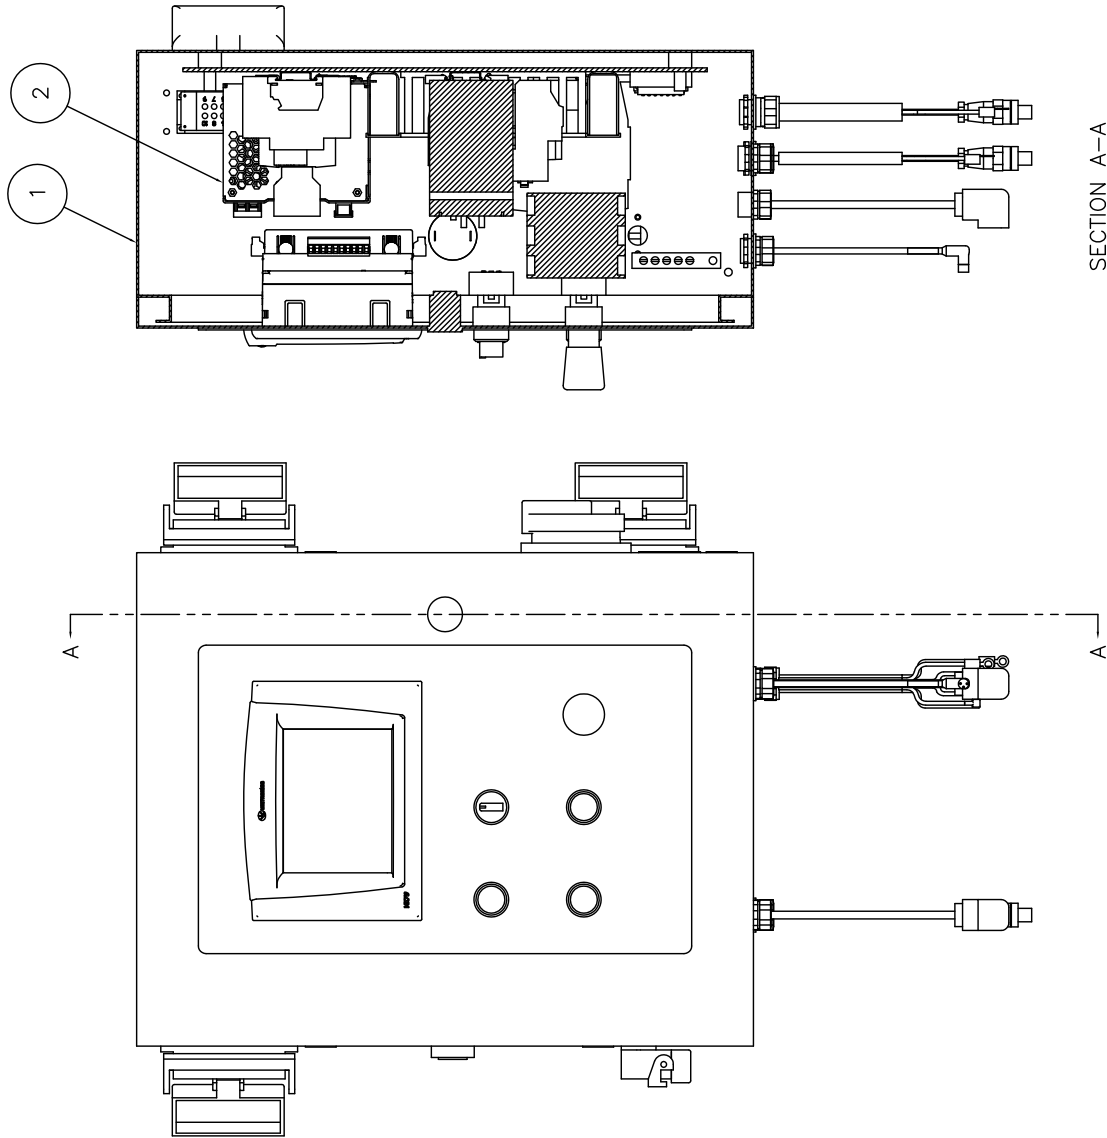


MASTER

- 3 4 5 6 7 8 9 10 11


(WIRE USED - NOT SHOWN)

11	MP-6000-A-006	Misc. Parts for Box Assy	1
10	601-150-068	Wire, Yellow, Type MTW, 18 Ga, Total Inches	6
9	601-150-067	Wire, Blue, Type MTW, 18 Ga, Total Inches	30
8	601-150-066	Wire, Purple, Type MTW, 18 Ga, Total Inches	147
7	601-150-065	Wire, Red, Type MTW, 18 Ga, Total Inches	67
6	601-150-063	Wire, White, Type MTW, 18 Ga, Total Inches	50
5	601-150-062	Wire, Green, Type MTW, 18 Ga, Total Inches	12
4	601-150-038	Wire, Black, Type THHN, 14 Ga, Total Inches	20
3	601-150-003	Wire, Black, Type THHN, 12 Ga, Total Inches	18
2	MP-6000-A-004	Master Panel Assembly	1
1	MP-6000-A-003	Master Enclosure Assembly	1
ITEM	NAME	DESCRIPTION	QTY

NOTICE OF CONFIDENTIAL INFORMATION		NOTES		TOLERANCES		SCALE		DRAWN		MOHAWK RESOURCES LTD.	
INFORMATION CONTAINED HEREIN IS CONFIDENTIAL AND PROPERTY OF MOHAWK RESOURCES LTD. IT SHALL BE USED ONLY FOR THE PURPOSES OF THE PROJECT AND NOT BE DISCLOSED BY THE RECIPIENT FOR ANY OTHER PURPOSES WHATSOEVER.		1. REWORK ALL SHARP CORNERS & EDGES. 2. UNLESS OTHERWISE SPECIFIED, SURFACE FINISH SHALL CONFORM TO A/S. 3. WELDING MEDIUM SHALL CONFORM TO A/S. 4. WELDING SHALL BE DONE IN ACCORDANCE WITH E-7011 CODE S-3 FLUX CURE WIRE ONLY.		FINISH TOL. ± .030 BLACK ± .030 FILE MARK MP-6000-A-005		1/0" = 10"		RWW089		MOBILE POST	
						CHECKED		APPROVED		TITLE	
						DATE		WEIGHT		FROM	
						10/2011		30		10/8	
						NEXT ASSEMBLY				DRAWING NUMBER	
										MP-6000-A-005	

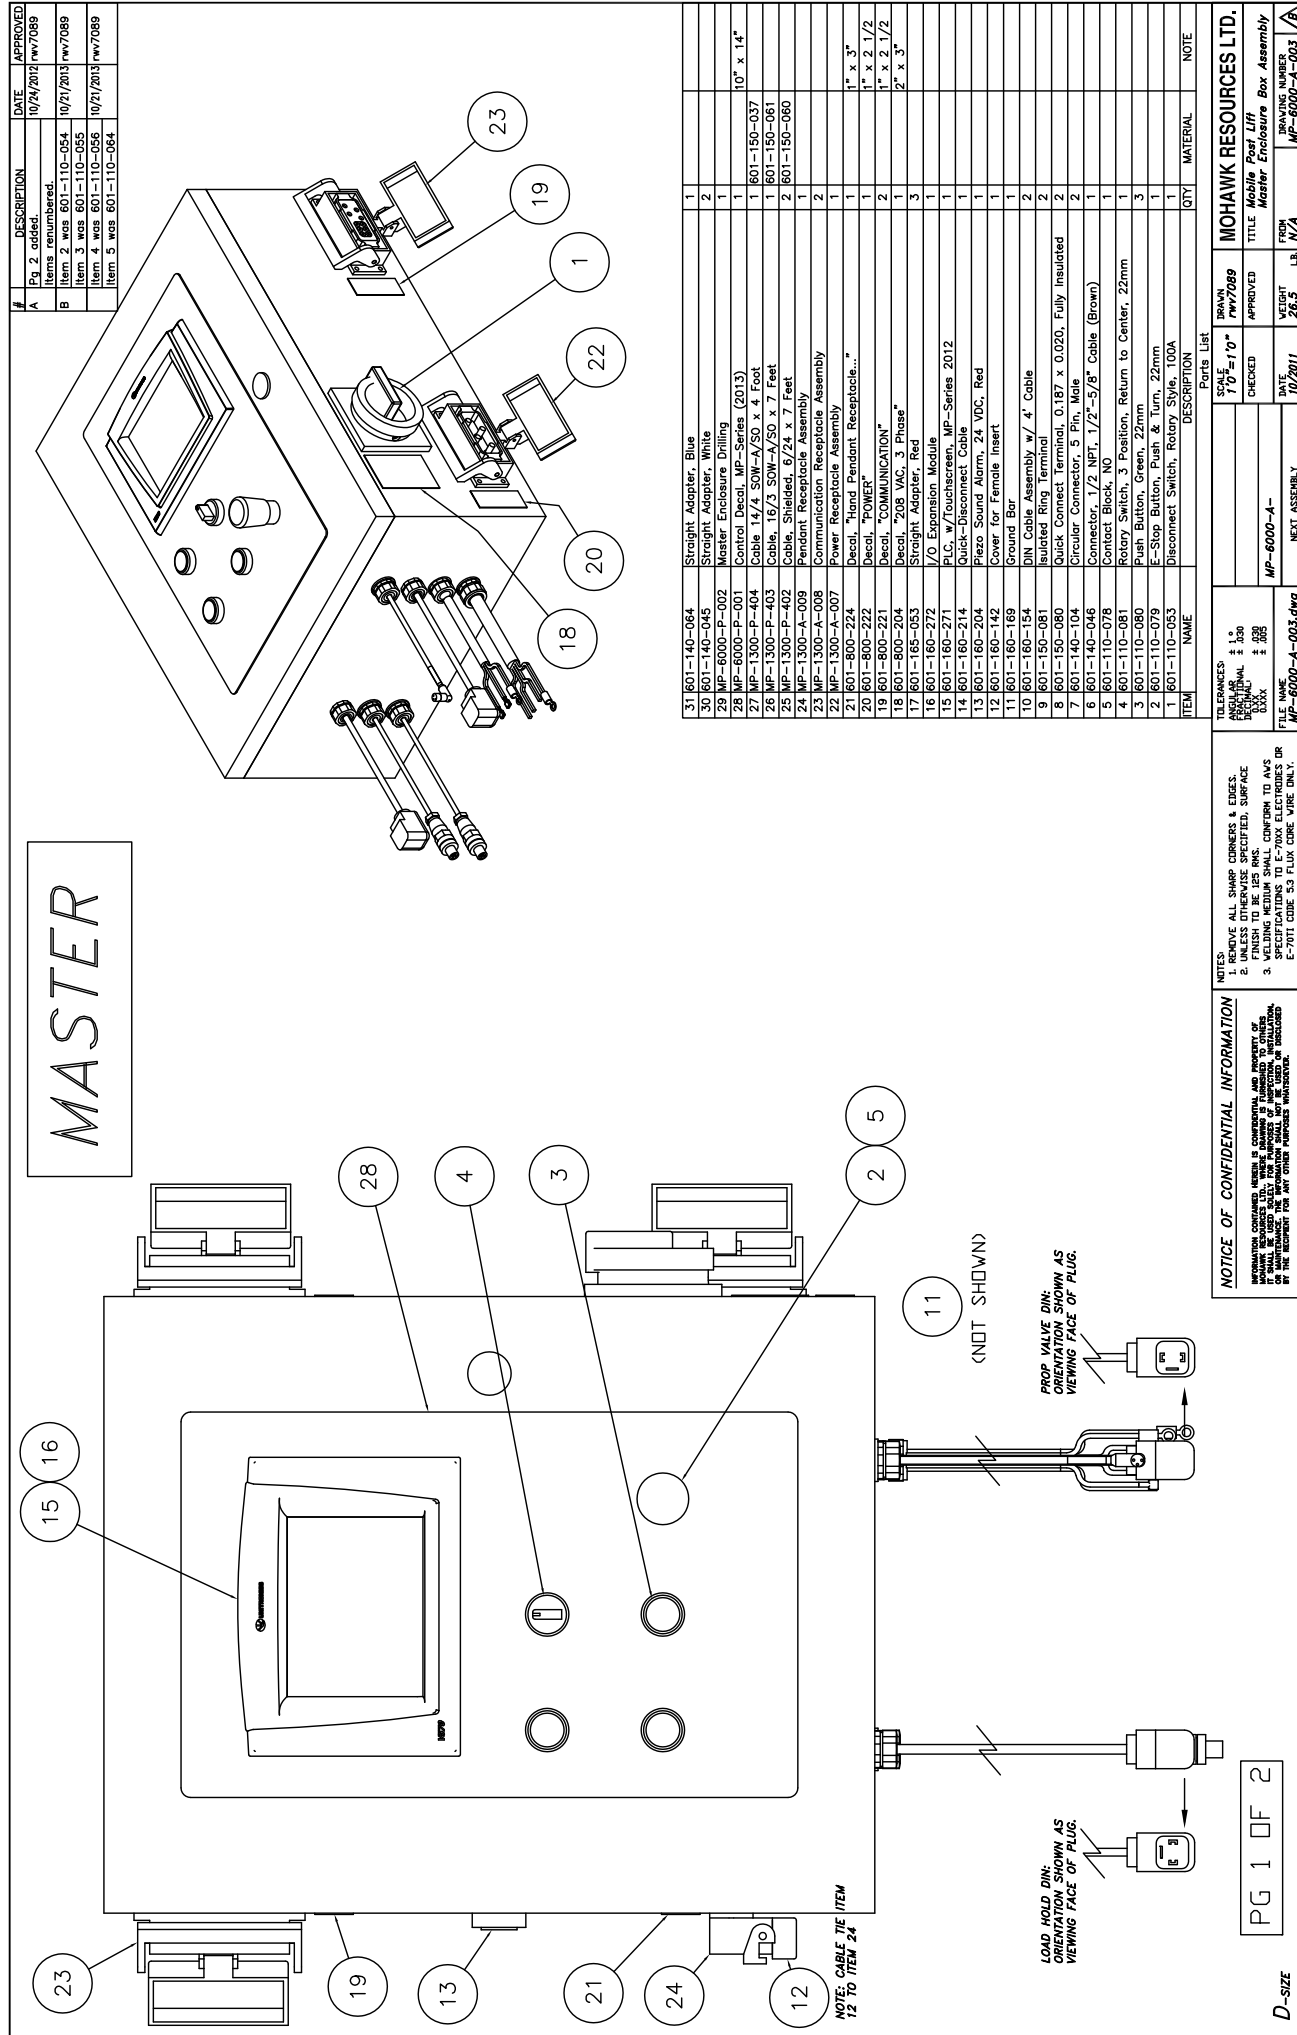

# MASTER

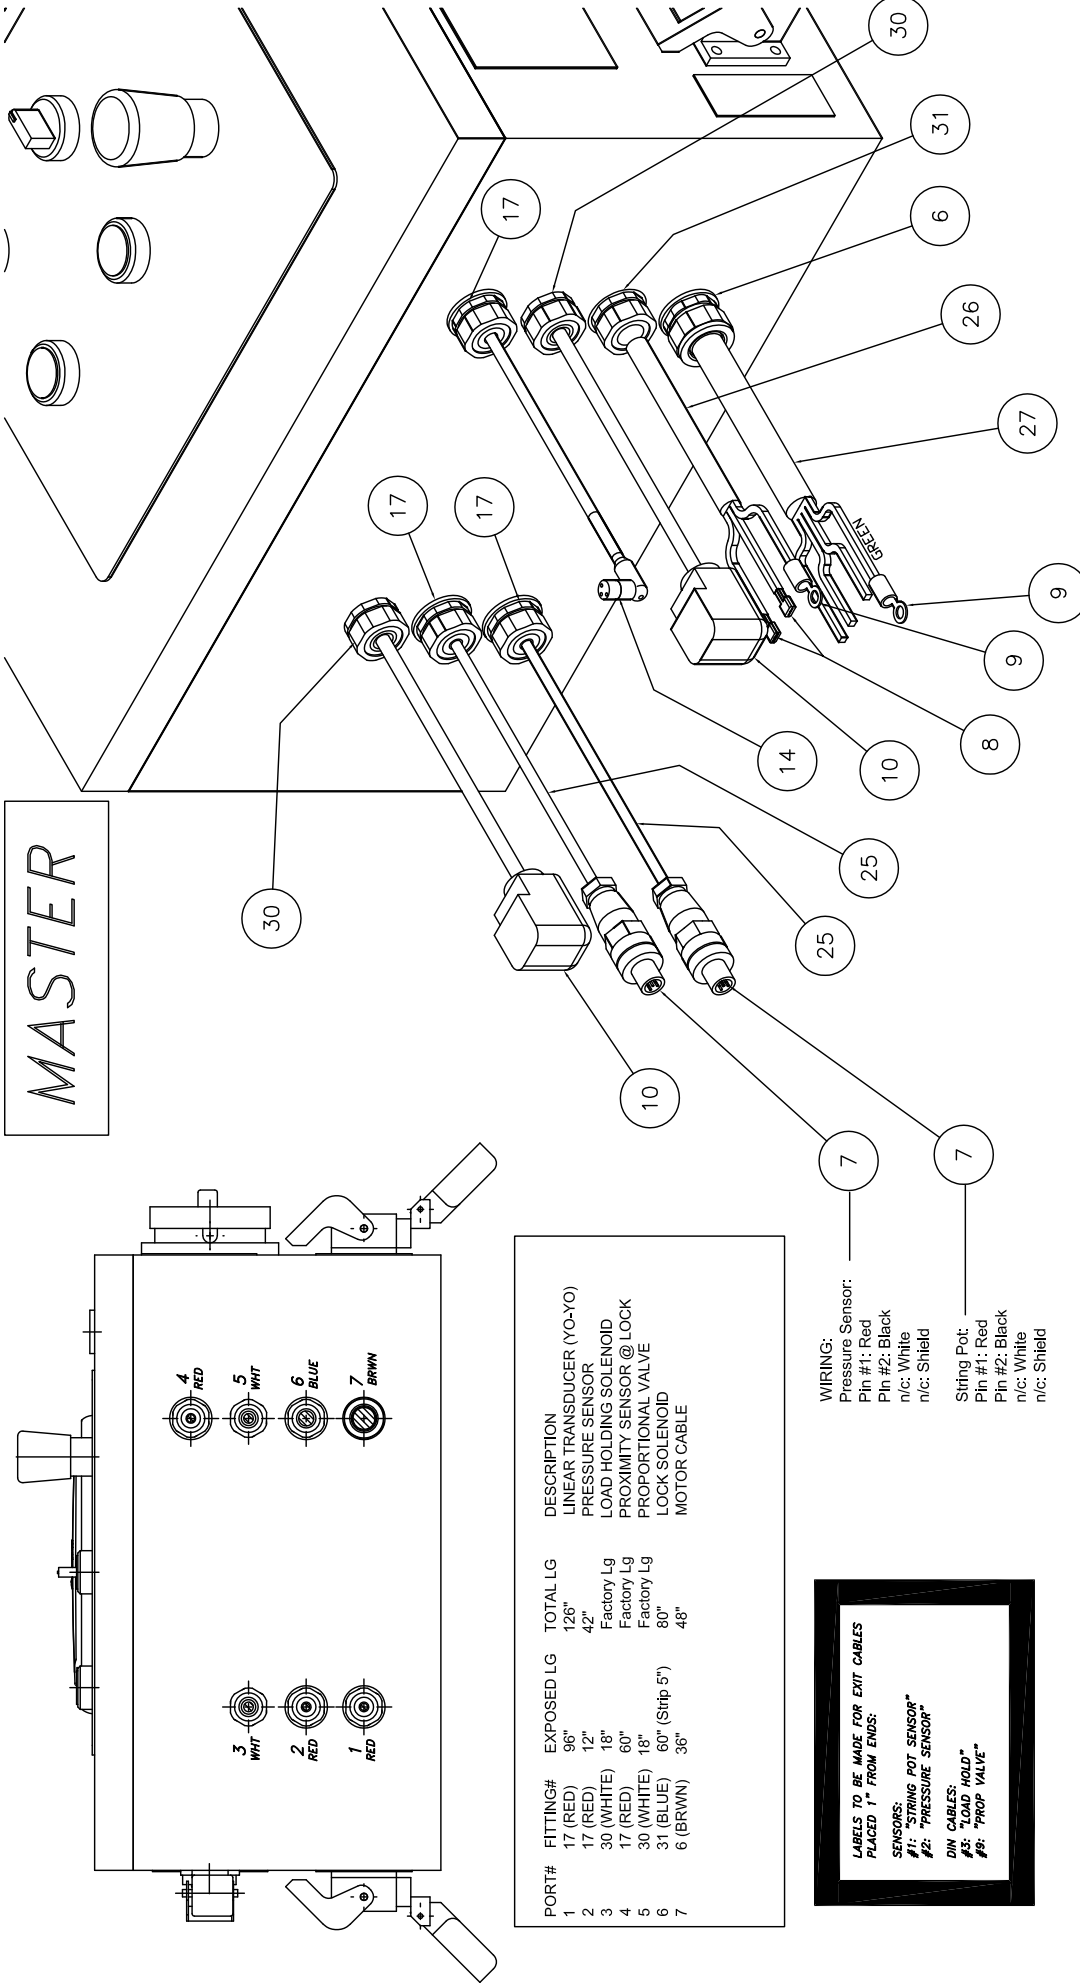

**NOTICE OF CONFIDENTIAL INFORMATION**  
 INFORMATION CONTAINED HEREIN IS CONFIDENTIAL AND PROPERTY OF MOHAWK RESOURCES LTD. IT IS TO BE KEPT SECRET AND NOT DISCLOSED OR REPRODUCED IN ANY MANNER WITHOUT THE WRITTEN PERMISSION OF MOHAWK RESOURCES LTD. THIS NOTICE IS VALID FOR THE ENTIRE TERM OF THE AGREEMENT AND ANY OTHER APPLICABLE LAWS.

**NOTES:**  
 1. SURFACE ALL SURF FINISHES & EDGES.  
 2. UNLESS OTHERWISE SPECIFIED, SURFACE FINISH SHALL CONFORM TO AAS.  
 3. WELDING SHALL CONFORM TO AAS.  
 4. DIMENSIONS SHALL BE TO CENTER UNLESS OTHERWISE SPECIFIED.  
 5. E-7011 CODE S3 FLUX CORD WIRE ONLY.

**TOLERANCES:**  
 FINISH: ± .030  
 DIMENSIONS: ± .030  
 HOLE: ± .030  
 FILE NAME: MP-6000-A-003.dwg

**MP-6000-A-**  
 NEXT ASSEMBLY



**DATE:** 10/20/11  
**DESIGNER:** JLB  
**APPROVED:** JLB

**SCALE:** 1" = 1'-0"  
**DRAWN:** RW7089

**MOHAWK RESOURCES LTD.**  
**TITLE:** Mobile Post Lift Master Enclosure Box Assembly  
**FROM:** N/A  
**REV:** 1  
**DATE:** 10/20/11  
**FILE NAME:** MP-6000-A-003.dwg

#	DESCRIPTION	DATE	APPROVED
A	Items re-arranged on panel	10/21/2011	rw7089
B			
1	Item 1 was 601-100-085	10/21/2013	rw7089
2	Item 2 was 601-100-091		
3	Item 3 was 601-100-092	10/21/2013	rw7089
4	Item 4 was 601-100-093		
5	Item 6 was 601-100-105	10/21/2013	rw7089
6	Item 14 was 601-160-143		
7	Item 16 was 601-160-273	10/21/2013	rw7089

MASTER

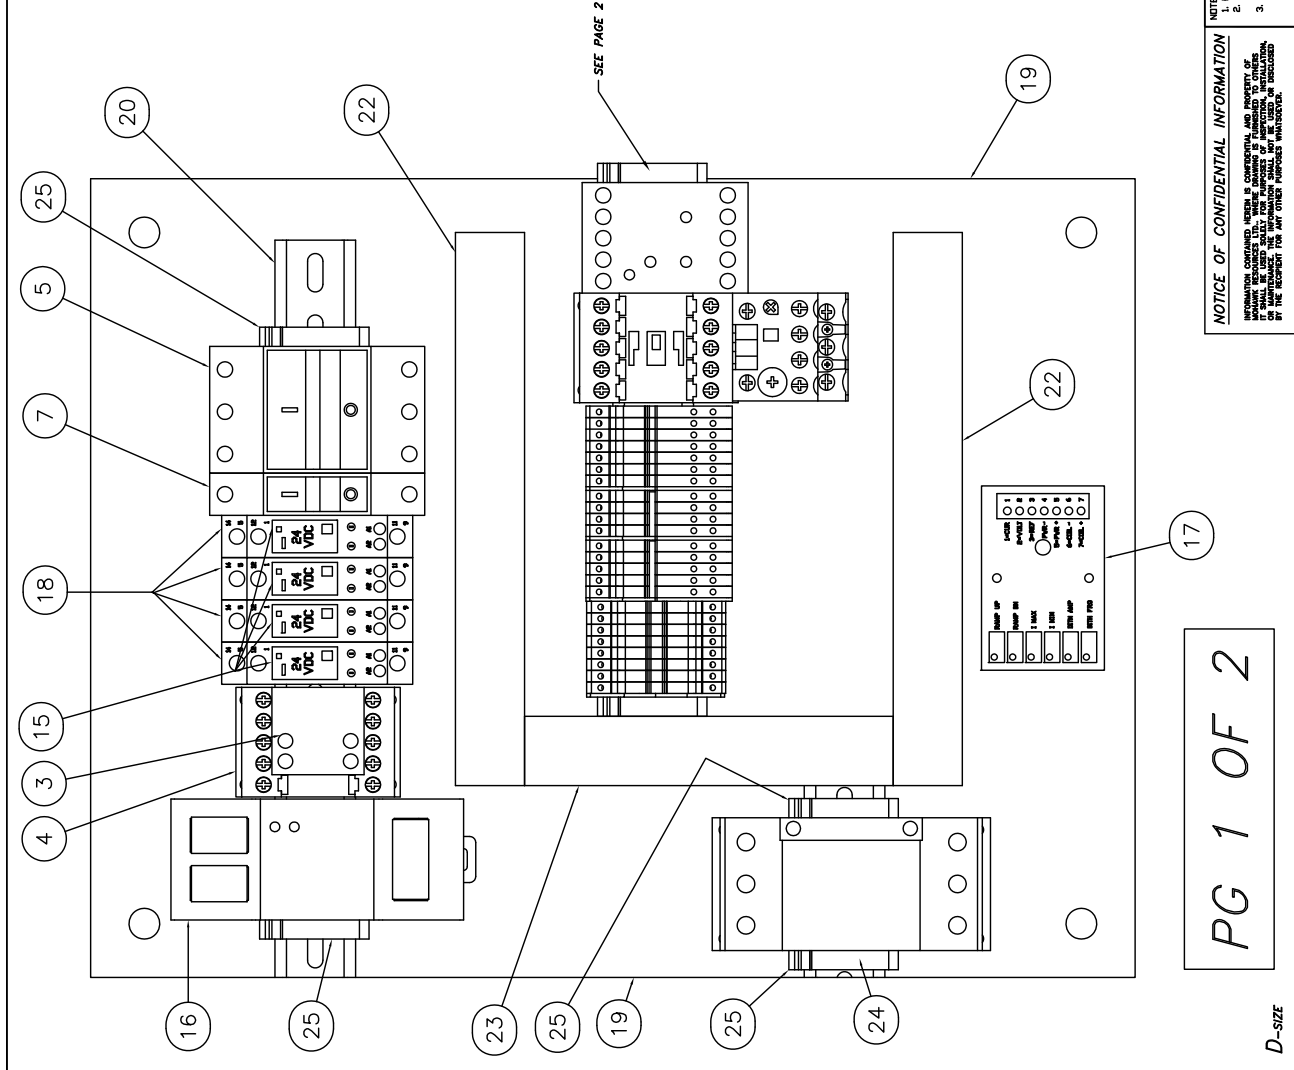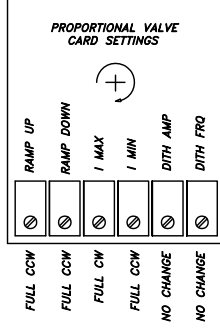

ITEM	NAME	DESCRIPTION	QTY	MATERIAL	NOTE
25	601-165-061	End Stop	6		
24	MP-6000-P-013	Din Rail, 3 1/4 Lg	1	601-160-081	
23	MP-6000-P-012	Wire Ducting, 1" x 2" High x 6" Long	1	601-165-069	
22	MP-6000-P-006	Wire Ducting, 1" x 2" High x 9" Long	2	601-165-069	
21	MP-6000-P-005	Din Rail, 9" Lg	1	601-160-081	
20	MP-6000-P-004	Din Rail, 12" Lg	1	601-160-081	
19	MP-6000-P-003	Panel Drilling	1		1/8 x 13" x 17"
18	601-160-275	Relay Socket, Screw Terminal	4		
17	601-160-274	Controller Driver Card (for Prop Valve)	1		0.2
16	601-160-288	Power Supply, 120-230 VAC to 24 VDC, 5 AMP, (120 Watt)	1		
15	601-160-196	Relay, Miniature, SPDT, 15 A, 24 VDC Coil, LED w/Bypass	4		
14	601-160-287	Phase Monitoring Relay (208-480 VAC)	1		
13	601-150-116	Top Jumper Bar, 5 Pole, Screwless	1		
12	601-150-115	Top Jumper Bar, 4 Pole, Screwless	1		
11	601-150-119	End Cover, Terminal, 1to1 Pass Thru	1		
10	601-150-118	End Cover, Terminal, 1in, 2out	3		
9	601-150-117	Terminal, Spring, 1to1 Pass Thru	8		
8	601-150-105	Terminal, Spring, 1in, 2out	16		
7	601-120-122	Circuit Breaker, 1 Pole, 5 Amp, C-CURVE	1		
6	601-120-125	Overload Relay, IEC, 9-13 Amp	1		
5	601-120-092	Circuit Breaker, 3 Pole, 16 Amp, C-CURVE	1		
4	601-100-095	IEC Contactor, 240 VAC Coil, 3 Pole	1		
3	601-100-097	Auxiliary Contact, Top Mount, 2xNC	1		
2	601-100-096	IEC Contactor, 24 VDC Coil, 75 Amp, 3 Pole	1		
1	601-100-094	IEC Contactor, 24 VDC Coil, 3 Pole	1		
0			0		

NOTICE OF CONFIDENTIAL INFORMATION  
THIS DOCUMENT CONTAINS INFORMATION OF CONFIDENTIAL AND PROPRIETARY OF MOHAWK RESOURCES LTD. IT IS NOT TO BE DISCLOSED TO OTHERS WITHOUT THE WRITTEN PERMISSION OF MOHAWK RESOURCES LTD. IT IS THE PROPERTY OF MOHAWK RESOURCES LTD. AND IT IS TO BE KEPT IN CONFIDENTIALITY BY THE RECIPIENT FOR ANY OTHER PURPOSES WHATSOEVER.

ITEM	NAME	DESCRIPTION	QTY	MATERIAL	NOTE
25	601-165-061	End Stop	6		
24	MP-6000-P-013	Din Rail, 3 1/4 Lg	1	601-160-081	
23	MP-6000-P-012	Wire Ducting, 1" x 2" High x 6" Long	1	601-165-069	
22	MP-6000-P-006	Wire Ducting, 1" x 2" High x 9" Long	2	601-165-069	
21	MP-6000-P-005	Din Rail, 9" Lg	1	601-160-081	
20	MP-6000-P-004	Din Rail, 12" Lg	1	601-160-081	
19	MP-6000-P-003	Panel Drilling	1		1/8 x 13" x 17"
18	601-160-275	Relay Socket, Screw Terminal	4		
17	601-160-274	Controller Driver Card (for Prop Valve)	1		0.2
16	601-160-288	Power Supply, 120-230 VAC to 24 VDC, 5 AMP, (120 Watt)	1		
15	601-160-196	Relay, Miniature, SPDT, 15 A, 24 VDC Coil, LED w/Bypass	4		
14	601-160-287	Phase Monitoring Relay (208-480 VAC)	1		
13	601-150-116	Top Jumper Bar, 5 Pole, Screwless	1		
12	601-150-115	Top Jumper Bar, 4 Pole, Screwless	1		
11	601-150-119	End Cover, Terminal, 1to1 Pass Thru	1		
10	601-150-118	End Cover, Terminal, 1in, 2out	3		
9	601-150-117	Terminal, Spring, 1to1 Pass Thru	8		
8	601-150-105	Terminal, Spring, 1in, 2out	16		
7	601-120-122	Circuit Breaker, 1 Pole, 5 Amp, C-CURVE	1		
6	601-120-125	Overload Relay, IEC, 9-13 Amp	1		
5	601-120-092	Circuit Breaker, 3 Pole, 16 Amp, C-CURVE	1		
4	601-100-095	IEC Contactor, 240 VAC Coil, 3 Pole	1		
3	601-100-097	Auxiliary Contact, Top Mount, 2xNC	1		
2	601-100-096	IEC Contactor, 24 VDC Coil, 75 Amp, 3 Pole	1		
1	601-100-094	IEC Contactor, 24 VDC Coil, 3 Pole	1		
0			0		

PG 1 OF 2

D-SIZE





The drawing illustrates the assembly of a terminal strip. The top part is a perspective view showing the terminal strip (1) being inserted into a housing (2) which is mounted on a base plate (3). A large curved arrow indicates the direction of assembly. The bottom part is a detailed cross-section of the terminal strip, showing the internal wiring (4) and the terminal contacts (5). The terminal strip is labeled with various dimensions and part numbers: 1, 2, 3, 4, 5, 6, 7, 8, 9, 10, 11, 12, 13, 14, 15, 16, 17, 18, 19, 20, 21, 22, 23, 24, 25, 26, 27, 28, 29, 30, 31, 32, 33, 34, 35, 36, 37, 38, 39, 40, 41, 42, 43, 44, 45, 46, 47, 48, 49, 50, 51, 52, 53, 54, 55, 56, 57, 58, 59, 60, 61, 62, 63, 64, 65, 66, 67, 68, 69, 70, 71, 72, 73, 74, 75, 76, 77, 78, 79, 80, 81, 82, 83, 84, 85, 86, 87, 88, 89, 90, 91, 92, 93, 94, 95, 96, 97, 98, 99, 100.

***D-SIZE***

<p><b>NOTICE OF CONFIDENTIAL INFORMATION</b></p> <p>INFORMATION CONTAINED HEREIN IS CONFIDENTIAL AND PROPERTY OF MOHAWK RESOURCES LTD. THE INFORMATION CONTAINED HEREIN IS NOT TO BE DISCLOSED TO ANY OTHER PARTY WITHOUT THE WRITTEN PERMISSION OF MOHAWK RESOURCES LTD. ANY DISCLOSURE OF THIS INFORMATION TO ANY OTHER PARTY WITHOUT THE WRITTEN PERMISSION OF MOHAWK RESOURCES LTD. IS PROHIBITED.</p>		<p><b>NOTES</b></p> <ol style="list-style-type: none"> <li>1. REMOVE ALL SHARP CORNERS &amp; EDGES.</li> <li>2. UNLESS OTHERWISE SPECIFIED, SURFACE FINISH TO BE 125 RMS. CONFORM TO AWS SPECIFICATIONS TO E-TYPE ELECTRODES OR E-7011 CODE 5.3 FLUX CORE WIRE ONLY.</li> </ol>		<p><b>TOLERANCES</b></p> <p>ANGULAR: ± 1.0          DIMENSIONAL: ± .006          SURF. FINISH: 125 RMS          HOLE: ± .006</p>		<p><b>MP-6000-A-004</b></p> <p>FILE NAME: MP-6000-A-004</p>		<p><b>MP-6000-A-004</b></p> <p>NEXT ASSEMBLY</p>		<p><b>DATE</b> 10/20/2011</p> <p><b>WEIGHT</b> 25 LB</p> <p><b>TRAVEL NUMBER</b> MP-6000-A-004</p>		<p><b>APPROVED</b></p> <p><b>CHECKED</b></p> <p><b>SCALE</b> 1=1</p>		<p><b>DRAWN</b> RMV7009</p> <p><b>TITLE</b> MP MASTER BOX - AC PANEL ASSEMBLY</p>		<p><b>MOHAWK RESOURCES LTD.</b></p>	
--	--	---	--	--	--	---	--	--	--	--	--	--	--	---	--	-------------------------------------	--

CERTIFIABLE OPTION WITH X-PROOF PENDANT.

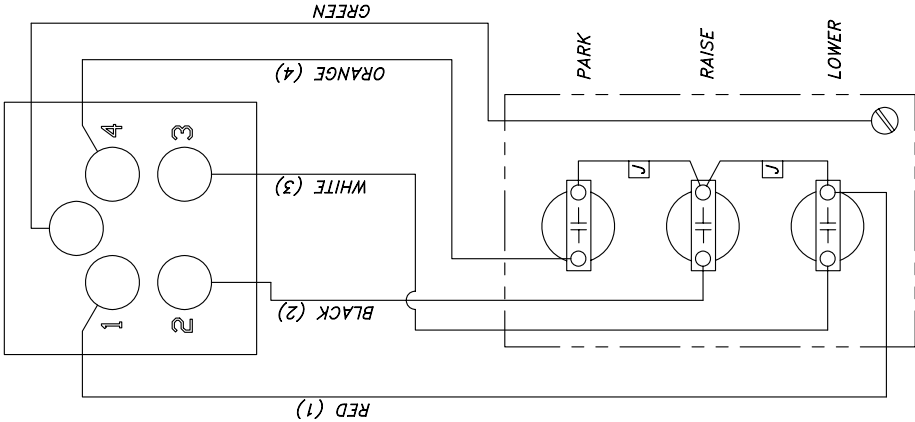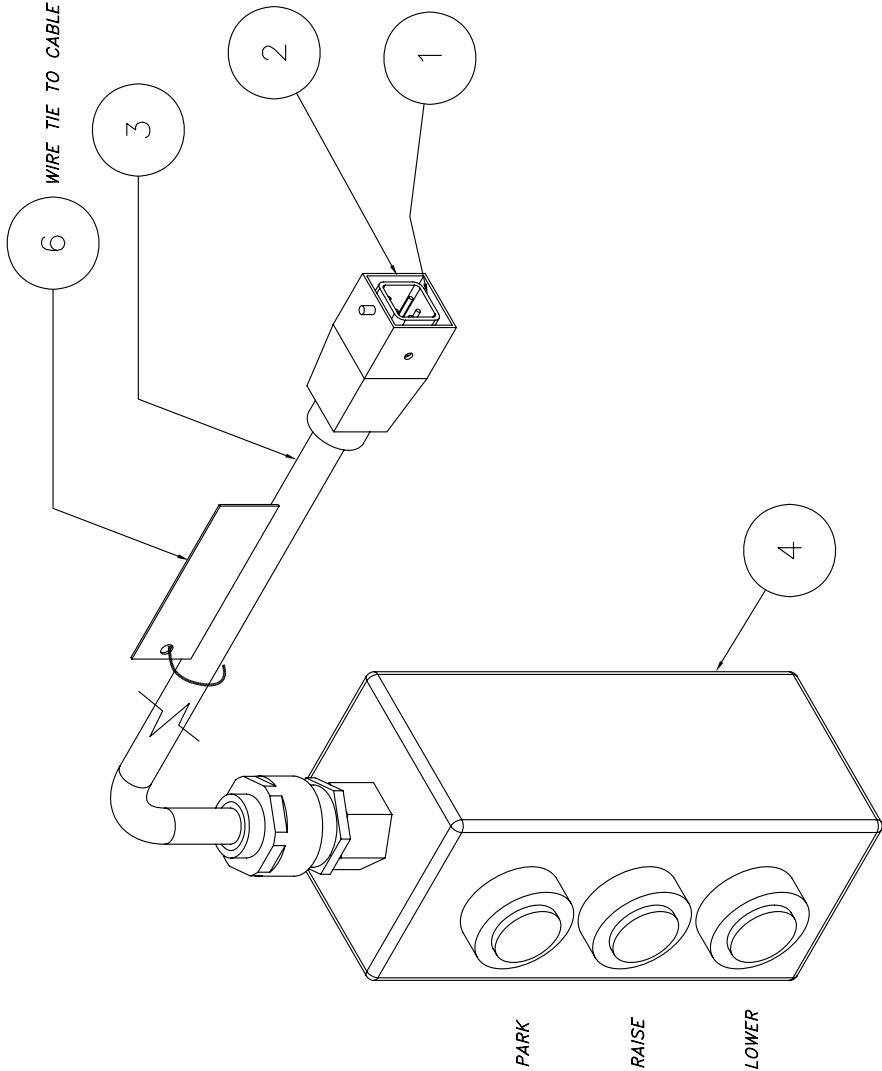


ITEM	NAME	DESCRIPTION	QTY
6	601-800-223	Plastic Tag, "Hand Pendant Option..."	1
5	601-140-046	Connector, 1/2 NPT, 1/2"-5/8" Cable (Brown)	1
4	601-160-168	Pendant, 3 Button, Class I, Div 2	1
3	601-150-082	Cable, 18/5 SOW x 25 Feet	1
2	601-160-139	Hood, Straight, Metallic w/ cable gland, PENDANT	1
1	601-160-193	4-Pin Insert, Male, PENDANT	1
ITEM NAME		DESCRIPTION	QTY

C-SIZE

Parts List

NOTICE OF CONFIDENTIAL INFORMATION		TOLERANCES:		SCALE	DRAWN	MOHAWK RESOURCES LTD.	
INFORMATION CONTAINED HEREIN IS CONFIDENTIAL AND PROPERTY OF MOHAWK RESOURCES LTD. IT IS TO BE USED ONLY FOR THE PURPOSES OF INSPECTION, OR MAINTENANCE. THE INFORMATION SHALL NOT BE USED OR DISCLOSED BY THE RECIPIENT FOR ANY OTHER PURPOSES WHATSOEVER.		1. REMOVE ALL SHARP CORNERS & EDGES.		1/8" = 1'-0"	rw7089	TITLE Mobile Post Lift Pendant Assembly	
		2. UNLESS OTHERWISE SPECIFIED, SURFACE FINISH TO BE 125 RMS.		CHECKED	APPROVED		
		3. WELDING MEDIUM SHALL CONFORM TO AWS SPECIFICATIONS TO E-70XX ELECTRODES OR E-70T1 CODE 5.3 FLUX CORE WIRE ONLY.		DATE	WEIGHT		
FILE NAME		MP-1300-A-020.dwg		10/10/2005	3	FROM	DRAWING NUMBER
NEXT ASSEMBLY		N/A				MP-1300-A-020	

#	DESCRIPTION	DATE	APPROVED
A	ITEM 8 was MP-3200-P-001	09/12/2012	rwv7089
	(MP-24 cyl was different than a MP-30)		

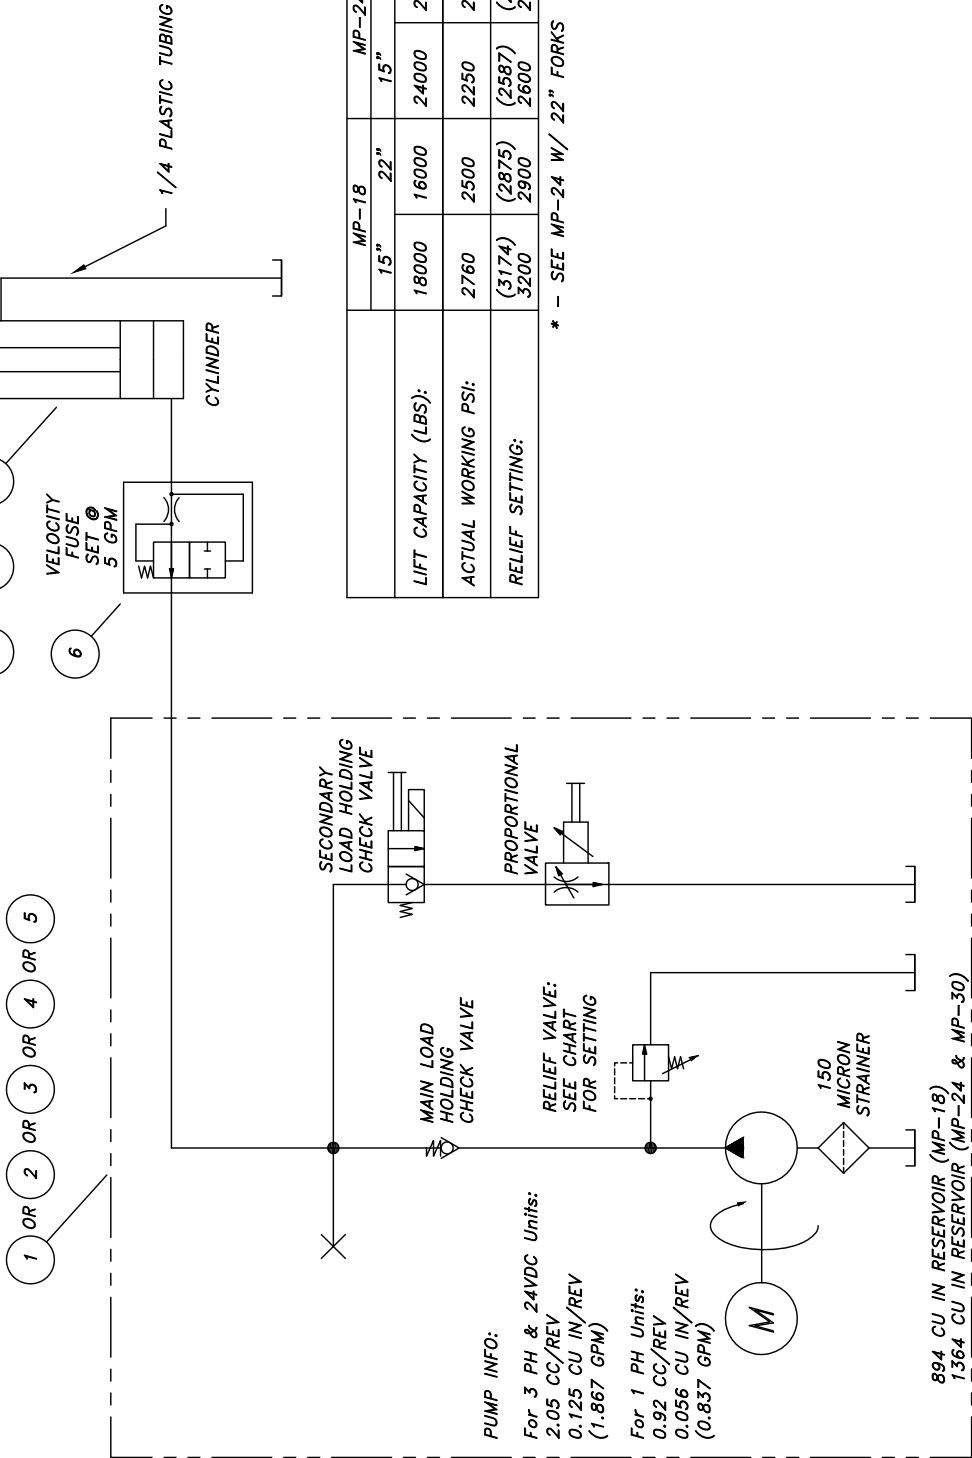

	MP-18		MP-24		MP-30	
	15"	22"	15"	22"	15"	22"
LIFT CAPACITY (LBS):	18000	16000	24000	21000	30000	*
ACTUAL WORKING PSI:	2760	2500	2250	2000	2700	*
RELIEF SETTING:	(3174) 3200	(2875) 2900	(2587) 2600	(2300) 2300	(3105) 3100	*

\* - SEE MP-24 W/ 22" FORKS

9	MP-3200-P-002	Cylinder Assembly (Purchased), 4" Bore x 67" (MP-24/30)	1
8			0
7	MP-0900-P-001	Cylinder Assembly (Purchased), 3" Bore x 67" (MP-18)	1
6	601-410-073	Velocity Fuse, 5 GPM	1
5	601-300-xxx	Power Unit w/Proportional Valving, Larger Reservoir (MP-24 & MP-30)	1
4	601-300-xxx	Power Unit, 24 VDC w/Proportional Valving (MP-18)	1
3	601-300-xxx	Power Unit, 2 1/2 HP, 550-600 VAC, 3 Ph w/Proportional Valving (MP-18)	1
2	601-300-xxx	Power Unit, 2 1/2 HP, 208-230 VAC, 1 Ph w/Proportional Valving (MP-18)	1
1	601-300-106	Power Unit, 2 1/2 HP, 230/460 VAC, 3 Ph w/Proportional Valving (MP-18)	1
ITEM	NAME	DESCRIPTION	QTY

C-SIZE

NOTES:		TOLERANCES:		SCALE		DRAWN		MOHAWK RESOURCES LTD.	
1. REMOVE ALL SHARP CORNERS & EDGES.		ANGULAR		1"0"=1'0"		CHECKED		APPROVED	
2. UNLESS OTHERWISE SPECIFIED, SURFACE FINISH TO BE 125 RMS.		FRACTIONAL		± .030		DATE		WEIGHT	
3. WELDING MEDIUM SHALL CONFORM TO AWS SPECIFICATIONS TO E-70XX ELECTRODES OR E-70T1 CODE 53 FLUX CORE WIRE ONLY.		DECIMAL		± .030		NEXT ASSEMBLY		FROM	
		0.005		± .005		MP-6000-		N/A	
		FILE NAME		MP-6000-A-050		DRAWING NUMBER		MP-6000-A-050	

NOTICE OF CONFIDENTIAL INFORMATION

INFORMATION CONTAINED HEREIN IS CONFIDENTIAL AND PROPERTY OF MOHAWK RESOURCES LTD. WHERE DRAWING IS FURNISHED TO OTHERS IT SHALL BE USED SOLELY FOR PURPOSES OF INSPECTION, INSTALLATION, OR MAINTENANCE. THE INFORMATION SHALL NOT BE USED OR DISCLOSED BY THE RECIPIENT FOR ANY OTHER PURPOSES WHATSOEVER.

# MOHAWK






## PARTS (24VDC Models)

MP-18-SERIES  
ELECTRIC/HYDRAULIC  
PORTABLE LIFT

24 VDC W/22" FORKS

WIDER

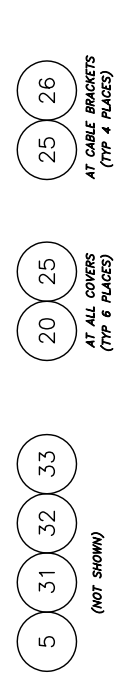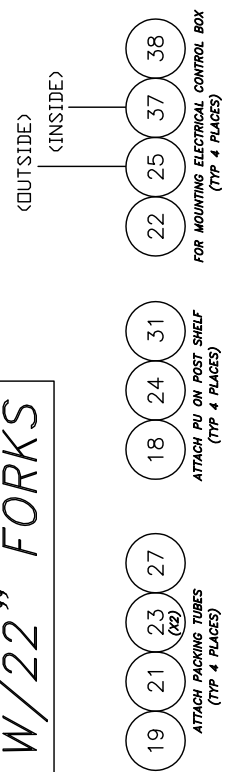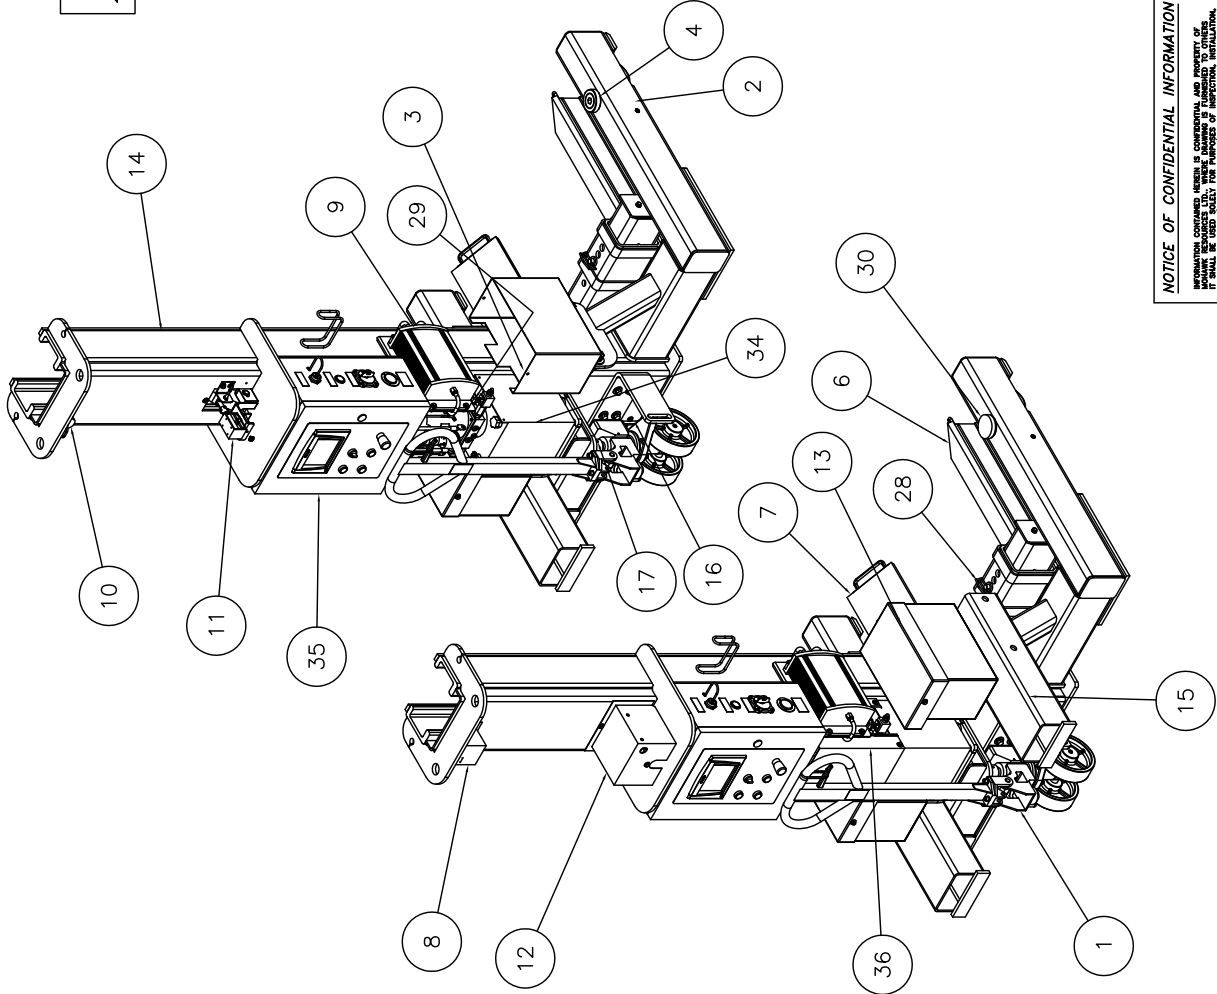

38	600-690-005	Nut, Nylon Lock, 1/4-20 NC	4
37	600-710-013	Washer, Flat, #10	4
36	600-640-039	PU Cover Assy (24 VDC)	1
35	600-A-003	PU Cover Assy (24 VDC)	1
34	600-A-017	PU Control Box Assy	1
33	600-A-017	PU Control Box Assy	1
32	600-A-017	PU Control Box Assy	1
31	600-A-011	Tag & Decal	1
30	600-A-011	Cable Assy, 36" Lg, Black	1
29	601-480-005	Cable Assy, 36" Lg, Red	1
28	601-420-017	Cable Assy, 36" Lg, 1/2 Thk	2
27	600-900-006	Blow Pin, 90 Deg, 1/8" Dia, 1/2" Lg	1
26	600-720-008	Washer, Flat, 3/4"	2
25	600-710-004	Washer, Lock, 5/16"	4
24	600-710-003	Washer, Flat, 1/4"	10
23	600-710-001	Washer, Flat, 5/16"	4
22	600-650-008	Cap Screw, Socket Head, 1/4-20 NF x 1" Lg, Grade 5 Zinc Plated	8
21	600-680-005	Nut, Plain, 3/4-16 NF	4
20	600-640-039	Bolt, Hex Head, 1/4-20 NC x 3/8 Lg (Gr 5)	6
19	600-640-003	Bolt, Hex Head, 3/4-16 NF x 2 1/2" (Gr 5)	4
18	600-640-001	Bolt, Hex Head, 5/16-18 NC x 1 1/4" Lg (Gr 5)	4
17	600-630-003	Set Screw, 1/4-20 NC x 1/2 Lg	1
16	P-150-P-004	Access Hole Cover	1
15	MP-5400-W-001	Packing Tube Weldment (24V)	2
14	MP-6200-W-005	Leg Secondary Weldment, 24 VDC (22" Forks)WIDER	1
13	MP-5300-A-001	Battery Box Assy	2
12	MP-5200-P-001	Lock Cover	1
11	MP-5200-A-001	Lock Release Assy, 24 VDC	1
10	MP-5100-A-014	Strap Pot Assembly, ANALOG	1
9	MP-1100-P-003	Charger Assembly	1
8	MP-1100-P-003	Sensor Cover	1
7	MP-1500-W-004	Fork Weldment, Right, LONGER (22")	1
6	MP-1500-W-003	Fork Weldment, Left, LONGER(22")	1
5	MP-0900-A-001	Cylinder Assembly	1
4	MP-0800-P-024	Threaded Spring Retainer	1
3	MP-1900-A-001	Carriage Assembly (WIDER)	2
2	MP-0500-A-001	Floor Roller Assembly	2
1	MP-0400-A-007	Jack Assembly	1

ITEM	NAME	DESCRIPTION	QTY	MATERIAL	NOTE
1	MP-0400-A-007	Jack Assembly	1		
2	MP-0500-A-001	Floor Roller Assembly	2		
3	MP-1900-A-001	Carriage Assembly (WIDER)	2		
4	MP-0800-P-024	Threaded Spring Retainer	1		
5	MP-0900-A-001	Cylinder Assembly	1		
6	MP-1500-W-003	Fork Weldment, Left, LONGER(22")	1		
7	MP-1500-W-004	Fork Weldment, Right, LONGER (22")	1		
8	MP-1100-P-003	Sensor Cover	1		
9	MP-1100-P-003	Charger Assembly	1		
10	MP-5100-A-014	Strap Pot Assembly, ANALOG	1		
11	MP-5200-A-001	Lock Release Assy, 24 VDC	1		
12	MP-5200-P-001	Lock Cover	1		
13	MP-5300-A-001	Battery Box Assy	2		
14	MP-6200-W-005	Leg Secondary Weldment, 24 VDC (22" Forks)WIDER	1		
15	MP-5400-W-001	Packing Tube Weldment (24V)	2		
16	P-150-P-004	Access Hole Cover	1		
17	600-630-003	Set Screw, 1/4-20 NC x 1/2 Lg	1		
18	600-640-001	Bolt, Hex Head, 5/16-18 NC x 1 1/4" Lg (Gr 5)	4		
19	600-640-003	Bolt, Hex Head, 3/4-16 NF x 2 1/2" (Gr 5)	4		
20	600-640-039	Bolt, Hex Head, 1/4-20 NC x 3/8 Lg (Gr 5)	6		
21	600-680-005	Nut, Plain, 3/4-16 NF	4		
22	600-650-008	Cap Screw, Socket Head, 1/4-20 NF x 1" Lg, Grade 5 Zinc Plated	8		
23	600-710-001	Washer, Flat, 5/16"	4		
24	600-710-003	Washer, Flat, 1/4"	10		
25	600-710-004	Washer, Lock, 5/16"	4		
26	600-720-008	Washer, Flat, 3/4"	2		
27	600-900-006	Blow Pin, 90 Deg, 1/8" Dia, 1/2" Lg	1		
28	601-420-017	Cable Assy, 36" Lg, 1/2 Thk	2		
29	601-480-005	Cable Assy, 36" Lg, Red	1		
30	600-A-011	Cable Assy, 36" Lg, Black	1		
31	600-A-011	Tag & Decal	1		
32	600-A-017	PU Control Box Assy	1		
33	600-A-017	PU Control Box Assy	1		
34	600-A-017	PU Control Box Assy	1		
35	600-A-003	PU Cover Assy (24 VDC)	1		
36	600-640-039	PU Cover Assy (24 VDC)	1		
37	600-710-013	Washer, Flat, #10	4		
38	600-690-005	Nut, Nylon Lock, 1/4-20 NC	4		


ITEM	NAME	DESCRIPTION	QTY	MATERIAL	NOTE
1	MP-0400-A-007	Jack Assembly	1		
2	MP-0500-A-001	Floor Roller Assembly	2		
3	MP-1900-A-001	Carriage Assembly (WIDER)	2		
4	MP-0800-P-024	Threaded Spring Retainer	1		
5	MP-0900-A-001	Cylinder Assembly	1		
6	MP-1500-W-003	Fork Weldment, Left, LONGER(22")	1		
7	MP-1500-W-004	Fork Weldment, Right, LONGER (22")	1		
8	MP-1100-P-003	Sensor Cover	1		
9	MP-1100-P-003	Charger Assembly	1		
10	MP-5100-A-014	Strap Pot Assembly, ANALOG	1		
11	MP-5200-A-001	Lock Release Assy, 24 VDC	1		
12	MP-5200-P-001	Lock Cover	1		
13	MP-5300-A-001	Battery Box Assy	2		
14	MP-6200-W-005	Leg Secondary Weldment, 24 VDC (22" Forks)WIDER	1		
15	MP-5400-W-001	Packing Tube Weldment (24V)	2		
16	P-150-P-004	Access Hole Cover	1		
17	600-630-003	Set Screw, 1/4-20 NC x 1/2 Lg	1		
18	600-640-001	Bolt, Hex Head, 5/16-18 NC x 1 1/4" Lg (Gr 5)	4		
19	600-640-003	Bolt, Hex Head, 3/4-16 NF x 2 1/2" (Gr 5)	4		
20	600-640-039	Bolt, Hex Head, 1/4-20 NC x 3/8 Lg (Gr 5)	6		
21	600-680-005	Nut, Plain, 3/4-16 NF	4		
22	600-650-008	Cap Screw, Socket Head, 1/4-20 NF x 1" Lg, Grade 5 Zinc Plated	8		
23	600-710-001	Washer, Flat, 5/16"	4		
24	600-710-003	Washer, Flat, 1/4"	10		
25	600-710-004	Washer, Lock, 5/16"	4		
26	600-720-008	Washer, Flat, 3/4"	2		
27	600-900-006	Blow Pin, 90 Deg, 1/8" Dia, 1/2" Lg	1		
28	601-420-017	Cable Assy, 36" Lg, 1/2 Thk	2		
29	601-480-005	Cable Assy, 36" Lg, Red	1		
30	600-A-011	Cable Assy, 36" Lg, Black	1		
31	600-A-011	Tag & Decal	1		
32	600-A-017	PU Control Box Assy	1		
33	600-A-017	PU Control Box Assy	1		
34	600-A-017	PU Control Box Assy	1		
35	600-A-003	PU Cover Assy (24 VDC)	1		
36	600-640-039	PU Cover Assy (24 VDC)	1		
37	600-710-013	Washer, Flat, #10	4		
38	600-690-005	Nut, Nylon Lock, 1/4-20 NC	4		

ITEM	NAME	DESCRIPTION	QTY	MATERIAL	NOTE
1	MP-0400-A-007	Jack Assembly	1		
2	MP-0500-A-001	Floor Roller Assembly	2		
3	MP-1900-A-001	Carriage Assembly (WIDER)	2		
4	MP-0800-P-024	Threaded Spring Retainer	1		
5	MP-0900-A-001	Cylinder Assembly	1		
6	MP-1500-W-003	Fork Weldment, Left, LONGER(22")	1		
7	MP-1500-W-004	Fork Weldment, Right, LONGER (22")	1		
8	MP-1100-P-003	Sensor Cover	1		
9	MP-1100-P-003	Charger Assembly	1		
10	MP-5100-A-014	Strap Pot Assembly, ANALOG	1		
11	MP-5200-A-001	Lock Release Assy, 24 VDC	1		
12	MP-5200-P-001	Lock Cover	1		
13	MP-5300-A-001	Battery Box Assy	2		
14	MP-6200-W-005	Leg Secondary Weldment, 24 VDC (22" Forks)WIDER	1		
15	MP-5400-W-001	Packing Tube Weldment (24V)	2		
16	P-150-P-004	Access Hole Cover	1		
17	600-630-003	Set Screw, 1/4-20 NC x 1/2 Lg	1		
18	600-640-001	Bolt, Hex Head, 5/16-18 NC x 1 1/4" Lg (Gr 5)	4		
19	600-640-003	Bolt, Hex Head, 3/4-16 NF x 2 1/2" (Gr 5)	4		
20	600-640-039	Bolt, Hex Head, 1/4-20 NC x 3/8 Lg (Gr 5)	6		
21	600-680-005	Nut, Plain, 3/4-16 NF	4		
22	600-650-008	Cap Screw, Socket Head, 1/4-20 NF x 1" Lg, Grade 5 Zinc Plated	8		
23	600-710-001	Washer, Flat, 5/16"	4		
24	600-710-003	Washer, Flat, 1/4"	10		
25	600-710-004	Washer, Lock, 5/16"	4		
26	600-720-008	Washer, Flat, 3/4"	2		
27	600-900-006	Blow Pin, 90 Deg, 1/8" Dia, 1/2" Lg	1		
28	601-420-017	Cable Assy, 36" Lg, 1/2 Thk	2		
29	601-480-005	Cable Assy, 36" Lg, Red	1		
30	600-A-011	Cable Assy, 36" Lg, Black	1		
31	600-A-011	Tag & Decal	1		
32	600-A-017	PU Control Box Assy	1		
33	600-A-017	PU Control Box Assy	1		
34	600-A-017	PU Control Box Assy	1		
35	600-A-003	PU Cover Assy (24 VDC)	1		
36	600-640-039	PU Cover Assy (24 VDC)	1		
37	600-710-013	Washer, Flat, #10	4		
38	600-690-005	Nut, Nylon Lock, 1/4-20 NC	4		

ITEM	NAME	DESCRIPTION	QTY	MATERIAL	NOTE
1	MP-0400-A-007	Jack Assembly	1		
2	MP-0500-A-001	Floor Roller Assembly	2		
3	MP-1900-A-001	Carriage Assembly (WIDER)	2		
4	MP-0800-P-024	Threaded Spring Retainer	1		
5	MP-0900-A-001	Cylinder Assembly	1		
6	MP-1500-W-003	Fork Weldment, Left, LONGER(22")	1		
7	MP-1500-W-004	Fork Weldment, Right, LONGER (22")	1		
8	MP-1100-P-003	Sensor Cover	1		
9	MP-1100-P-003	Charger Assembly	1		
10	MP-5100-A-014	Strap Pot Assembly, ANALOG	1		
11	MP-5200-A-001	Lock Release Assy, 24 VDC	1		
12	MP-5200-P-001	Lock Cover	1		
13	MP-5300-A-001	Battery Box Assy	2		
14	MP-6200-W-005	Leg Secondary Weldment, 24 VDC (22" Forks)WIDER	1		
15	MP-5400-W-001	Packing Tube Weldment (24V)	2		
16	P-150-P-004	Access Hole Cover	1		
17	600-630-003	Set Screw, 1/4-20 NC x 1/2 Lg	1		
18	600-640-001	Bolt, Hex Head, 5/16-18 NC x 1 1/4" Lg (Gr 5)	4		
19	600-640-003	Bolt, Hex Head, 3/4-16 NF x 2 1/2" (Gr 5)	4		
20	600-640-039	Bolt, Hex Head, 1/4-20 NC x 3/8 Lg (Gr 5)	6		
21	600-680-005	Nut, Plain, 3/4-16 NF	4		
22	600-650-008	Cap Screw, Socket Head, 1/4-20 NF x 1" Lg, Grade 5 Zinc Plated	8		
23	600-710-001	Washer, Flat, 5/16"	4		
24	600-710-003	Washer, Flat, 1/4"	10		
25	600-710-004	Washer, Lock, 5/16"	4		
26	600-720-008	Washer, Flat, 3/4"	2		
27	600-900-006	Blow Pin, 90 Deg, 1/8" Dia, 1/2" Lg	1		
28	601-420-017	Cable Assy, 36" Lg, 1/2 Thk	2		
29	601-480-005	Cable Assy, 36" Lg, Red	1		
30	600-A-011	Cable Assy, 36" Lg, Black	1		
31	600-A-011	Tag & Decal	1		
32	600-A-017	PU Control Box Assy	1		
33	600-A-017	PU Control Box Assy	1		
34	600-A-017	PU Control Box Assy	1		
35	600-A-003	PU Cover Assy (24 VDC)	1		
36	600-640-039	PU Cover Assy (24 VDC)	1		
37	600-710-013	Washer, Flat, #10	4		
38	600-690-005	Nut, Nylon Lock, 1/4-20 NC	4		

ITEM	NAME	DESCRIPTION	QTY	MATERIAL	NOTE
1	MP-0400-A-007	Jack Assembly	1		
2	MP-0500-A-001	Floor Roller Assembly	2		
3	MP-1900-A-001	Carriage Assembly (WIDER)	2		
4	MP-0800-P-024	Threaded Spring Retainer	1		
5	MP-0900-A-001	Cylinder Assembly	1		
6	MP-1500-W-003	Fork Weldment, Left, LONGER(22")	1		
7	MP-1500-W-004	Fork Weldment, Right, LONGER (22")	1		
8	MP-1100-P-003	Sensor Cover	1		
9	MP-1100-P-003	Charger Assembly	1		
10	MP-5100-A-014	Strap Pot Assembly, ANALOG	1		
11	MP-5200-A-001	Lock Release Assy, 24 VDC	1		
12	MP-5200-P-001	Lock Cover	1		
13	MP-5300-A-001	Battery Box Assy	2		
14	MP-6200-W-005	Leg Secondary Weldment, 24 VDC (22" Forks)WIDER	1		
15	MP-5400-W-001	Packing Tube Weldment (24V)	2		
16	P-150-P-004	Access Hole Cover	1		
17	600-630-003	Set Screw, 1/4-20 NC x 1/2 Lg	1		
18	600-640-001	Bolt, Hex Head, 5/16-18 NC x 1 1/4" Lg (Gr 5)	4		
19	600-640-003	Bolt, Hex Head, 3/4-16 NF x 2 1/2" (Gr 5)	4		
20	600-640-039	Bolt, Hex Head, 1/4-20 NC x 3/8 Lg (Gr 5)	6		
21	600-680-005	Nut, Plain, 3/4-16 NF	4		
22	600-650-008	Cap Screw, Socket Head, 1/4-20 NF x 1" Lg, Grade 5 Zinc Plated	8		
23	600-710-001	Washer, Flat, 5/16"	4		
24	600-710-003	Washer, Flat, 1/4"	10		
25	600-710-004	Washer, Lock, 5/16"	4		
26	6				

24 VDC W/15" FORKS

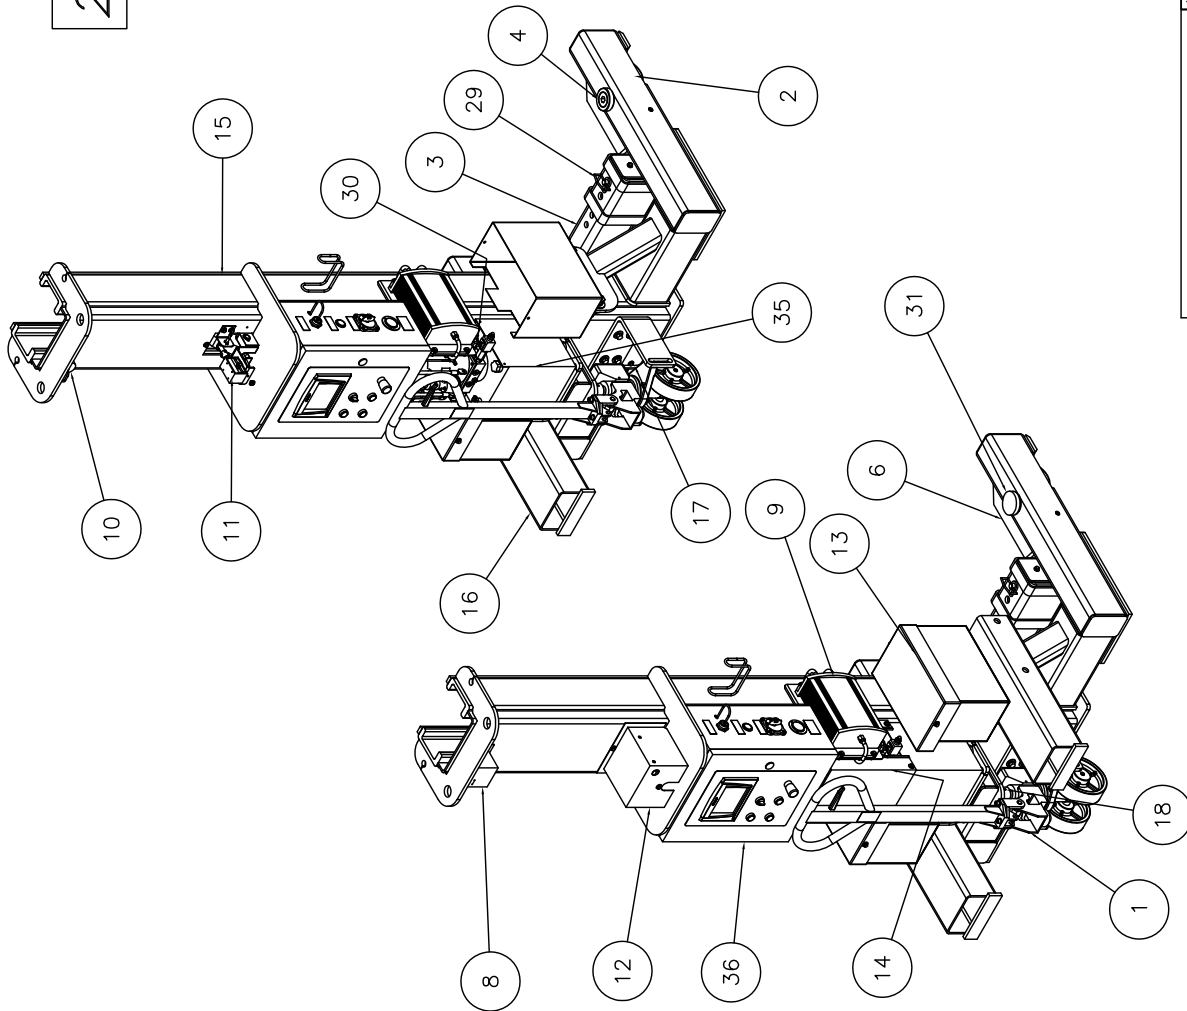

(INSIDE)

(OUTSIDE)

FOR MOUNTING ELECTRICAL CONTROL BOX  
(TYP 4 PLACES)

ATTACH PU ON POST SHELF  
(TYP 4 PLACES)

ATTACH PACKING TUBES  
(TYP 4 PLACES)

AT ALL COVERS  
(TYP 6 PLACES)

AT CABLE BRACKETS  
(TYP 4 PLACES)

38	600-710-013	Washer, Flat, #10	4
37	600-680-005	Nut, Nylon Lock, 1/4-20 NC	4
36	600-600-A-013	MP DC Control Box Assy	4
35	MP-6000-A-017	Power Unit Assy With Prop Valve, 24 VDC	1
34	MP-5100-A-011	Tag & Decal Location, MP-24VDC	1
33	MP-5100-A-011	Cable Assy, 40' Lg, Black	1
32	MP-5100-A-010	Cable Assy, 36' Lg, Red	1
31	601-460-005	Cop. Plastic, Red, 3/8 Dia x 1/2 Thk	2
30	601-420-017	Flour, 80 Bag, #6 Oga to #6 JIC	2
29	600-900-008	Wash. Pin, 3/4 x 4	2
28	600-720-008	Washer, Lock, 3/4	4
27	600-720-002	Washer, Lock, 5/16	4
26	600-710-004	Washer, Flat, 1/4	10
25	600-710-003	Washer, Flat, 5/16	4
24	600-710-001	Washer, Flat, 3/4	8
23	600-650-008	Cop Screw, Socket Head, 1/4-20 NF x 1" Lg, Grade 5 Zinc Plated	4
22	600-680-005	Nut, Plain, 3/4-16 NF	4
21	600-640-039	Bolt, Hex Head, 1/4-20 NC x 3/8 Lg (Gr 5)	6
20	600-640-003	Bolt, Hex Head, 3/4-16 NF x 2 1/2" (Gr5)	4
19	600-640-001	Bolt, Hex Head, 5/16-18 NC x 1 1/4" Lg (Gr 5)	4
18	600-630-003	Set Screw, 1/4-20 NC x 1/2 Lg	1
17	P-150-P-004	Access Hole Cover	1
16	MP-5400-W-001	Packing Tube Weldment (24V)	2
15	MP-6200-W-003	Lag Secondary Weldment, 24 VDC	1
14	MP-5300-A-003	PU Cover Assy (24 VDC)	1
13	MP-5300-A-001	Battery Box Assy	2
12	MP-5200-P-001	Lock Cover	1
11	MP-5200-A-001	Lock Release Assy, 24 VDC	1
10	MP-5100-A-014	String Pot Assembly, ANALOG	1
9	MP-5100-A-012	Charger Assembly	1
8	MP-1100-P-003	Sensor Cover	1
7	MP-1000-W-006	Fork Weldment, Right	1
6	MP-1000-W-005	Fork Weldment, Left	1
5	MP-0900-A-001	Cylinder Assembly	1
4	MP-0800-P-024	Threaded Spring Retainer	2
3	MP-0700-A-001	Carriage Assembly	1
2	MP-0500-A-001	Floor Roller Assembly	2
1	MP-0400-A-007	Jack Assembly	1

ITEM	NAME	DESCRIPTION	QTY	MATERIAL	NOTE
Parts List					
TOLERANCES					
FINISH					
DRAWING NUMBER					
FROM					
MP-6100-A-001					

NOTES

1. CHECK FOR ALL SHARP EDGES & CHIPS.

2. UNLESS OTHERWISE SPECIFIED, SURFACE FINISH TO BE 125 RMS.

3. WELDING MEDIUM SHALL CONFORM TO AWS E-7011 CODE S3 FLUX CURE WIRE ONLY.

4. E-7011 CODE S3 FLUX CURE WIRE ONLY.

NOTICE OF CONFIDENTIAL INFORMATION

THIS DOCUMENT CONTAINS INFORMATION THAT IS CONFIDENTIAL AND PROPRIETARY TO MOHAWK RESOURCES LTD. IT SHALL BE USED ONLY FOR THE PURPOSES OF THE INSTANT CONTRACT AND NOT BE DISCLOSED TO ANY OTHER PARTY WITHOUT THE WRITTEN PERMISSION OF MOHAWK RESOURCES LTD.

SCALE	1/8"=1'-0"	DRAWN	G.DONE
CHECKED		APPROVED	
DATE	12/11	WEIGHT	1700 LB
FILE NAME	MP-5400-	NEXT ASSEMBLY	

MOHAWK RESOURCES LTD.

MP-24VDC-SERIES


Master Post Ass 1/4" Prop Valve

12/11



1700 LB

MP-6100-A-001



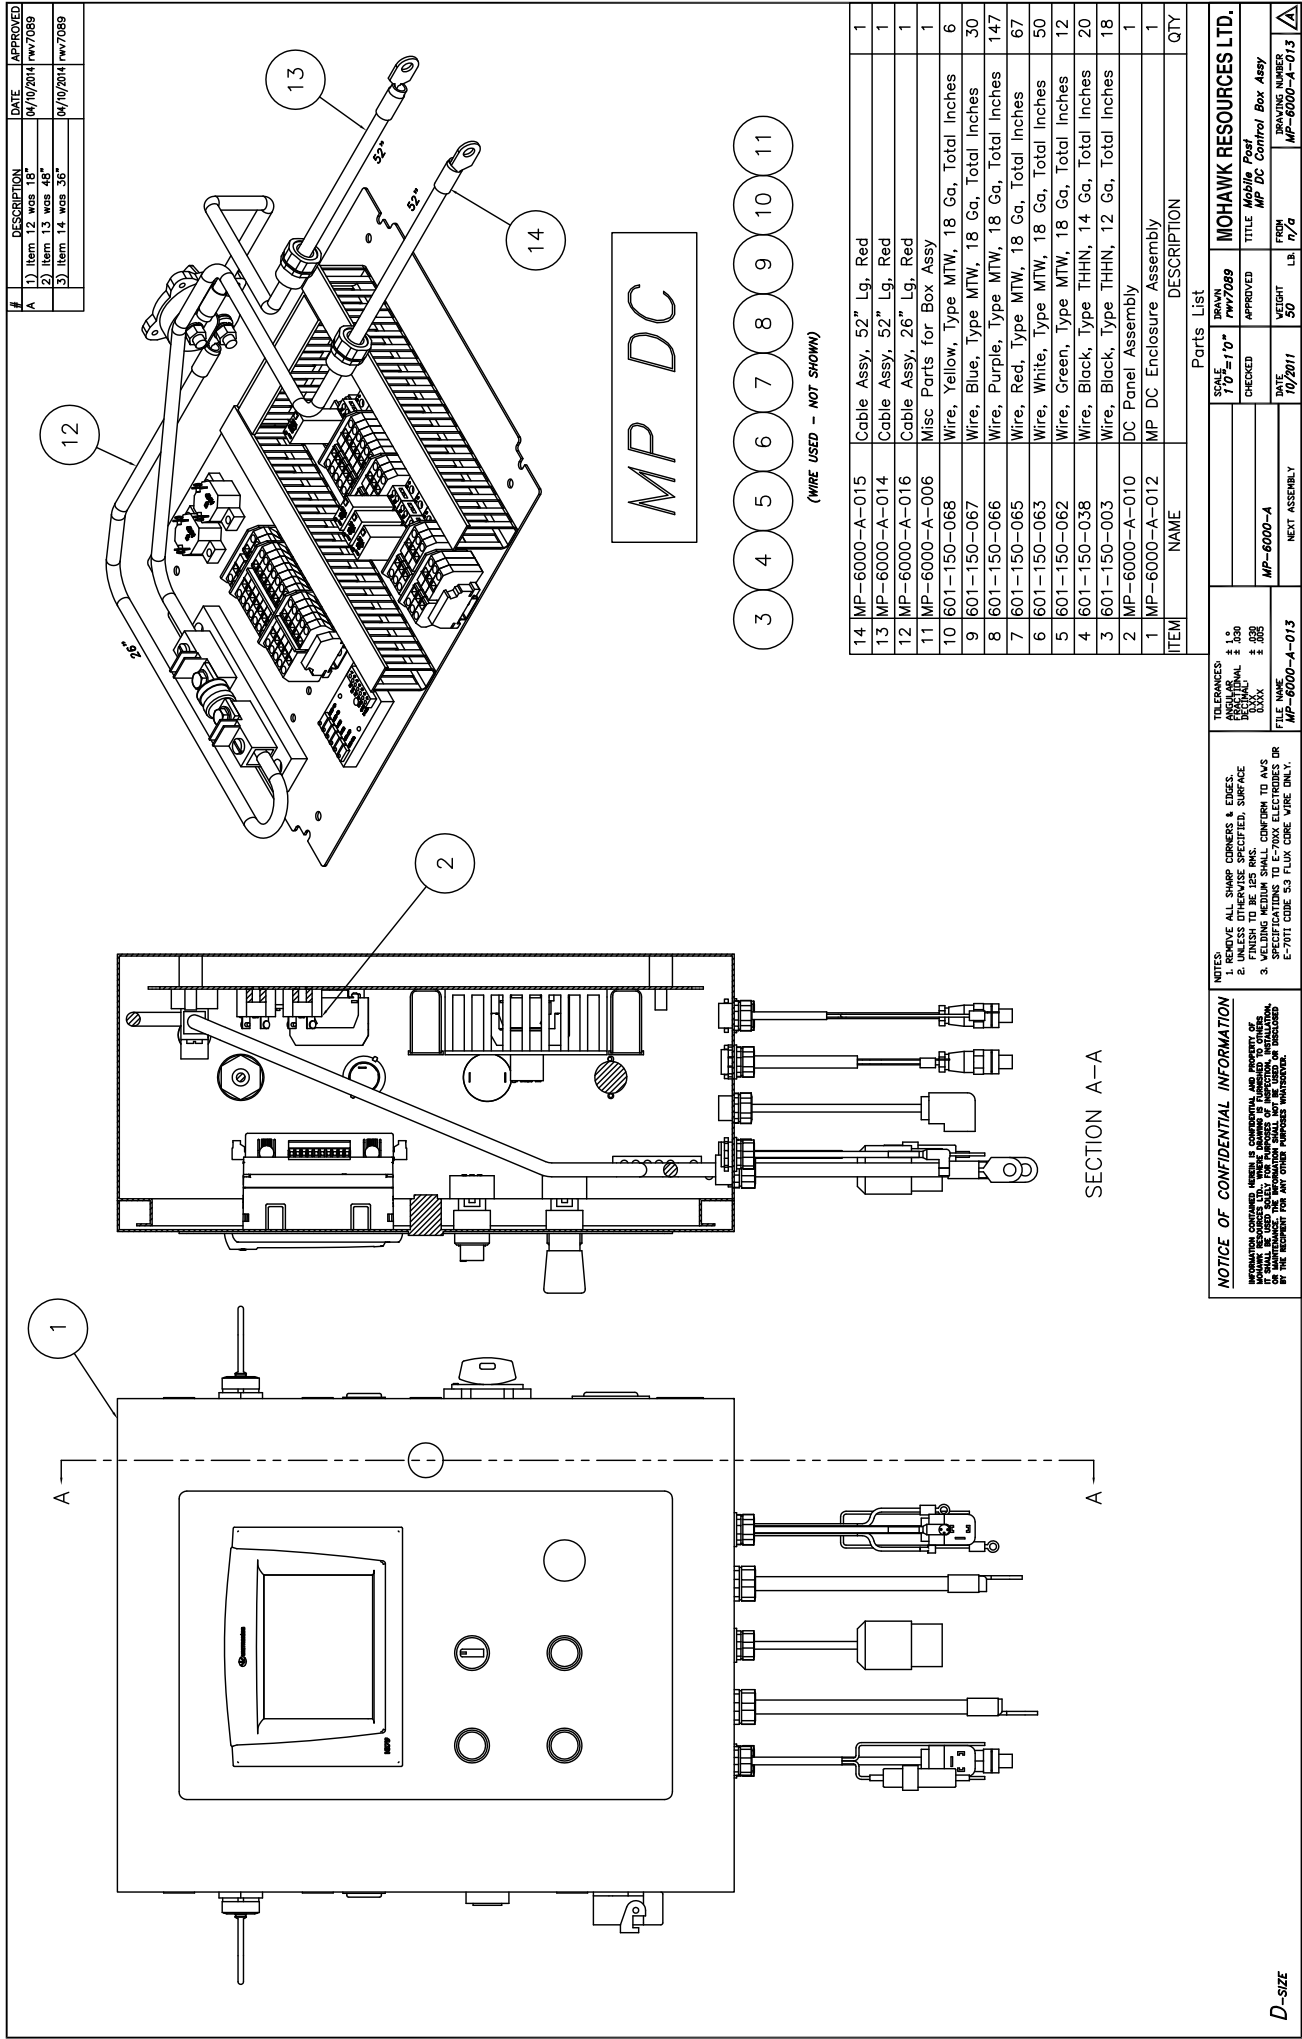












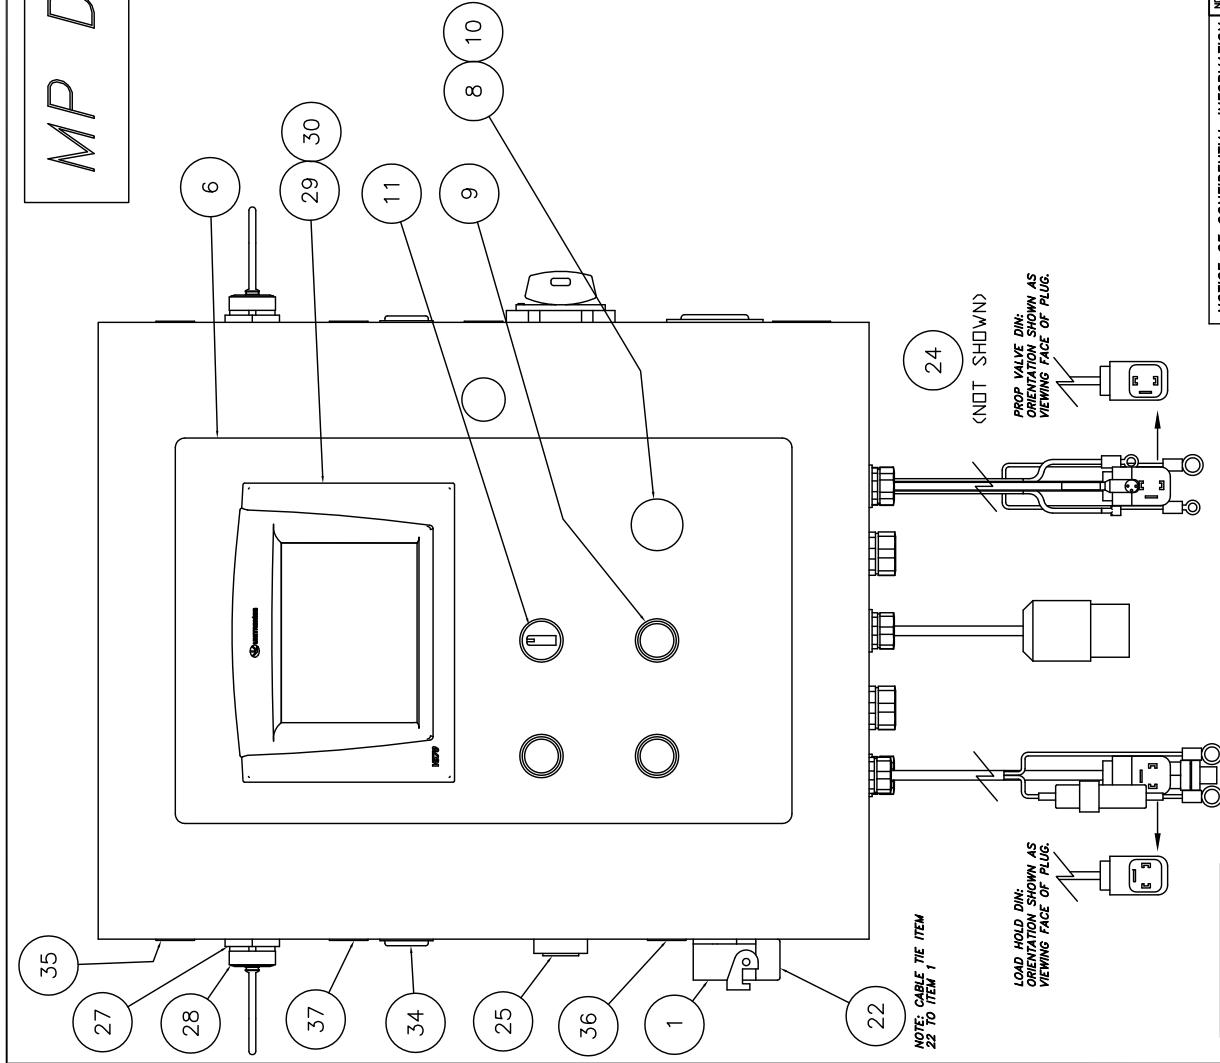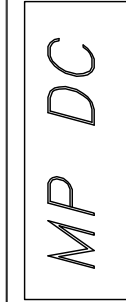

NOTE: CABLE TIE ITEM  
22 TO ITEM 1

LOAD HOLD DIN:  
ORIENTATION SHOWN AS  
VIEWING FACE OF PLUG.

**PROP VALVE DIN:  
ORIENTATION SHOWN AS  
VIEWING FACE OF PLUG.**

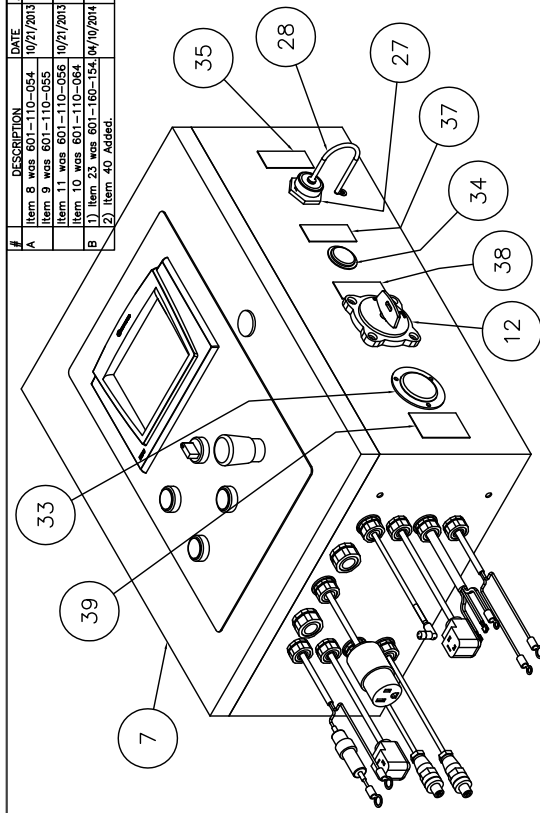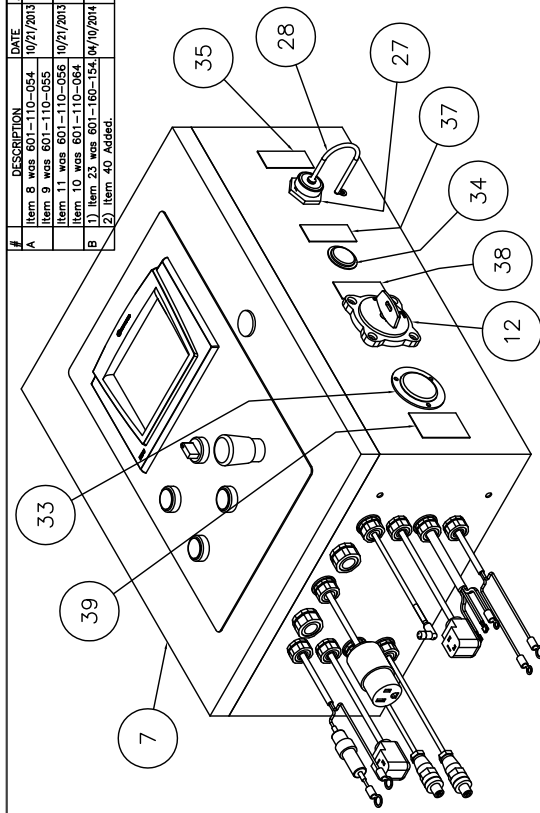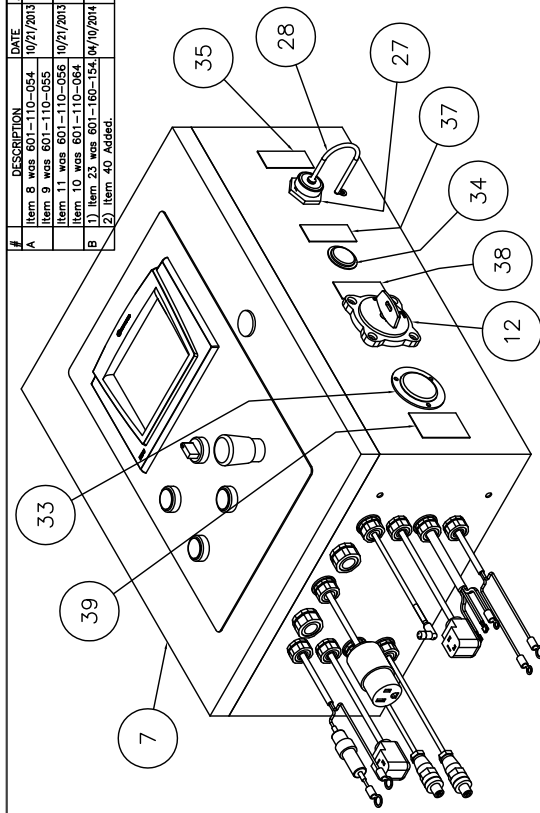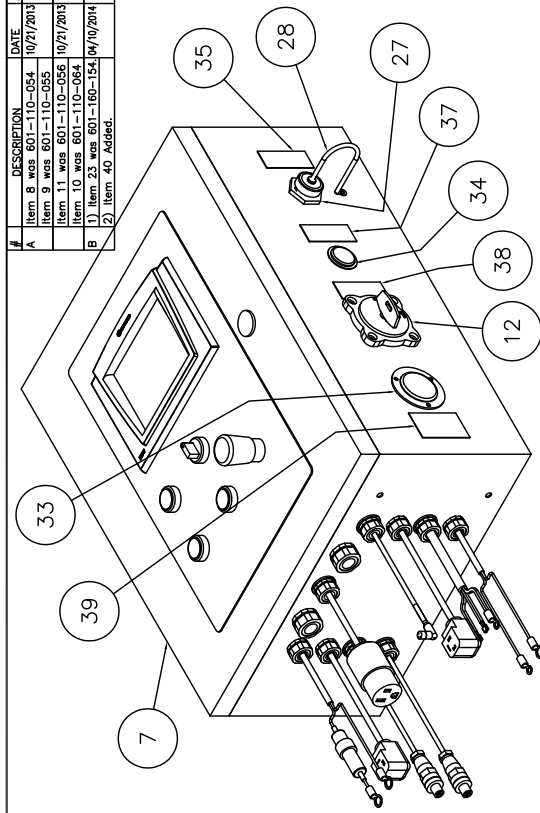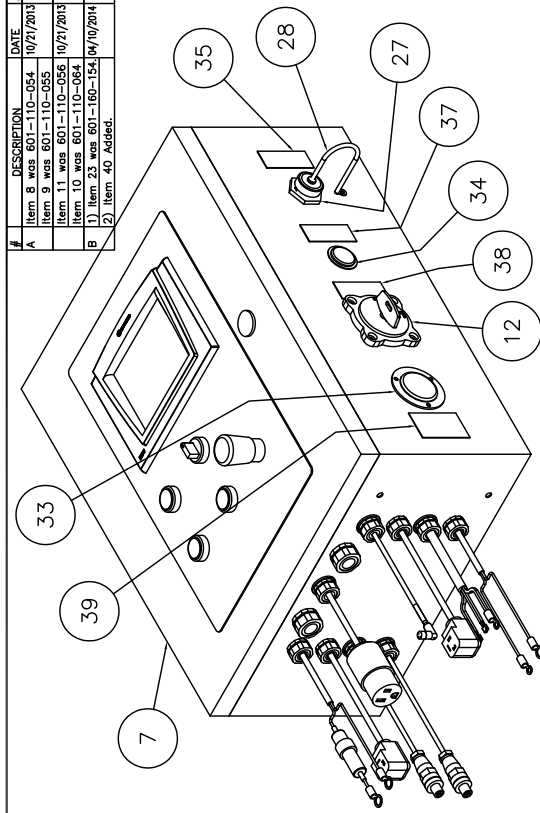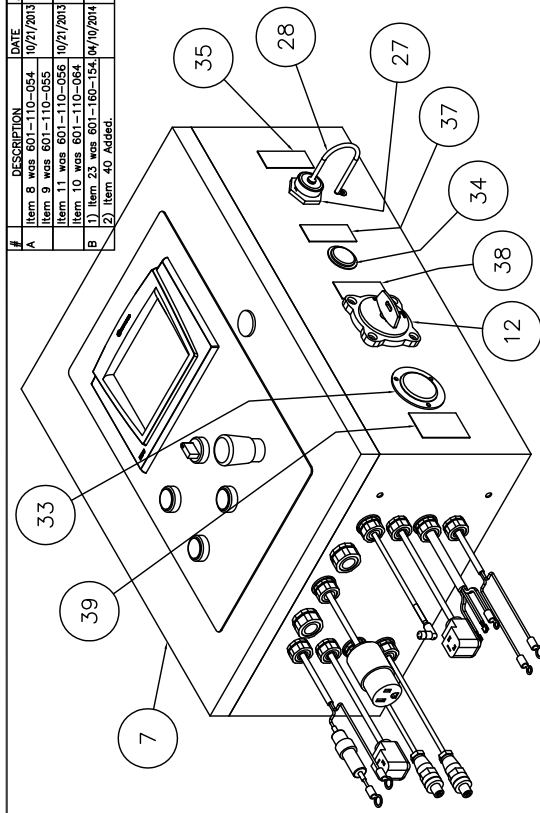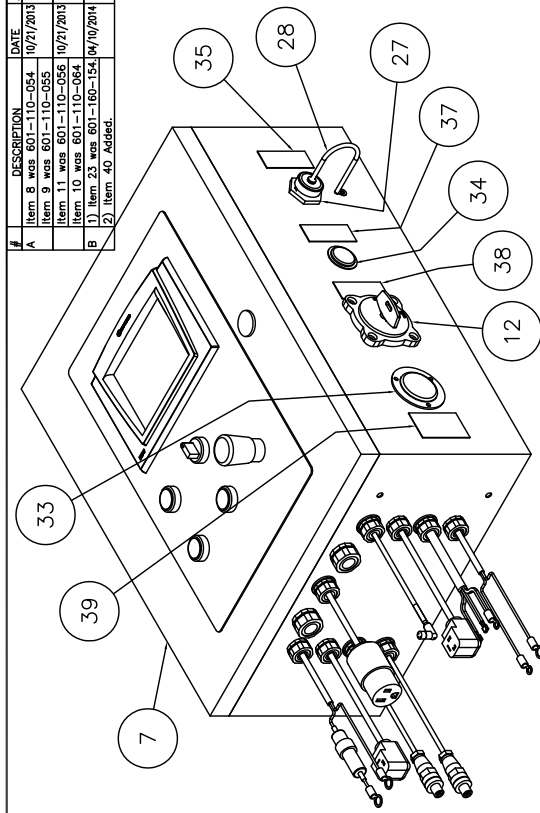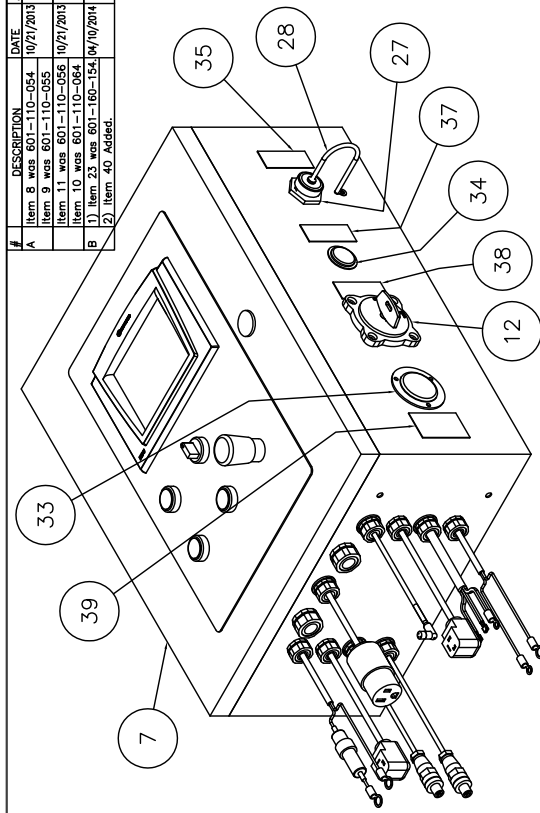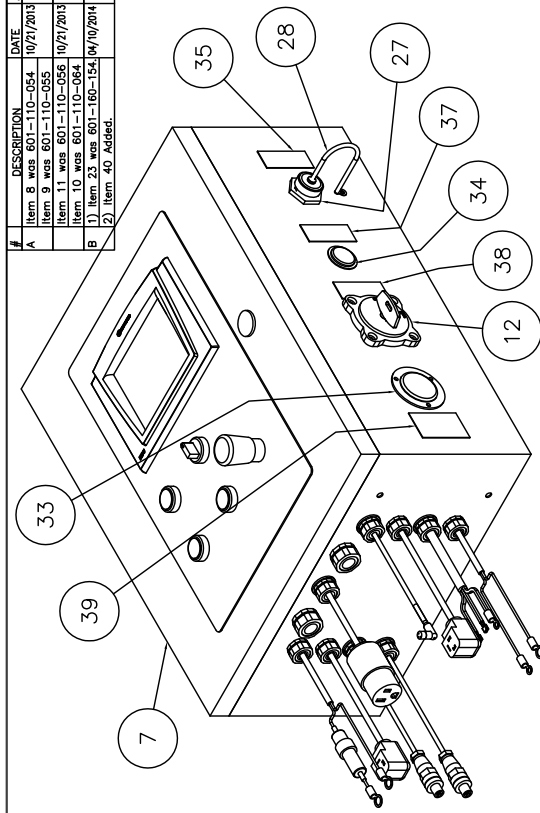

ITEM	NAME	DESCRIPTION	QTY	NOTE
40	601-160-280	DN Cable Assy w/ 4" Cable, Left Blade, Prop Valve	1	1 1/2" x 2 1/2"
39	601-160-280	DN Cable Assy w/ 4" Cable, Left Blade, Prop Valve	1	1 1/2" x 2 1/2"
38	601-800-284	Decal, "120 VAC CHARGER INLET"	1	1" x 2 1/2"
37	601-800-284	Decal, "CHARGE LIFT - OPERATE LIFT"	1	1" x 2 1/2"
36	601-800-283	Decal, "12 VDC POWER PORT"	2	1" x 2 1/2"
35	601-800-224	Decal, "Hand Pendant Receptacle..."	1	1" x 3"
34	601-800-221	Decal, "COMMUNICATION"	2	1" x 2 1/2"
33	601-170-017	Outlet, 12 VDC, Marine	2	
32	601-170-017	Flanged Inlet with Dust Cover, 3 Pole, 120 VAC, 15 Amp	1	
31	601-170-008	Connector, 3 Prong, .15A/120V/1Ph, NEMA #5-15C	1	
30	601-160-553	Straight Adapter, Red	3	
29	601-160-553	Straight Adapter, Red	3	
28	601-160-272	P.C. Expansion Module	1	
27	601-160-271	Charger Cap w/Chain, Mini Male	2	
26	601-160-219	Receptacle, DeviceKIT, Female	2	
25	601-160-214	Quick-Disconnect Cable	1	
24	601-160-204	Piezo Sound Alarm, 24 VDC, Red	1	
23	601-160-169	Ground Bar	1	
22	601-160-291	DN Cable Assy w/ 4" Cable, Straight Blade, Load Hold	1	
21	601-160-142	Cover for Female Insert	1	
20	601-150-095	Insulated Ring Terminal	2	
19	601-150-081	Insulated Ring Terminal	3	
18	601-150-080	Quick Connect Terminal, 0.187" x 0.030, Fully Insulated	2	
17	601-140-107	Straight Adapter, Yellow	2	
16	601-140-104	Circular Connector, 5 Pin, Male	2	
15	601-140-064	Straight Adapter, Blue	4	
14	601-140-045	Straight Adapter, White	1	
13	601-120-116	Fuse Holder, In-Line, Crimp Style	1	
12	601-120-112	Fuse, Type AGC, 20 AMP, 32 V	1	
11	601-110-092	Switch, ON OFF, 1/2 AMP, 120 VAC	1	
10	601-110-091	Switch, ON OFF, 1/2 AMP, 120 VAC	1	
9	601-110-078	Contact Block, NO, 1" Position, Return to Center, 22mm	1	
8	601-110-080	Push Button, Green, 22mm	3	
7	601-110-079	E-Stop Button, Push & Turn, 22mm	1	
6	601-6000-P-010	MP-DC Enclosure Drilling	1	10" x 14"
5	601-6000-P-001	Control Decal, MP-Series (2013)	1	
4	601-5100-P-408	Cable, Type SJ, 16/3 x 12" Long	1	601-150-045
3	601-5100-P-407	Cable, Type SJ, 16/3 x 12" Long	1	601-150-082
2	601-1300-P-403	Cable, Grey Jacket w/ Red/Blk Wire, 14/2 x .36" Long	2	601-150-061
1	601-1300-P-403	Cable, 16/3 SOW-4250 x 7 Feet	1	601-150-060
1	601-1300-P-403	Cable, Shielded, 6/24 x 7 Feet	1	
1	601-1300-P-009	Pendant Receptacle Assembly	1	

TOLERANCES ± 1.0°		SCALE 1" = 1" 0"		DRAWN PWY7089		MOHAWK RESOURCES LTD.	
DIMENSIONS ± .000		CHECKED		APPROVED		TITLE Mobile Post Lift	
FINISHES ± .000		DATE 10/20/11		FROM N/A		DRAWING NUMBER MP-6000-A-012	
D.W.X.		NEXT ASSEMBLY		VELOCITY 26.5		MP DC Enclosure Box Assembly	
		MP-6000-A-					

NOTICE OF CONFIDENTIAL INFORMATION


INFORMATION CONTAINED HEREIN IS CONFIDENTIAL AND PROPERTY OF THE UNITED STATES GOVERNMENT. IT IS TO BE CONTAINED AND HANDLED AS SUCH. IT IS TO BE KEPT SEPARATE FROM OTHER INFORMATION AND NOT TO BE DISCLOSED TO ANY OTHER PERSONS OR AGENCIES WITHOUT THE EXPRESS WRITTEN PERMISSION OF THE OFFICE OF THE SECRETARY OF DEFENSE. IT IS TO BE DESTROYED WHEN NO LONGER REQUIRED FOR OFFICIAL USE.

NOTES

1. REMOVE ALL SHARP CORNERS & EDGES.
2. REMOVE UNWANTED SPECIFIED, SURFACE.
3. FINISH TO BE 125 RMS.
4. FENELING MEDIUM SHALL CONFORM TO AWS SPECIFICATIONS FOR E-70XX ELECTRODES OR E-70T1 CODE 53 FLUX CORE WIRE ONLY.

*D-size* PG 1 □ F 2

MP DC

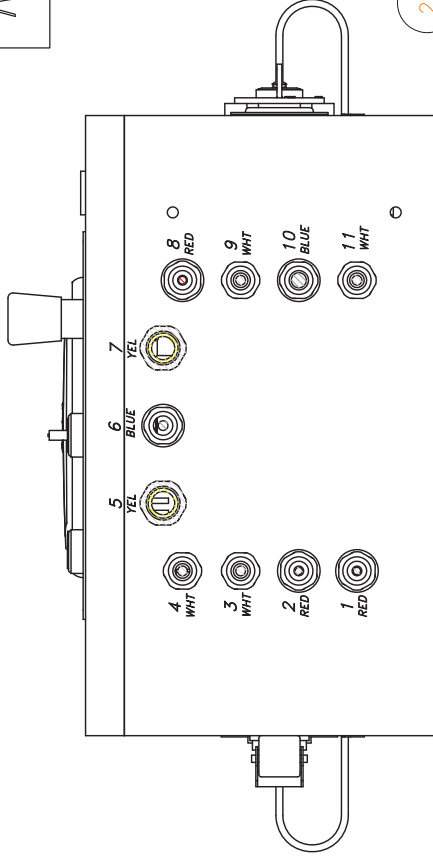

PORT #	FITTING#	EXPOSED LG	TOTAL LG	DESCRIPTION
1	31 (RED)	96"	126"	LINEAR TRANSDUCER (YO-YO)
2	31 (RED)	12"	42"	PRESSURE SENSOR
3	15 (WHT)	18"	Factory Lg	LOAD HOLDING SOLENOID
4	15 (WHT)	40" (Strip 8")	72"	12 VDC POWER OUTLETS TO LEFT BATTERY
5	18 (YEL)	20"	52"	FROM 200A FUSE (+) TO MOTOR SOLE
6	16 (BLUE)	12"	36"	CHARGER POWER CABLE TO 120 VAC OUTLET
7	18 (YEL)	40"	52"	ON/OFF (+) TO RIGHT BATTERY (+)
8	31 (RED)	60"	Factory Lg	PROXIMITY SENSOR @ LOCK
9	15 (WHT)	18"	Factory Lg	PROPORTIONAL VALVE
10	16 (BLUE)	60" (Strip 5")	80"	LOCK SOLENOID
11	15 (WHT)	24" (Strip 8")	51"	MOTOR CONTACTOR & MAIN GROUND

LABELS TO BE MADE FOR EXIT CABLES  
PLACED 1" FROM ENDS:

SENSORS:  
#1: "STRING POT SENSOR"  
#2: "PRESSURE SENSOR"


LARGE GAUGE CABLES:  
#5: "MOTOR"  
#7: "BATTERY"

DIN CABLES:  
#3: "LOAD HOLD"  
#9: "PROP VALVE"


WIRING:





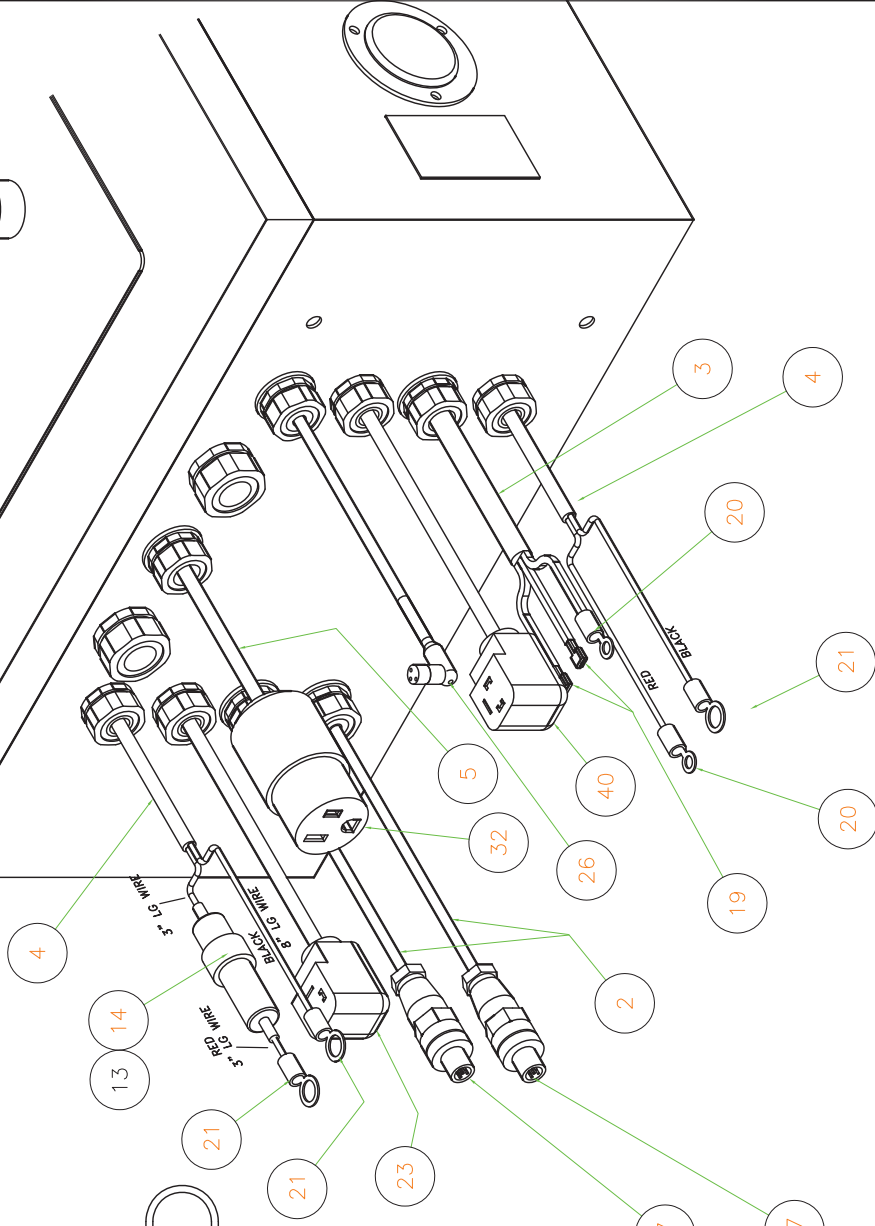

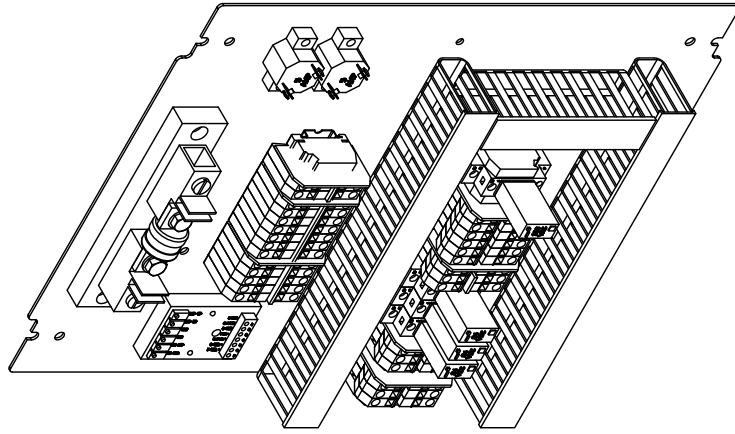

Pressure Sensor:  
Pin #1: Red  
Pin #2: Black  
n/c: White  
n/c: Shield

String Pot:  
Pin #1: Red  
Pin #2: Black  
n/c: White  
n/c: Shield




NOTICE OF CONFIDENTIAL INFORMATION				TOLERANCES:				DRAWN				MOHAWK RESOURCES LTD.			
INFORMATION CONTAINED HEREIN IS CONFIDENTIAL AND PROPERTY OF MOHAWK RESOURCES LTD. IT SHALL BE USED ONLY FOR THE PURPOSES OF INSPECTION, INSTALLATION, AND MAINTENANCE OF THE EQUIPMENT SPECIFICALLY IDENTIFIED BY THE RECIPIENT FOR ANY OTHER PURPOSES WITHHELD.				UNLESS OTHERWISE SPECIFIED SURFACE FINISH TO BE 125 RMS. 3. WELDING MEDIUM SHALL CONFORM TO AWS E-7011 CODE S-3 FLUX CORD WIRE ONLY.				PWT/089				TITLE			
								CHECKED				MP-6000-A-			
								DATE				MP-6000-A-012.dwg			
								SCALE				N/A			
								APPROVED				N/A			
								WEIGHT				26.3			
								NEXT ASSEMBLY				MP-6000-A-012			
								REVISED				MP-6000-A-012			



 THEN CW 13° TURNS	FULL CCW		RAMP UP	 PROPORTIONAL VALVE CARD SETTINGS
	FULL CCW		RAMP DOWN	
	FULL CW		I MAX	
	FULL CCW		I MIN	
	NO CHANGE		DITH AMP	
	NO CHANGE		DITH FRQ	

### Parts List

NOTE: RELAYS TO HAVE RETAINERS

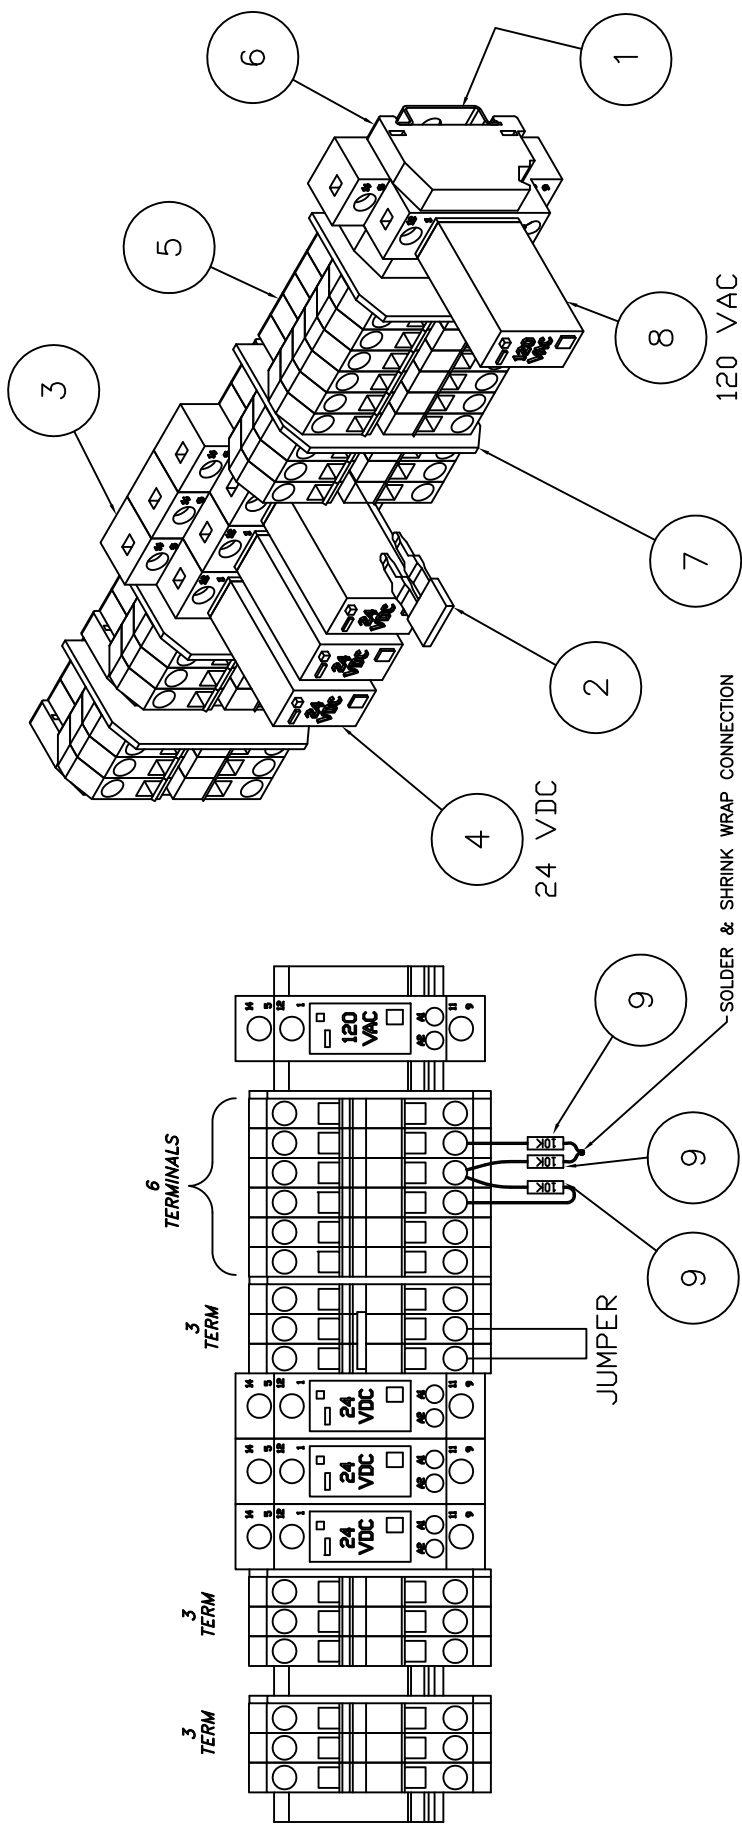



9	601-160-215	Resistor, 10k Ohm	3	
8	601-160-144	Relay, Miniature, SPDT, 15 A, 120 VAC Coil, LED w/Bypass	1	
7	601-165-063	End Cover, Screwless Terminal Strip	4	
6	601-165-061	End Stop	4	
5	601-165-059	Terminal Block, Screwless, Grey	15	
4	601-160-196	Relay, Miniature, SPDT, 15 A, 24 VDC Coil, LED w/Bypass	3	
3	601-160-146	Relay Socket, Screw Terminal	4	
2	MP-5100-P-013	Top Jumper Bar, 2 Pole, Screwless	1	601-165-058
1	MP-6000-P-011	Din Rail, 9" Lg	1	601-160-081
ITEM	NAME	DESCRIPTION	QTY	MATERIAL
				NOTE

C-SIZE

Parts List

NOTICE OF CONFIDENTIAL INFORMATION		NOTES:		TOLERANCES:		MP-6000-A-019		SCALE	DRAWN	MOHAWK RESOURCES LTD.	
		1. REMOVE ALL SHARP CORNERS & EDGES. 2. UNLESS OTHERWISE SPECIFIED, SURFACE FINISH TO BE 125 RMS. 3. WELDING MEDIUM SHALL CONFORM TO AWS SPECIFICATIONS TO E-70XX ELECTRODES OR E-70TT CODE 5.3 FLUX CORE WIRE ONLY.		ANGULAR ± 1° FRACTIONAL ± .030 DECIMAL ± .030 XXX ± .005		MP-6000-A-019		3/4	rw7089	MP-24VDC-SERIES	
INFORMATION CONTAINED HEREIN IS CONFIDENTIAL AND PROPERTY OF MOHAWK RESOURCES LTD.. WHERE DRAWING IS FURNISHED TO OTHERS IT SHALL BE USED SOLELY FOR PURPOSES OF INSPECTION, INSTALLATION, OR MAINTENANCE. THE INFORMATION SHALL NOT BE USED OR DISCLOSED BY THE RECIPIENT FOR ANY OTHER PURPOSES WHATSOEVER.				FILE NAME		NEXT ASSEMBLY		CHECKED	APPROVED	Terminal Strip Assy #2	
								DATE	WEIGHT	DRAWING NUMBER	
								10/2012	1.4	MP-6000-A-019	
									L.B.	FROM	
										MP-6000-A-019	

#	DESCRIPTION	DATE	APPROVED
A	View of Terminal Strip Rotated 180 Degrees for Clarity	10/09/2013	rw7089

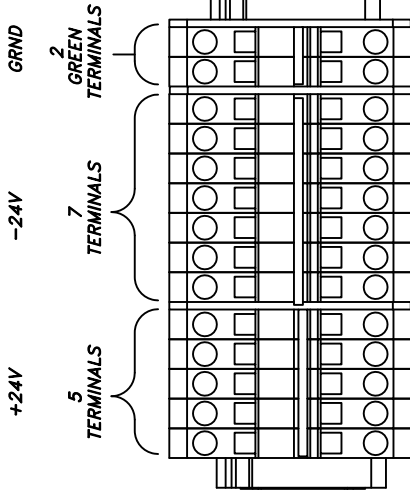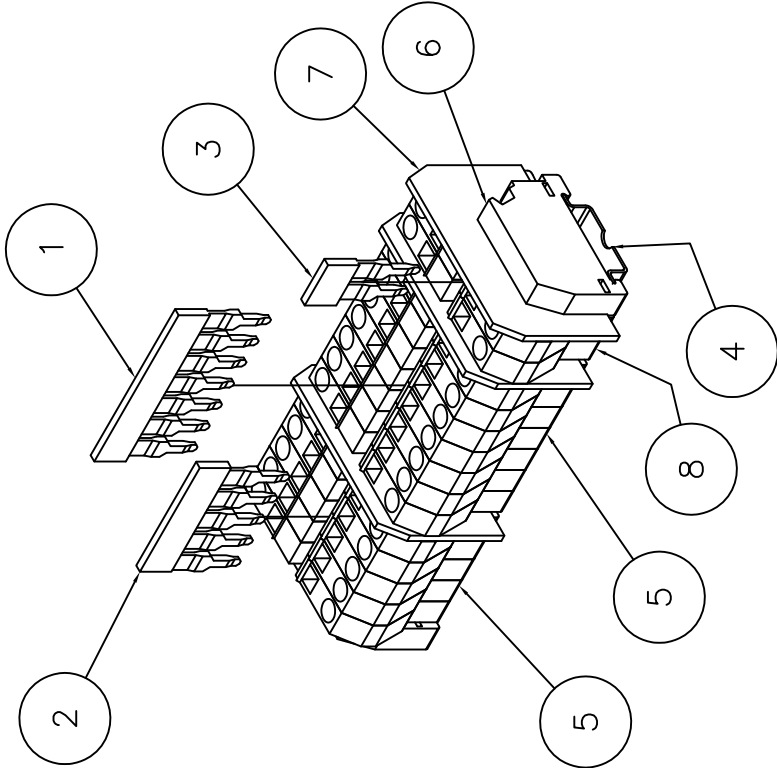

8	601-165-068	Terminal Block, Screwless, Green (For Grounding)	2	
7	601-165-063	End Cover, Screwless Terminal Strip	3	
6	601-165-061	End Stop	2	
5	601-165-059	Terminal Block, Screwless, Grey	12	
4	MP-6000-P-008	Din Rail, 5 1/4 Lg	1	601-160-081
3	MP-5100-P-013	Top Jumper Bar, 2 Pole, Screwless	1	601-165-058
2	MP-5100-P-012	Top Jumper Bar, 5 Pole, Screwless	1	601-165-058
1	MP-5100-P-011	Top Jumper Bar, 7 Pole, Screwless	1	601-165-058
ITEM	NAME	DESCRIPTION	QTY	MATERIAL
NOTE				

C-SIZE

NOTICE OF CONFIDENTIAL INFORMATION

INFORMATION CONTAINED HEREIN IS CONFIDENTIAL AND PROPERTY OF MOHAWK RESOURCES LTD.. WHERE DRAWING IS FURNISHED TO OTHERS IT SHALL BE USED SOLELY FOR PURPOSES OF INSPECTION, INSTALLATION, OR MAINTENANCE. THE INFORMATION SHALL NOT BE USED OR DISCLOSED BY THE RECIPIENT FOR ANY OTHER PURPOSES WHATSOEVER.


- NOTES:
1. REMOVE ALL SHARP CORNERS & EDGES.
  2. UNLESS OTHERWISE SPECIFIED, SURFACE FINISH TO BE 125 RMS.
  3. WELDING MEDIUM SHALL CONFORM TO AWS SPECIFICATIONS TO E-70XX ELECTRODES OR E-70T1 CODE 5.3 FLUX CORE WIRE ONLY.

TOLERANCES:
ANGULAR ± 1.0°
FRACTIONAL ± .030
DECIMAL ± .030
XXX ± .005
FILE NAME
MP-6000-A-011

MP-6000-A-010	SCALE 3/4	DRAWN rw7089	MOHAWK RESOURCES LTD.
MP-6000-A-	CHECKED	APPROVED	TITLE MP-24VDC-SERIES Terminal Strip Assy #1
	DATE 10/2011	WEIGHT 1.4	FROM n/a
			DRAWING NUMBER MP-6000-A-011



#	DESCRIPTION	DATE	APPROVED
A	HARDWARE CHANGED TO LOCK NUTS	06/18/2011	FW7089

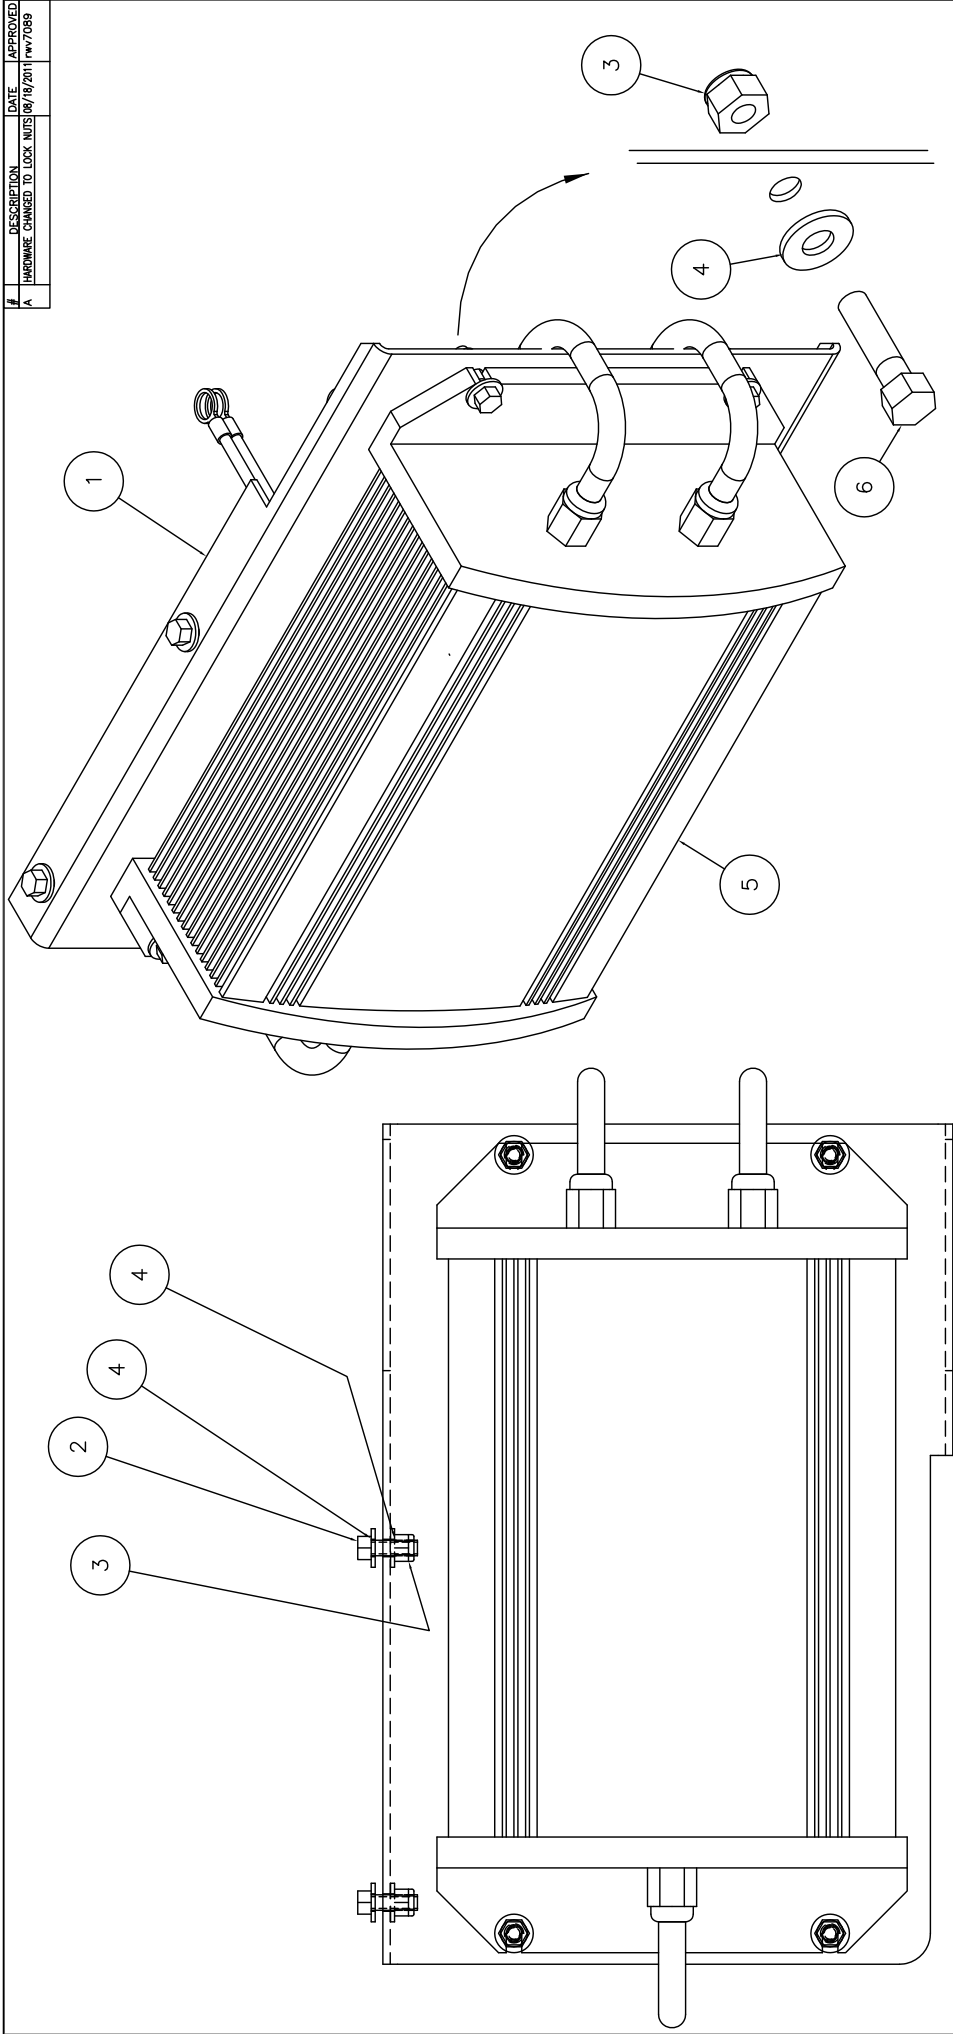

6	600-640-004	Bolt, Hex Head, 1/4-20 NC x 1" (GR5)	4
5	601-160-270	Battery Charger, 20 Amp, Dual 12 VDC Output	1
4	600-710-004	Washer, Flat, 1/4	8
3	600-690-005	Nut, Nylon Lock, 1/4-20 NC	6
2	600-640-013	Bolt, Hex Head, 1/4-20 NC x 3/4 (GR5)	2
1	MP-5100-P-025	Charger Mounting Bracket	1
ITEM	NAME	DESCRIPTION	QTY


NOTICE OF CONFIDENTIAL INFORMATION  
 INFORMATION CONTAINED HEREIN IS CONFIDENTIAL AND PROPERTY OF MOHAWK RESOURCES LTD. IT SHALL BE USED ONLY FOR THE PURPOSES OF FURNISHING MATERIALS AND SERVICES TO THE GOVERNMENT OF CANADA AND SHALL NOT BE DISCLOSED BY THE RECIPIENT FOR ANY OTHER PURPOSES WHATSOEVER.

NOTES:  
 1. FINISH TO ALL SHARP EDGES & RISES.  
 2. UNLESS OTHERWISE SPECIFIED, SURFACE FINISH TO BE 125 RMS.  
 3. WELDING MEDIUM SHALL CONFORM TO AWS A5.18 E70T1 CODE S-3 FLUX CURE WIRE ONLY.

TOLERANCES:  
 DIMENSIONS ± 0.30  
 HOLE DIA ± 0.05  
 HOLE DIA ± 0.05  
 FILE MARK ± 0.05  
 FILE MARK ± 0.05

SCALE: 1"=1"  
 CHECKED: MP-  
 DATE: 07/01/11  
 WEIGHT: 24.75 LB  
 FROM: 17/8

MOHAWK RESOURCES LTD.  
 TITLE: MP-18 Charger Assembly  
 DRAWING NUMBER: MP-5100-A-012

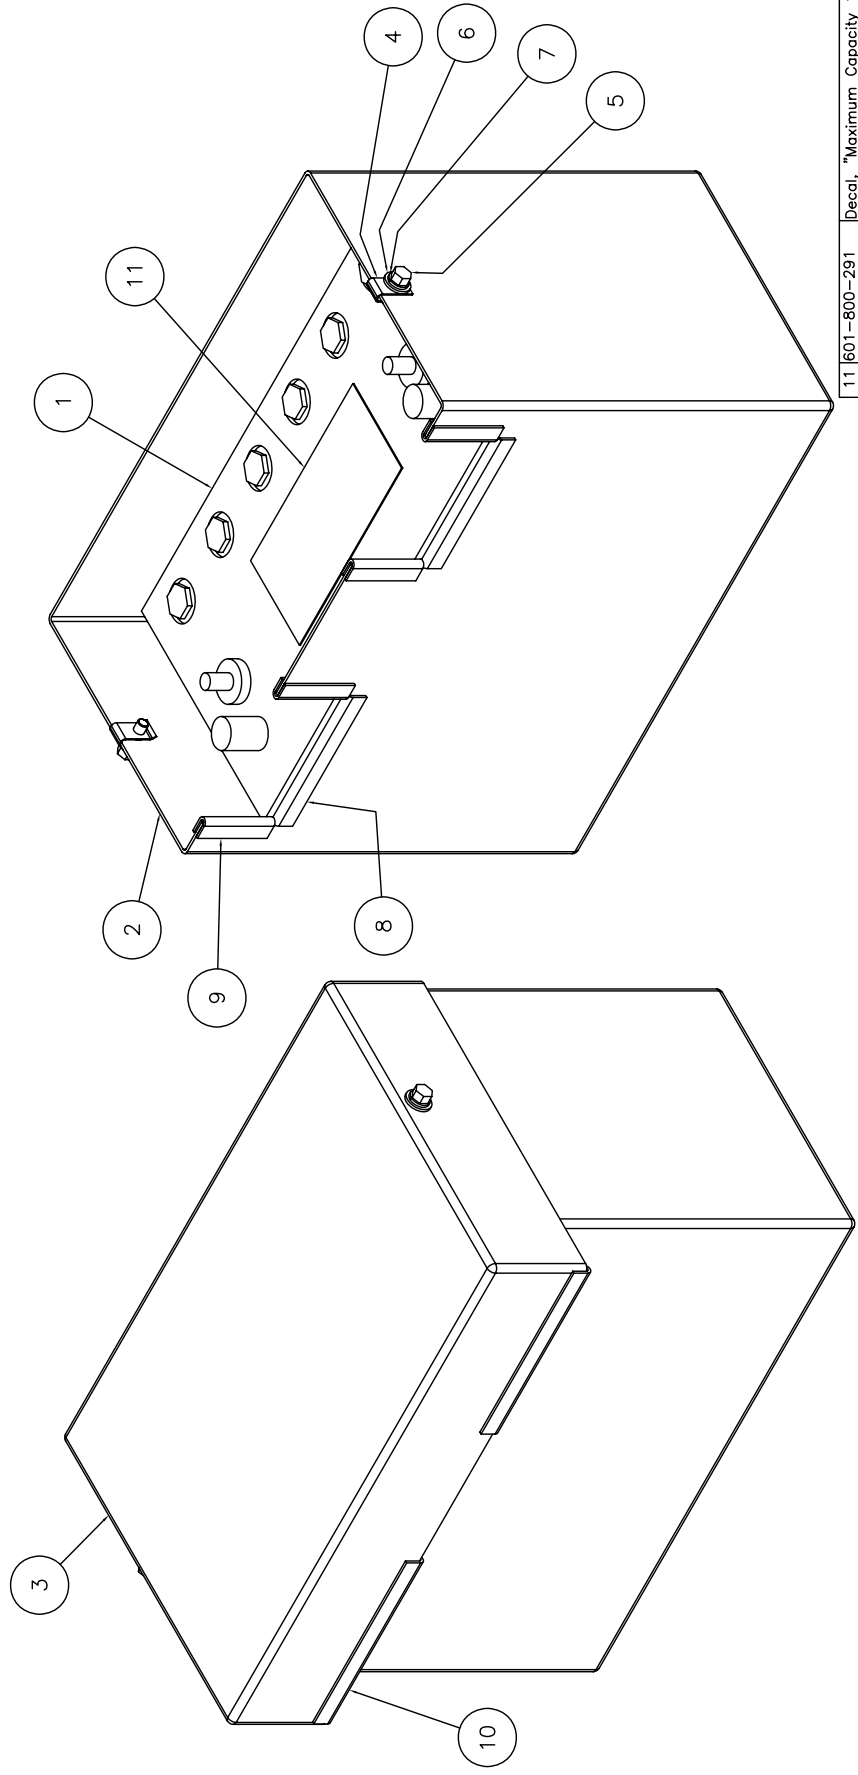

11	601-800-291	Decal, "Maximum Capacity 18000 LBS"	1
10	MP-5300-P-405	Trim Molding, 5" Long, 1/16 Sheet Metal	2
9	MP-5300-P-404	Trim Molding, 1 7/8" Long, 1/16 Sheet Metal	4
8	MP-5300-P-403	Trim Molding, 4" Long, 1/16 Sheet Metal	2
7	600-720-007	Washer, Lock, 1/4	2
6	600-710-004	Washer, Flat, 1/4	2
5	600-640-042	Bolt, Hex Head, 1/4-20 NC x 1/2 (GR5)	2
4	601-200-010	U-Nut, Automotive, 1/4-20	2
3	MP-5300-P-004	Battery Box Top	1
2	MP-5300-P-003	Battery Box Bottom	1
1	601-190-011	Battery, 12VDC	1
ITEM	NAME	DESCRIPTION	QTY

NOTICE OF CONFIDENTIAL INFORMATION		NOTES		TOLERANCES		Parts List		MOHAWK RESOURCES LTD.	
INFORMATION CONTAINED HEREIN IS CONFIDENTIAL AND PROPERTY OF MOHAWK RESOURCES LTD. IT SHALL BE KEPT SECRET, NOT REPRODUCED, COPIED, OR DISCLOSED IN ANY MANNER WITHOUT THE WRITTEN PERMISSION OF MOHAWK RESOURCES LTD.		1. REMOVE ALL SHARP CORNERS & EDGES. 2. ALL DIMENSIONS SPECIFIED, SURFACE FINISH TO BE 125 RMS. 3. WELDING MEDIUM SHALL CONFORM TO AWS SPECIFICATIONS TO E-70XX ELECTRODES OR E-70T1 CODE. SEE FLUX CODE, WELD D1.1.		ANGULAR ± .130 DIMENSIONAL ± .030 SURFACE ± .008 FILE NAME MP-5300-A-001		SCALE 3/4		DRAWN PM7089	
						CHECKED		APPROVED	
						DATE 4/07		WEIGHT 85.6	
NEXT ASSEMBLY		FROM		LBS		DRAWING NUMBER		MP-5300-A-001	

# MOHAWK



## ILLUSTRATIONS

MP-18-SERIES  
ELECTRIC/HYDRAULIC  
PORTABLE LIFT




## Jack Operation:

Prior to moving posts, the rear jack wheels must be engaged. To do this, push black lever down, then jack handle to desired height. When post is in position, collapse jack wheel fully by pulling black lever up.



## Jack Relief Adjustment:

If jack does not collapse under load or if jack does not raise back of post onto wheel, then the relief valve may need to be adjusted. To set proper jack capacity, lift empty post with jack, then remove relief port cap with 5mm allen wrench (see location to right). Using 5mm allen wrench SLOWLY turn adjustment screw counter-clockwise until jack collapses. Then screw in clockwise 1 full turn. Replace port cap.

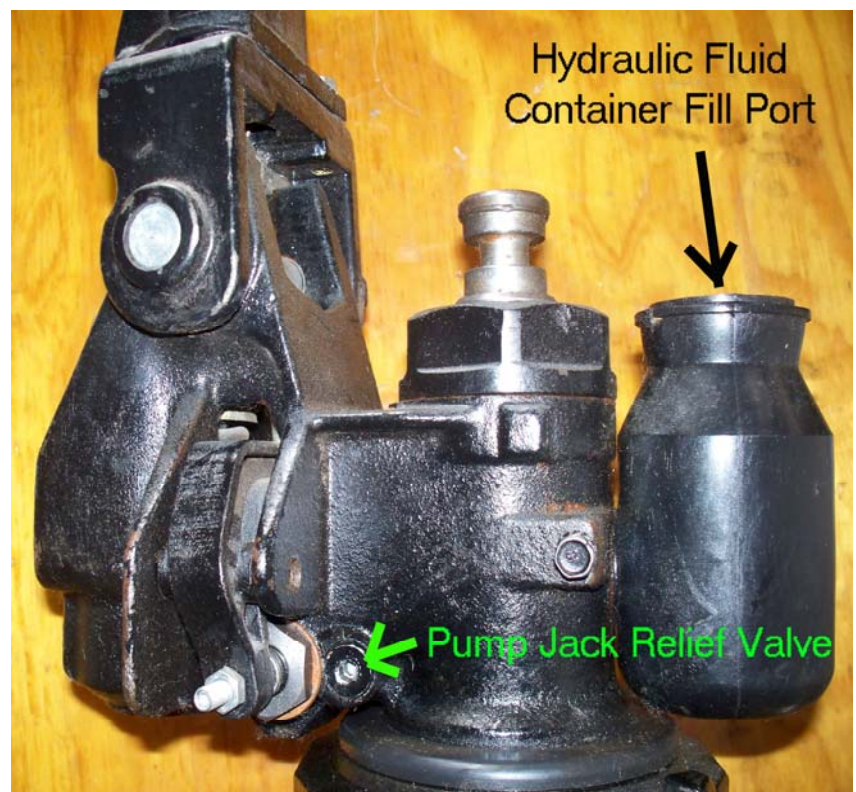

**⚠ WARNING**



Clear area if vehicle  
is in danger of falling.

©

**⚠ WARNING**



Remain clear of lift  
when raising or  
lowering vehicle.

©

**⚠ WARNING**



Locate lift  
on firm, level surface,  
preferably concrete.

©

**⚠ WARNING**



Be sure intended lifts  
are moving together  
evenly.

©


**⚠ WARNING**



All lifting forks must  
properly engage  
vehicle tires  
or supports.

©


**⚠ WARNING**

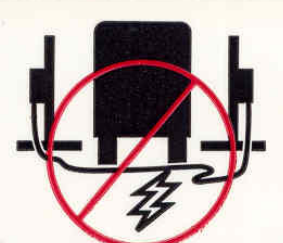

Do not drive over or  
pinch electrical cables.

©

**⚠ WARNING**

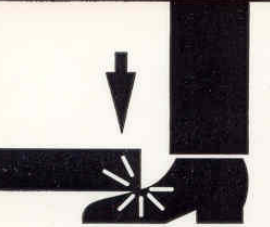

Keep feet  
clear of lift  
while lowering.

©


The messages and pictographs  
shown are generic in nature and  
are meant to generally represent  
hazards common to all automotive  
lifts regardless of specific style.

Funding for the development and  
validation of these labels was  
provided by the Automotive Lift  
Institute, PO Box 33116 Indialantic,  
FL. 32903.

They are protected by copyright.  
Set of labels may be obtained from  
ALI or its member companies.



## ⚠ CAUTION

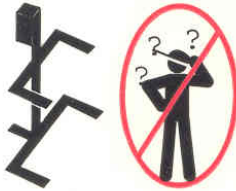

Lift to be used  
by trained operator  
only.

©

## ⚠ CAUTION



Authorized personnel  
only in lift area.

©


## ⚠ CAUTION



When moving lift,  
be careful  
to avoid tipping.

©

## ⚠ CAUTION

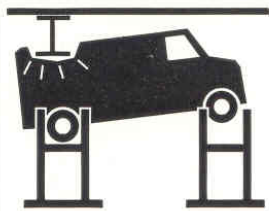

Check for  
overhead obstructions  
before raising vehicle.

©

The messages and pictographs shown are generic in nature and are meant to generally represent hazards common to all automotive lifts regardless of specific style.

Funding for the development and validation of these labels was provided by the Automotive Lift Institute, PO Box 33116 Indialantic, FL. 32903.

They are protected by copyright. Set of labels may be obtained from ALI or its member companies.

© 1992 by ALI, Inc.

ALI/WL400c


## SAFETY INSTRUCTIONS



Read operating  
and safety manuals  
before using lift.

©

## SAFETY INSTRUCTIONS

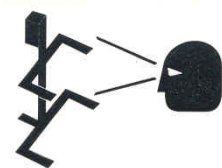

Proper maintenance  
and inspection  
is necessary  
for safe operation.

©

## SAFETY INSTRUCTIONS



Do not operate  
a damaged lift.

©

The messages and pictographs shown are generic in nature and are meant to generally represent hazards common to all automotive lifts regardless of specific style.

Funding for the development and validation of these labels was provided by the Automotive Lift Institute, PO Box 33116 Indialantic, FL. 32903.

They are protected by copyright. Set of labels may be obtained from ALI or its member companies.

© 1992 by ALI, Inc.

ALI/WL400a

# MOHAWK




## SCHEMATICS

MP-18-SERIES (AC VERSION)

ELECTRIC/HYDRAULIC

PORTABLE LIFT

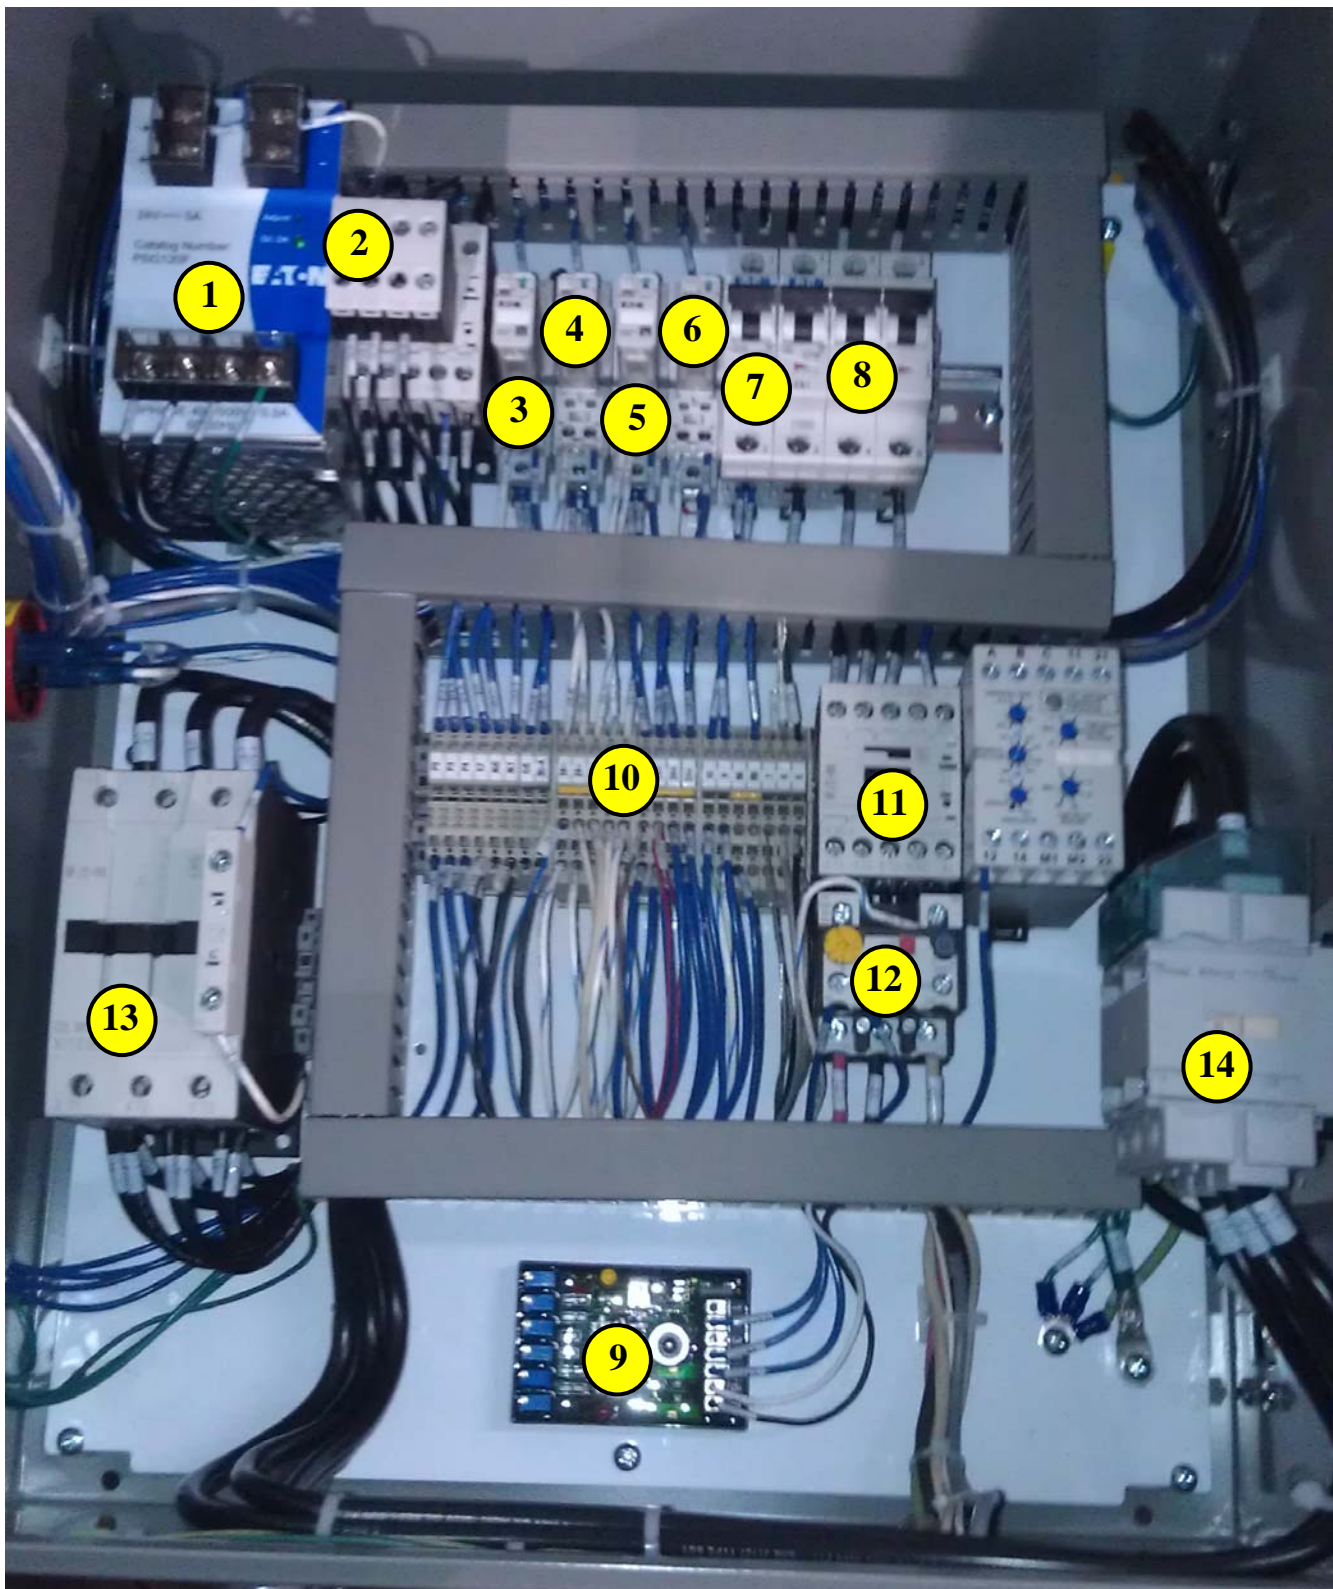


## **AC ENCLOSURE COMPONENTS:**

1. **24VDC POWER SUPPLY** – Converts incoming power to 24VDC for control circuit and solenoids.
2. **CONTACTOR** – Controls switching power to power supply.
3. **RELAY, MAIN POWER PRESENCE** – Detects if Main Power is connected to the box.



4. **RELAY, MAIN POWER SWITCHING** – If all cables and dummy plugs connected properly and all E-Stops released, this relay will switch power to the Main Power Contactor Coil.
5. **RELAY, PLC BUS** – Powers PLC when
6. **RELAY, LOCK RELEASE SOLENOID** – Switches power to lock release solenoid.
7. **CIRCUIT BREAKER** – Protects amperage flow from this enclosure's 24 VDC power supply to its control circuitry.
8. **CIRCUIT BREAKER** – 3 Phase, protects amperage flow to ALL electrical in enclosure.
9. **PROPORTIONAL VALVE CONTROLLER CARD** – Controls output to proportional valve.
10. **BRANCH TERMINAL STRIP** – Junction terminals for incoming and outgoing communication and logic circuit wires.
11. **MOTOR CONTACTOR** – Switches power onto motor when contactor coil energized.
12. **MOTOR OVERLOAD** – Breaks power to motor when amperage setting exceeded.
13. **MAIN POWER CONTACTOR (MASTER ONLY)** – Controls power switching to multiple columns of entire mobile system.
14. **MAIN POWER SWITCH (MASTER ONLY)** – Turns on power to lift system. (lockable)
15. **PHASE RELAY (MASTER ONLY)** – Verifies incoming power phasing for proper motor rotation.
16. **PROGRAMABLE LOGIC CONTROLLER (PLC)** – Controls input and output logic of post and communicates with other PLC's in post system. Provides 24 VDC to all push buttons.

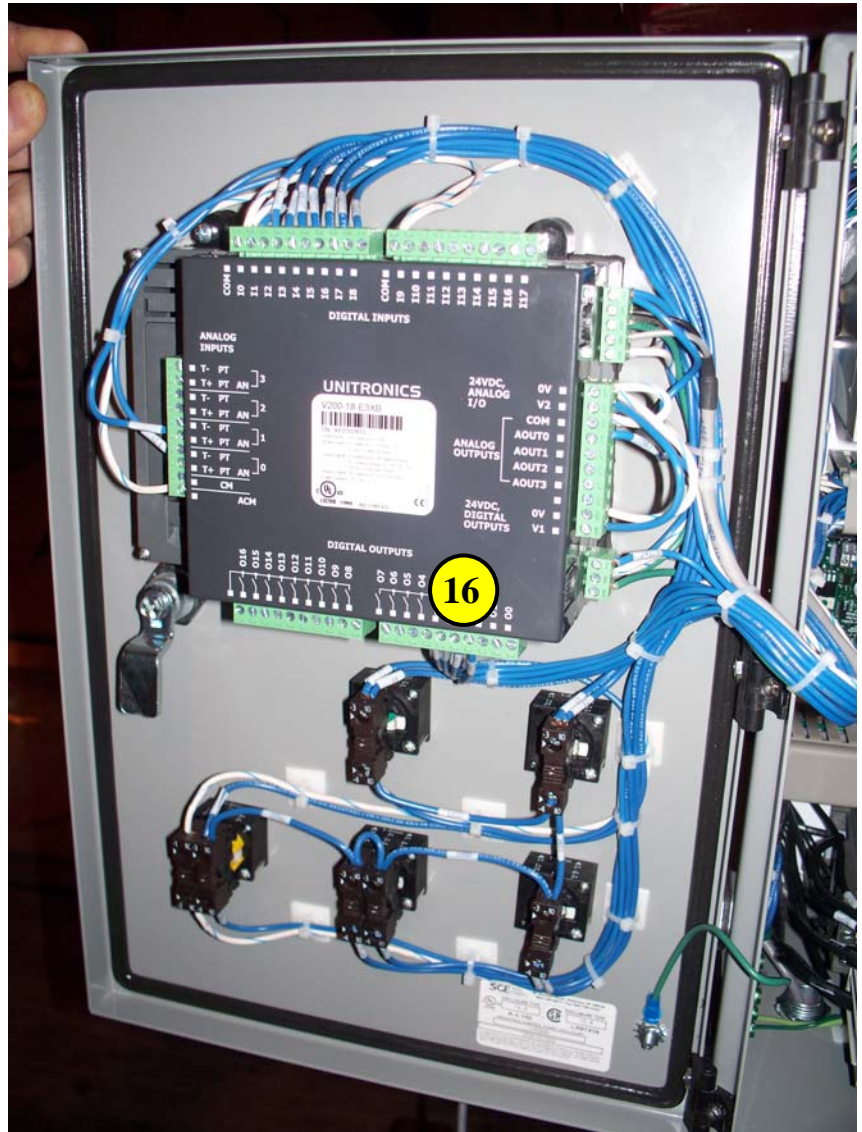



### **SIDE PORTS (VIEW OF PANEL MAY DIFFER):**


**21. MAIN POWER SWITCH (MASTER ONLY)** – Turns on Power to lift system.

**22. MAIN POWER CONNECTION RECEPTACLE** – Place where Main Power lead connects.

**23. COMMUNICATION RECEPTACLE** – Place where communication cable or dummy plug connects.

**24. PENDANT RECEPTACLE (MASTER ONLY)** – Place where hand pendent connects.



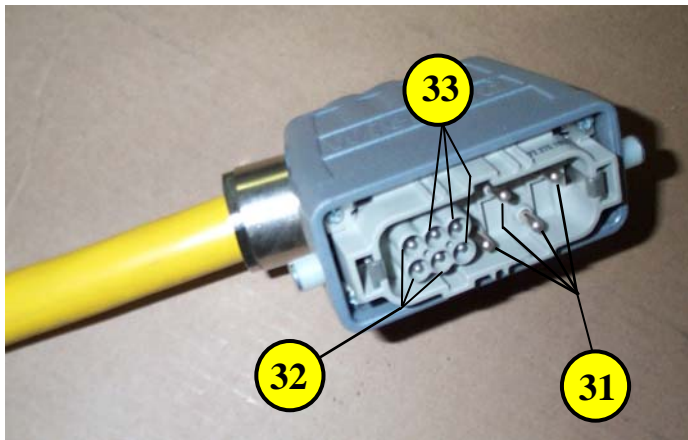

## **COMMUNICATION CABLE:**

### **31. POWER DISTRIBUTION WIRES (Qty:4) –**

3 “hot” wires and 1 ground

### **32. SET-UP LOGIC WIRES (Qty:3) –**

These wires verify proper lift setup using all communication cables, dummy plugs and E-Stops required.

### **33. COMMUNICATION WIRES (Qty:3) –**

These wires provide communication between all the PLC’s in the system.



## **DUMMY PLUGS:**

Place Dummy Plugs “A-TS” and “B-TS” in opposite ends of post system at unused communication ports. System will not power up unless dummy plugs in place.

Note: “TS” denotes TouchScreen. Dummy Plugs “A” and “B” from previous generation models NOT to be used on TouchScreen models.



## **POWER CABLE:**

Connect this cable to a Master post to power the system.




#	DESCRIPTION	DATE	APPROVED
A	Converted to Master/Slave Versions	10/19/2012	rwv7089
B	Correction Made to match wiring.	10/11/2013	rwv7089
C	E-stops placed on power entry to PLC. Page 3 Added for 480 VAC version: 5/6/2014	5/6/2014	rwv7089

# POWER CIRCUIT

STANDARD  
230VAC  
3 PH

SLAVE

MASTER

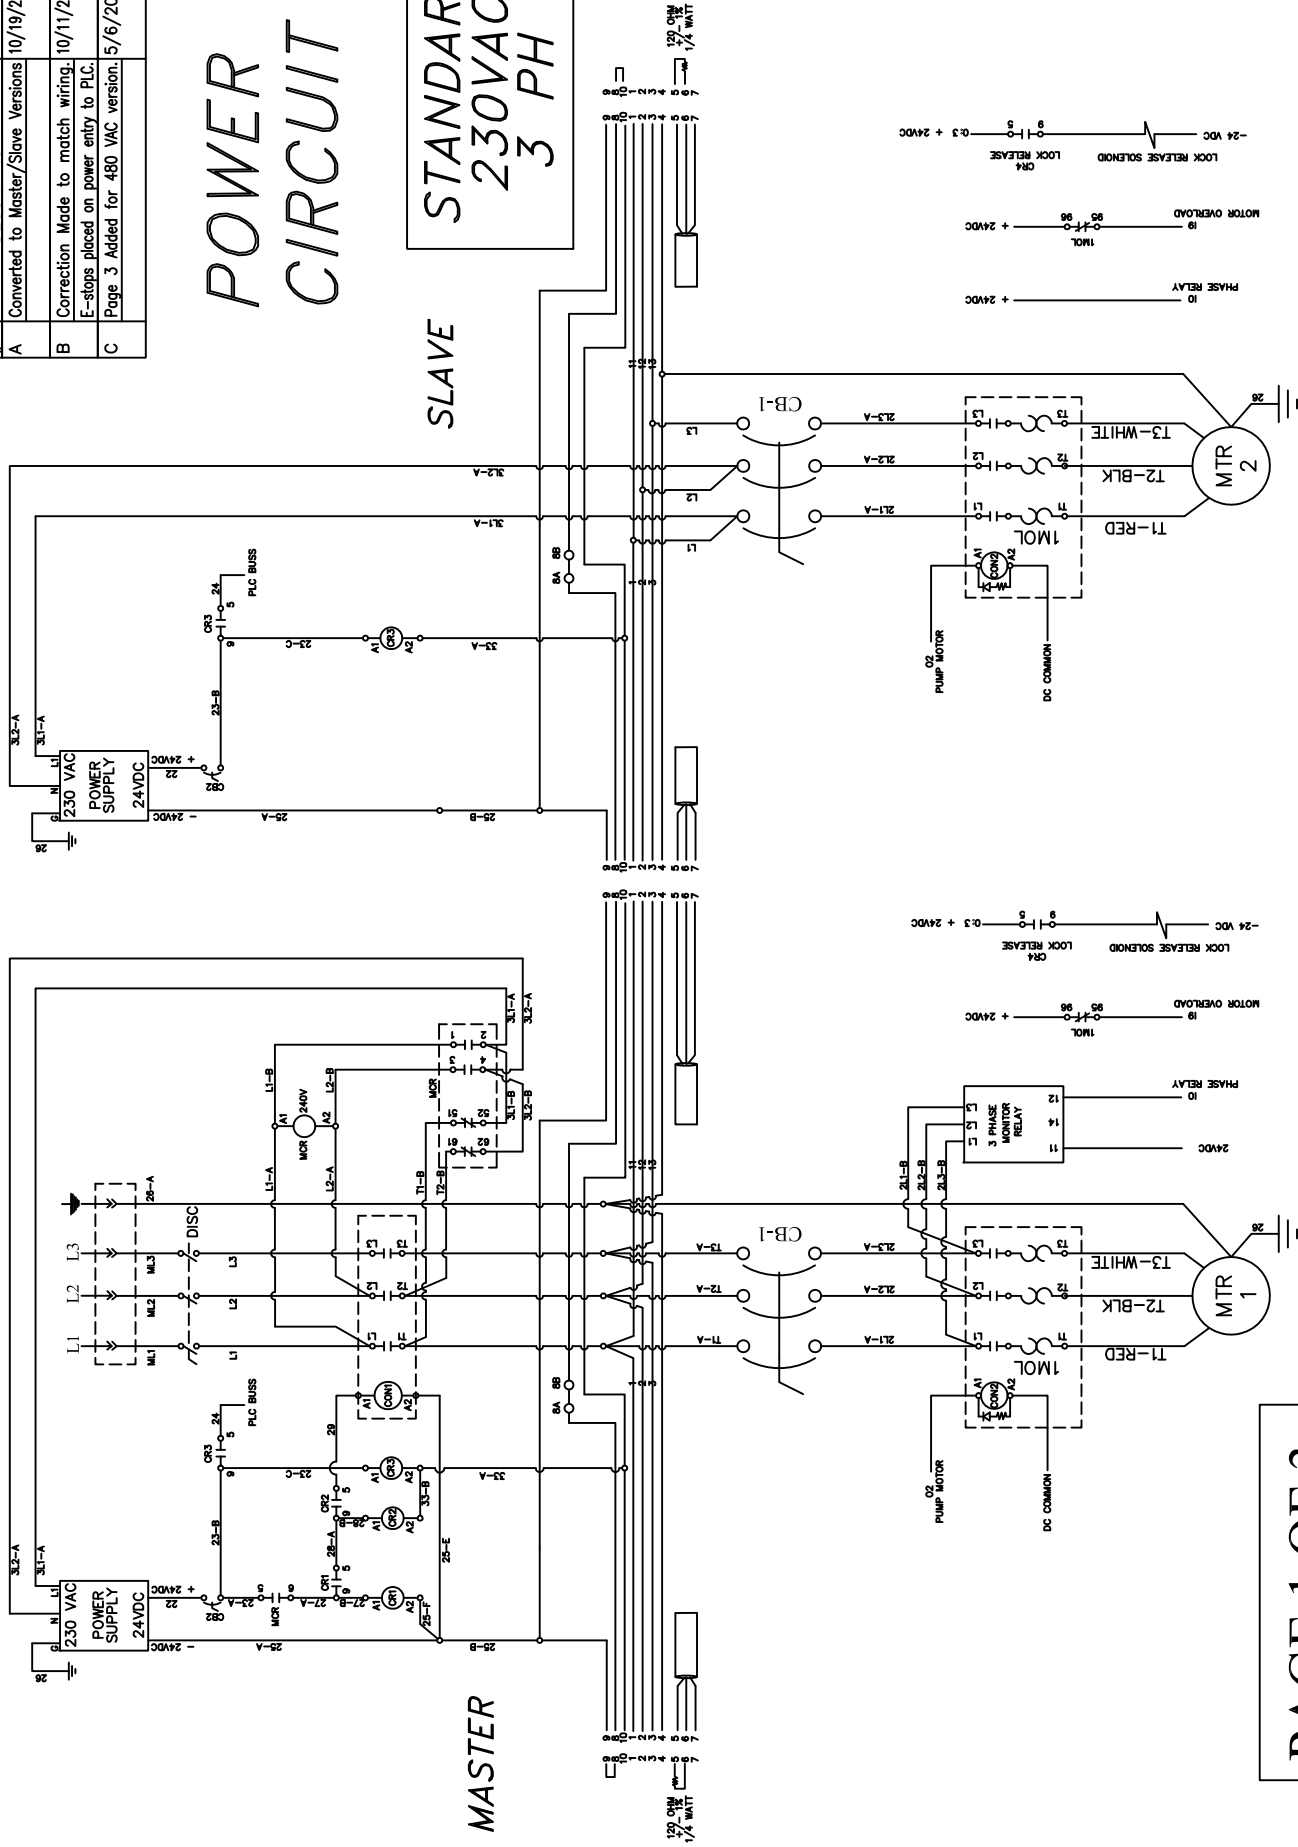

PAGE 1 OF 3

C-SIZE

## NOTICE OF CONFIDENTIAL INFORMATION

INFORMATION CONTAINED HEREIN IS CONFIDENTIAL AND PROPERTY OF MOHAWK RESOURCES LTD. WHERE DRAWING IS FURNISHED TO OTHERS IT SHALL BE USED SOLELY FOR PURPOSES OF INSPECTION, INSTALLATION, OR MAINTENANCE. THE INFORMATION SHALL NOT BE USED OR DISCLOSED BY THE RECIPIENT FOR ANY OTHER PURPOSES WHATSOEVER.

- NOTES:
1. REMOVE ALL SHARP CORNERS & EDGES.
  2. UNLESS OTHERWISE SPECIFIED, SURFACE FINISH TO BE 125 RMS.
  3. WELDING MEDIUM SHALL CONFORM TO AWS SPECIFICATIONS TO E-70XX ELECTRODES OR E-70TT CODE 5.3 FLUX CORE WIRE ONLY.

TOLERANCES:  
ANGULAR: ± 1 °  
FRACTIONAL: ± .030  
DECIMAL: ± .005  
0.XXX  
FILE NAME  
MP-6000-A-052

MP-6000-  
NEXT ASSEMBLY

SCALE  
1'0"=1'0"  
CHECKED  
DATE  
8/2011


WEIGHT  
N/A  
LIB.  
FROM  
N/A

DRAWING NUMBER  
MP-6000-A-052

MOHAWK RESOURCES LTD.  
TITLE  
MP-Series with PROP VALVING  
Electrical Schem




# LOGIC CIRCUIT

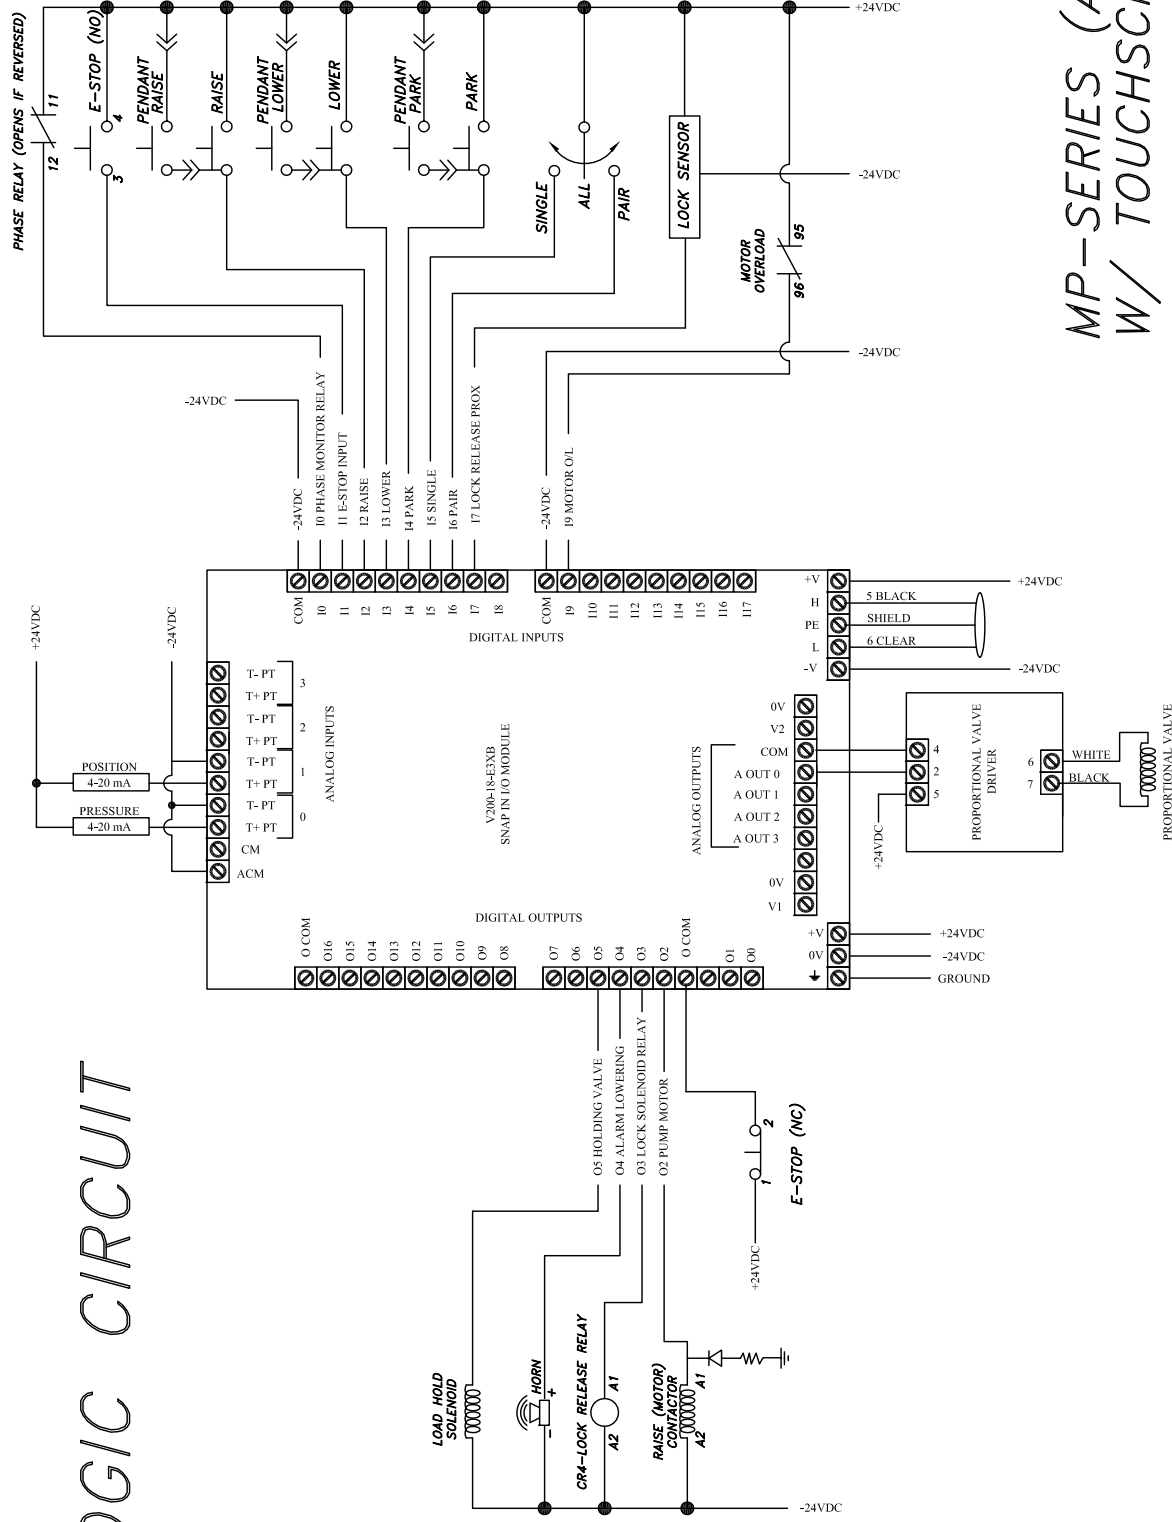

MP-SERIES (AC)  
W/ TOUCHSCREEN

NOTICE OF CONFIDENTIAL INFORMATION				MOHAWK RESOURCES LTD.			
ALL INFORMATION CONTAINED HEREIN IS UNCLASSIFIED AND INTENDED FOR INTERNAL USE ONLY. IT IS NOT TO BE DISCLOSED TO THE PUBLIC OR TO OTHERS WITHOUT THE EXPRESS WRITTEN PERMISSION OF MOHAWK RESOURCES LTD.				MP-Series with PROP VALVING Electrical Schem			
				MP-6000- Electrical Schem			
DRAWING NO. <b>mw7089</b> SCALE <b>1"=1'0"</b> CHECKED <b>mw7089</b> DATE <b>8/2011</b>				TITLE <b>MP-6000- Electrical Schem</b> DRAWN <b>mw7089</b> DATE <b>8/2011</b>			
PROJECT NAME <b>MP-6000-A-052</b> PROJECT NUMBER <b>MP-6000-A-052</b>				PROJECT NAME <b>MP-6000-A-052</b> PROJECT NUMBER <b>MP-6000-A-052</b>			
NEXT ASSEMBLY				NEXT ASSEMBLY			


# MOBILE POST POWER DISTRIBUTION CIRCUIT

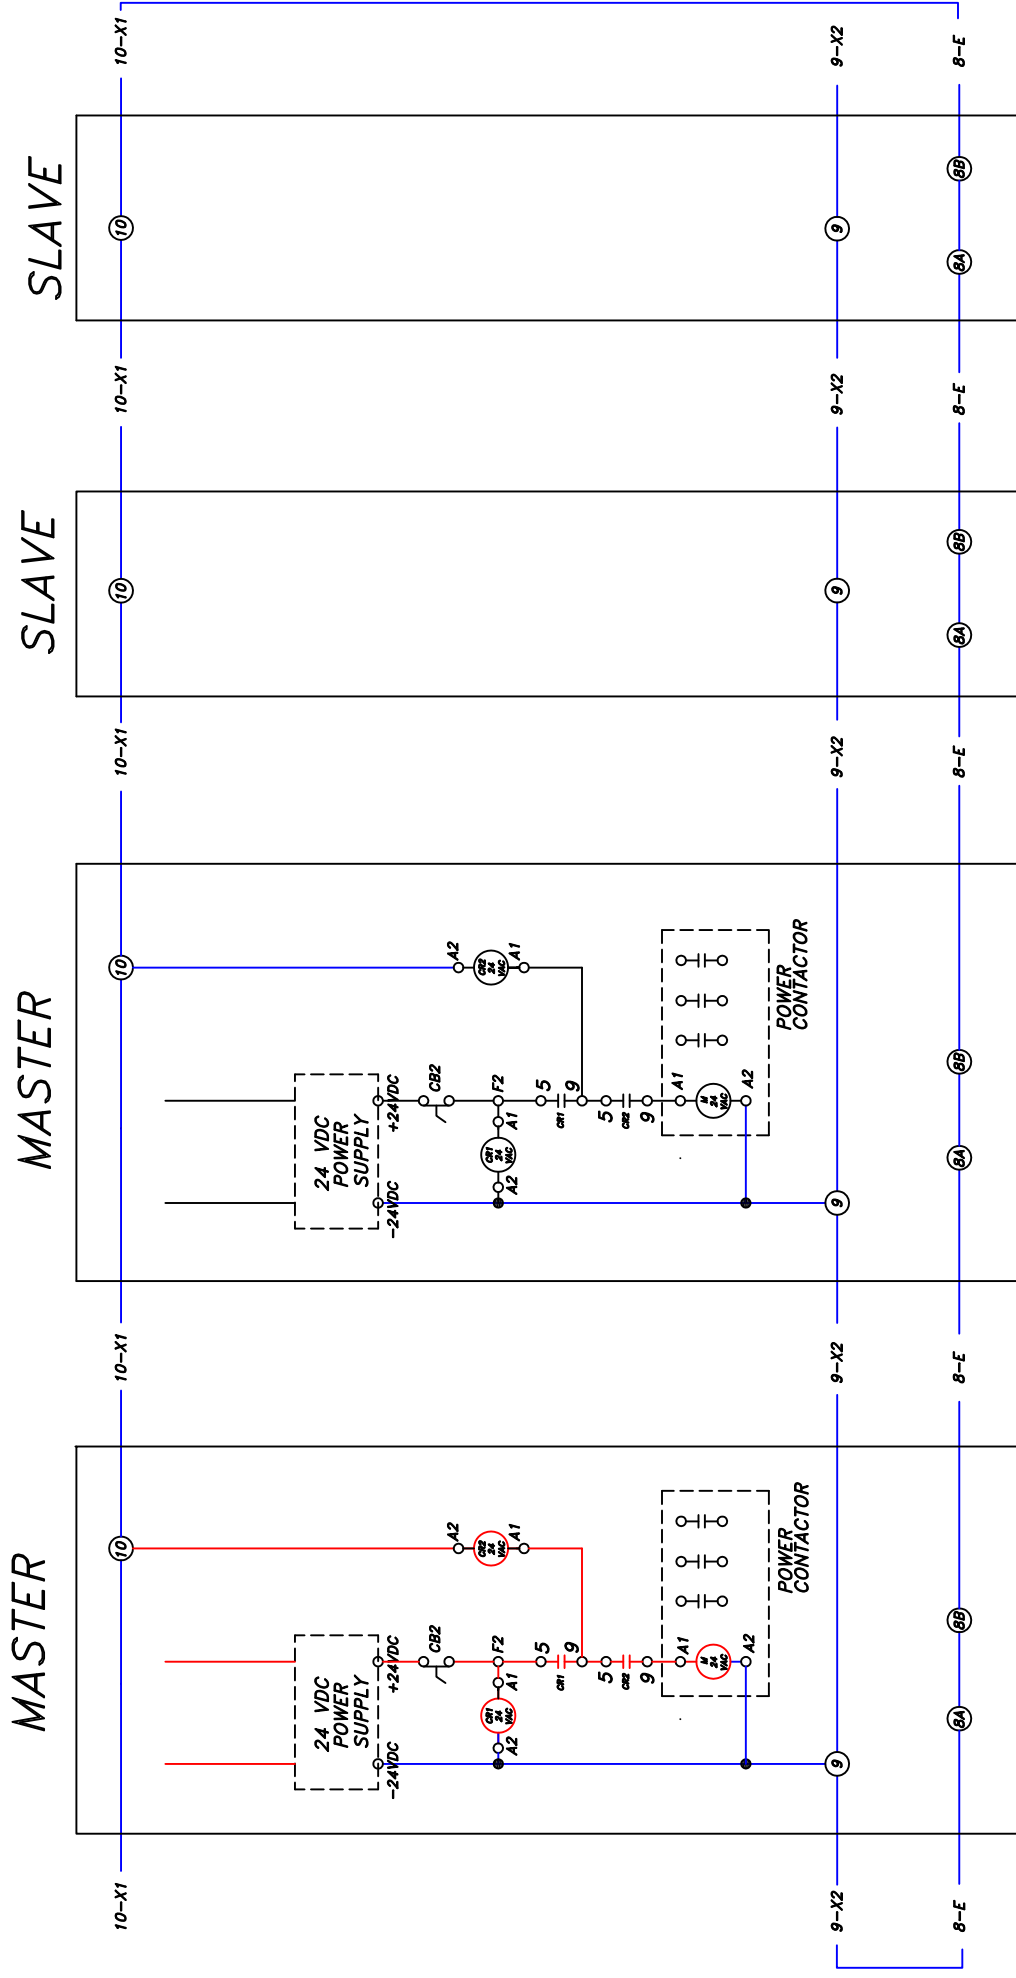

## FUNCTIONS:

1. POWER MUST BE PRESENT AT ONE MASTER COLUMN.
2. ALL CABLES AND BOTH DUMMY PLUGS MUST BE PRESENT.
3. ALL E-STOP BUTTONS MUST BE RELEASED.
4. ONCE ENERGIZED, ANY E-STOP BUTTON WILL STOP CIRCUIT.

#	DESCRIPTION	DATE	APPROVED
A	Corrections made to reflect wiring Notes added for clarity.	10/11/2013	rw7089
B	13 CW TURNS ADDED TO 1 MIN Added wire "25-z2"	5/6/2014	ENGR

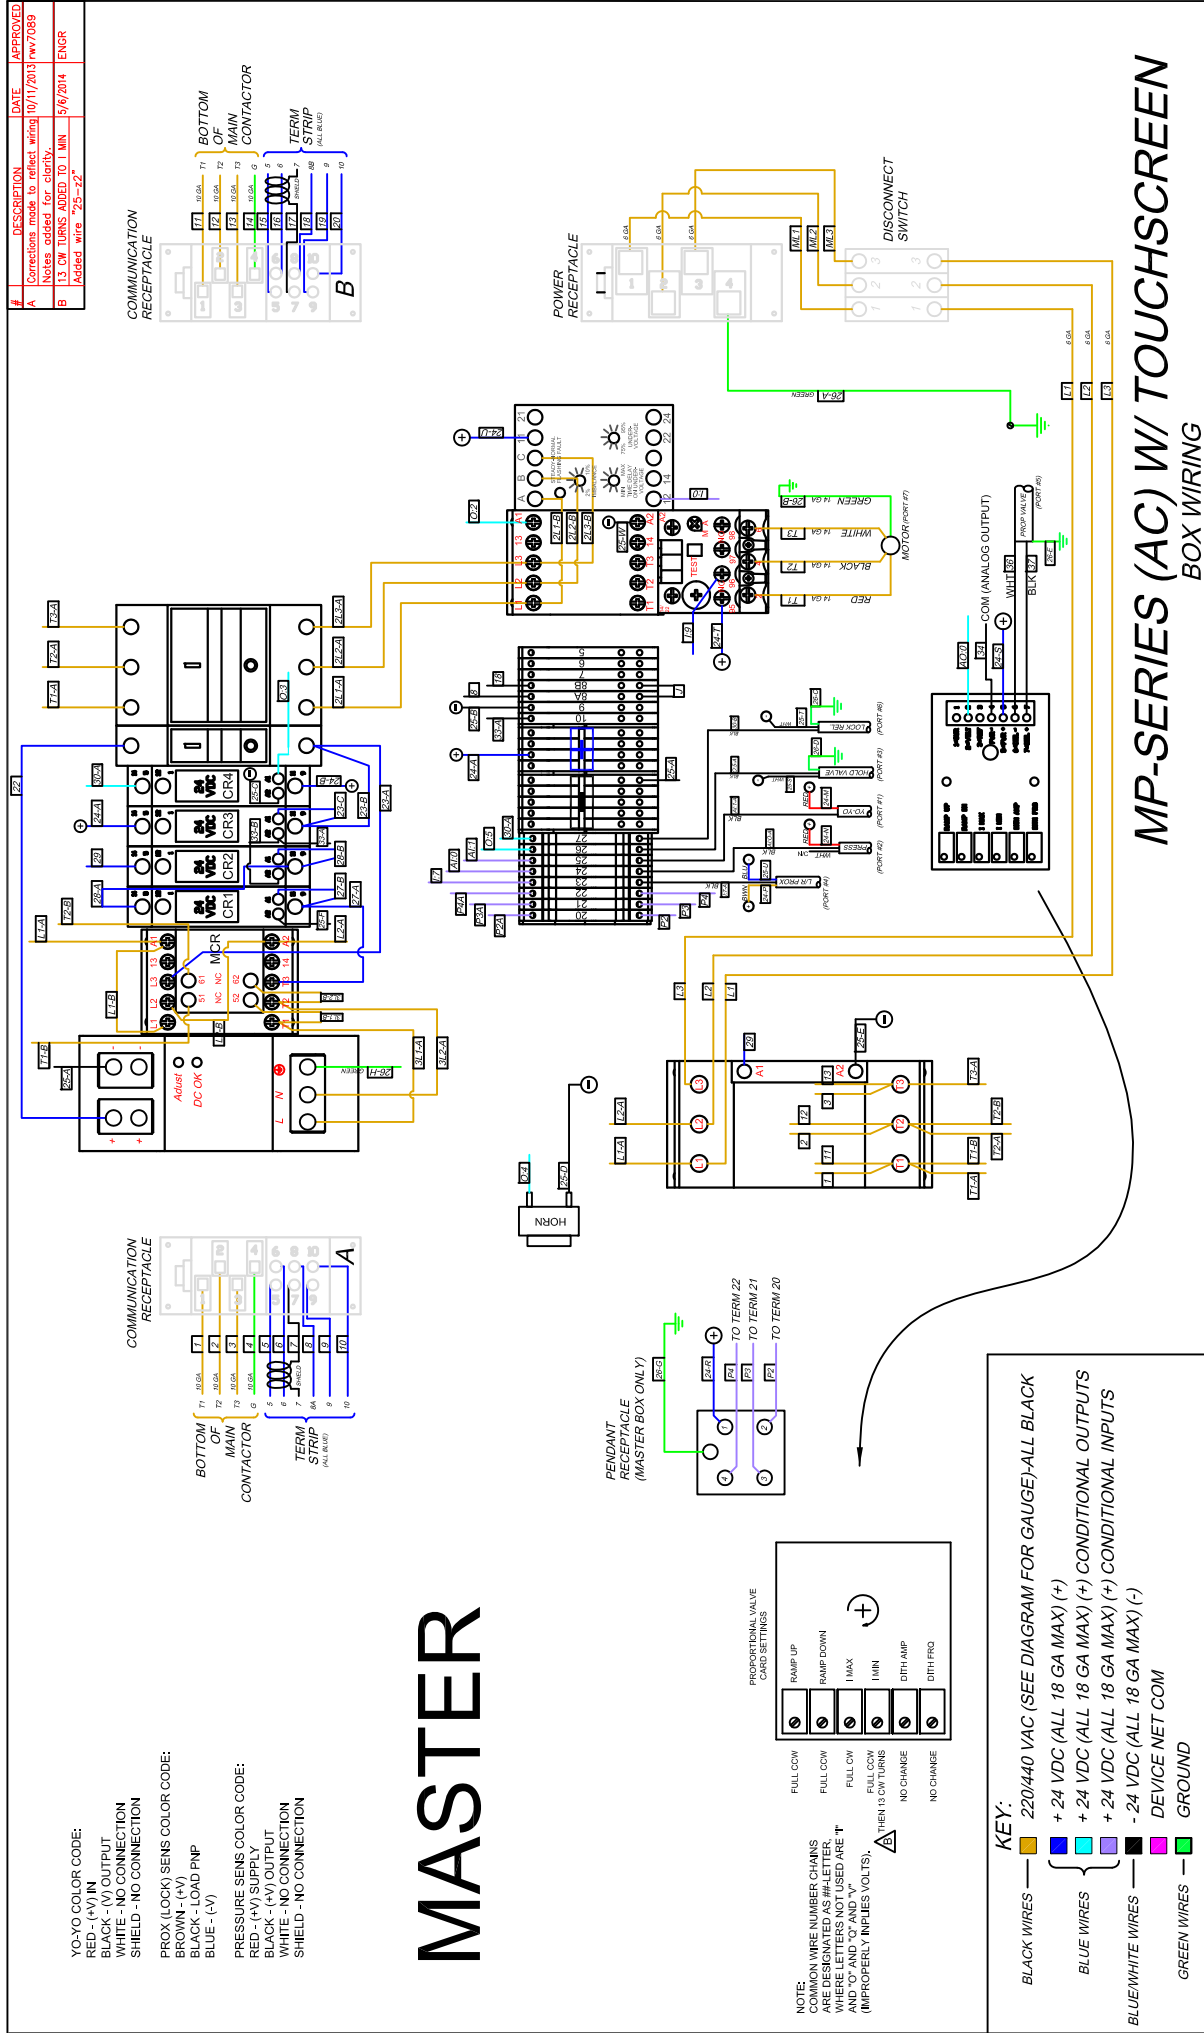

PAGE 1

OF

3

D-SIZE

DRAWING NUMBER

MP-6000-A-053

**NOTICE OF CONFIDENTIAL INFORMATION**

ALL INFORMATION CONTAINED HEREIN IS CONFIDENTIAL AND PROPERTY OF MOHAWK RESOURCES LTD. THESE DRAWINGS ARE loaned TO YOU FOR YOUR INFORMATION ONLY. THESE DRAWINGS ARE TO BE KEPT IN A SECURE LOCATION AND NOT REPRODUCED OR COPIED IN ANY MANNER. THE INFORMATION SHALL BE USED ONLY FOR THE PURPOSES FOR WHICH IT WAS OBTAINED.

**NOTES:**

1. REMOVE ALL SHARP CORNERS & EDGES.
2. UNLESS OTHERWISE SPECIFIED, SURFACE FINISH SHALL BE 320.
3. WELDING METHOD SHALL CONFORM TO AWS SPECIFICATIONS TO E-70XX ELECTRODES OR E-70TT CODE S3 FLUX CORE WIRE ONLY.

**TOLERANCES:**

ANGULAR	± 1.0	
LINEAR	± .005	
RECTANGULAR	± .005	
ROUND	± .005	
SLOT	± .005	
BORE	± .005	

**FILE NAME**

MP-6000-A-053

**SCALE**

1" = 10"

**DRAWN**

RW/DBR

**CHECKED**

MP-6000-

**APPROVED**

MP-Series with PROOF VALVING

**TITLE**

Ene-Series MASTER BOX

**DRAWING NUMBER**

MP-6000-A-053

**DATE**

8/2017

**FROM**

N/A

**NEXT ASSEMBLY**

N/A

**WEIGHT**

N/A

**MOHAWK RESOURCES LTD.**


**MP-6000-**

YO-YO COLOR CODE:  
RED - (+V) IN  
BLACK - (-V) OUTPUT  
WHITE - NO CONNECTION  
SHIELD - NO CONNECTION

PROX (LOCK) SENS COLOR CODE:  
BROWN - (+V)  
BLACK - LOAD PNP  
BLUE - (-V)

PRESSURE SENS COLOR CODE:  
RED - (+V) INPUT  
BLACK - (-V) OUTPUT  
WHITE - NO CONNECTION  
SHIELD - NO CONNECTION


# SLAVE

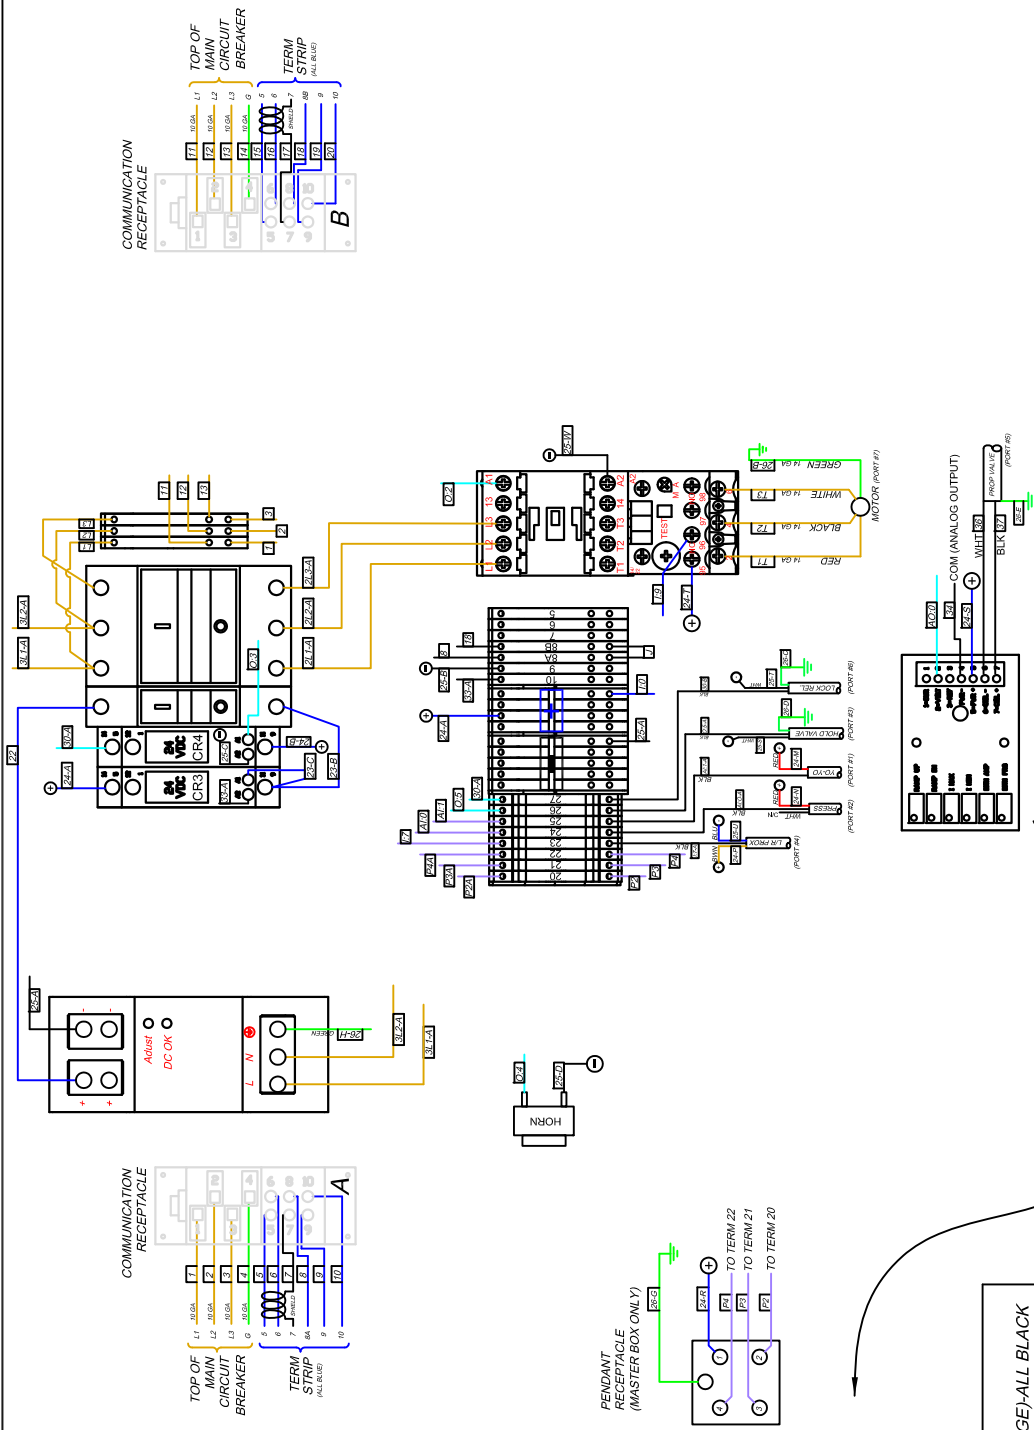

## MP-SERIES (AC) W/ TOUCHSCREEN BOX WIRING


NOTES				TELEPHONE				MOHAWK RESOURCES LTD.			
1. REMOVE ALL SHARP CORNERS & EDGES FROM THE SURFACE OF THE UNIT.				1. 100				DRAWN			
2. UNLESS OTHERWISE SPECIFIED, SURFACE FINISH SHALL BE 304 STAINLESS STEEL.				2. 100				CHECKED			
3. UNLESS OTHERWISE SPECIFIED, ALL ELECTRICAL CONNECTIONS SHALL BE MADE IN ACCORDANCE WITH THE E-7011 CODE 5.3 FLUX CURE WIRE ONLY.				3. 100				APPROVED			
NOTICE OF CONFIDENTIAL INFORMATION				FILE NAME				DATE			
				MP-8000-A-053				NEXT ASSEMBLY			
				MP-8000-A-053				TITLE			
				MP-8000-A-053				MP-SERIES W/ PROX VALVING			
				MP-8000-A-053				DRAWING NUMBER			
				MP-8000-A-053				MP-8000-A-053			

TO +24 VDC FOR SLAVE

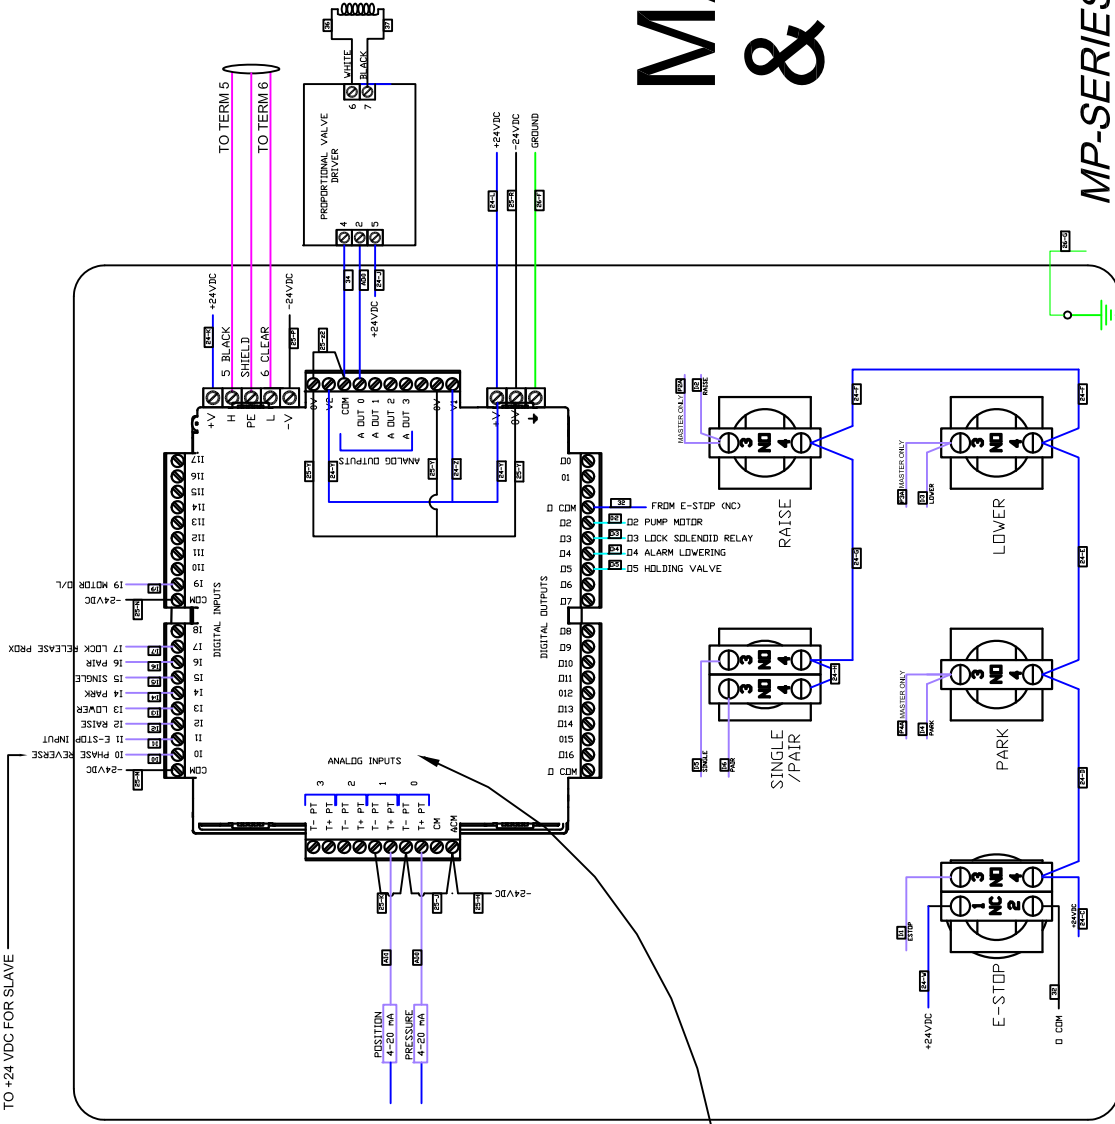

ANALOG INPUT JUMPER SETTINGS:  
JUMPER SETTINGS FOR AI0 AND AI1  
NEED TO BE MODIFIED AS SHOWN BELOW.  
AI0- 4-20 mA - JUMPER A  
AI1- 4-20 mA - JUMPER A  
AI2- 0-10V - JUMPER B  
AI3- NONE

ANALOG	JUMPER	VOLTAGE	CURRENT
AI3	14	A	B
AI3	13	A	B
AI3	12	A	B
AI2	11	A	B
AI2	10	A	B
AI2	9	A	B
AI1	8	A	B
AI1	7	A	B
AI0	6	A	B
AI0	5	A	B
AI0	4	A	B
AI0	3	A	B

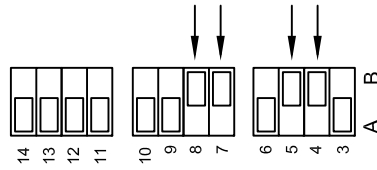

# MASTER & SLAVE

## MP-SERIES (AC) W/ TOUCHSCREEN

DOOR WIRING  
PNP-SOURCING-POSITIVE LOGIC WIRING

NOTICE OF CONFIDENTIAL INFORMATION  
THIS DOCUMENT IS THE PROPERTY OF MOHAWK RESOURCES LTD. AND IS NOT TO BE REPRODUCED OR TRANSMITTED IN ANY FORM OR BY ANY MEANS, ELECTRONIC OR MECHANICAL, INCLUDING PHOTOCOPYING, RECORDING, OR BY ANY INFORMATION STORAGE AND RETRIEVAL SYSTEM. ANY UNAUTHORIZED REPRODUCTION OR TRANSMISSION OF THIS DOCUMENT IS STRICTLY PROHIBITED. MOHAWK RESOURCES LTD. SHALL BE LIABLE FOR ANY DAMAGES, INCLUDING ATTORNEY'S FEES, INCURRED BY THE RECIPIENT FOR ANY OTHER PURPOSES WHATSOEVER.

NOTES  
1. REMOVE ALL SWAMP CORNERS & EDGES.  
2. FINISH TO BE PER RNS. CONFORM TO AISC  
3. SPECIFICATIONS TO E-700 ELECTRODES OR  
E-701 CODE S3 FLUX CORE WIRE ONLY.

TRIMANCES  
REVISED  
DATE  
BY  
FILE NAME  
MP-8000-A-053

MP-8000-  
NEXT ASSEMBLY

SCALE  
100%  
APPROVED  
DATE  
WEIGHT  
N/A

MOHAWK RESOURCES LTD.  
TITLE MP-Series W/ PROX VALVING  
E-700 MASTER SLAVE DOOR  
FORM  
DRAWING NUMBER  
MP-8000-A-123

# MOHAWK



## SCHEMATICS

MP-18-SERIES  
(24VDC VERSION)  
ELECTRIC/HYDRAULIC  
PORTABLE LIFT



## **24 VDC ENCLOSURE:**

**MAIN CONTROL PANEL** – Showing controls for Raise, Lower, Park, Single/All/Pair, and Emergency Stop. Battery Level Gauge and Lift Display also present.





Left Side of Control Box



Right Side of Control Box

## **24 VDC ENCLOSURE PORTS:**


1. **COMMUNICATION RECEPTACLE** – Place where communication cable or dummy plug connects.
2. **12 VDC AUXILIARY POWER RECEPTACLE** – Provided to plug in standard electrical items that run on 12 VDC, (i.e. Lights)
3. **HORN** – Sounds when mechanical locks are released. Volume is adjustable.
4. **PENDANT RECEPTACLE** – Place where hand pendent connects.
5. **COMMUNICATION RECEPTACLE CAP** – Can also be used to hold spare dummy plugs.
6. **OPERATE LIFT/CHARGE LIFT SWITCH** – Turns on Power to post. When post power is turned off, charging is enabled.
7. **120 VAC CHARGER POWER INLET** – Connecting a 120 VAC Power Cord to this inlet provides power to the dual battery charger.



### **ENCLOSURE COMPONENTS (DOOR):**

**PLC (Programmable Logic Controller)** – “Computer” that provides logic to the entire system, controlling all inputs and outputs, and networking with all other posts in the system. Communications are branched off the right side of the PLC to both sides of the box to allow connectivity to other PLC’s in the system.



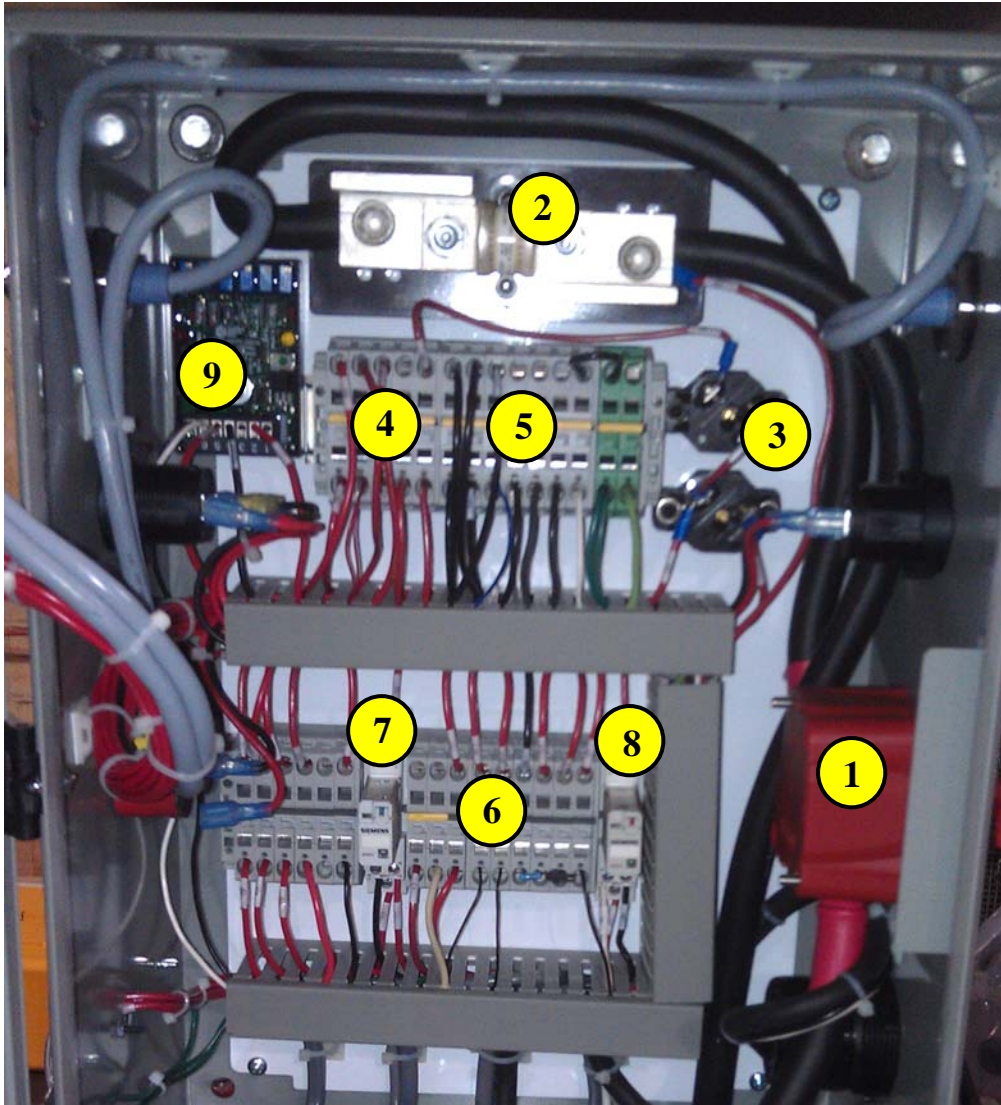

### **MASTER ENCLOSURE COMPONENTS (PANEL):**

1. **MAIN POWER SWITCH** – Turns on Power to the post.
2. **MAIN POWER FUSE** – 200 Amp rated to protect the whole electrical system, and sized to accommodate the motor amperage.
3. **CONTROL CIRCUIT BREAKERS** – One protects the PLC and the raising/lowering solenoids. A separate breaker protects the Lock Solenoid.
4. **24 VDC (+) TERMINAL BLOCKS** – Provide distribution for the +24 VDC.
5. **24 VDC (-) TERMINAL BLOCKS** – Provide distribution for the -24 VDC.
6. **INPUT/OUTPUT TERMINAL BLOCKS** – Provide distribution to several inputs and outputs.
7. **LOCK RELEASE RELAY (24 VDC)** – When energized, will divert power to lock release solenoid.
8. **CHARGER RELAY (120 VAC)** – Energizes when charger is supplied power (120 VAC) and prevents lift from running when lift is charging.
9. **PROPORTIONAL VALVE CONTROLLER CARD** – Controls output to the hydraulic proportional valve of the power unit.



### **COMMUNICATION CABLE:**


This is a DEVICENET network cable that is 10 meters long (32'-10" Long) with male ends. This cable is readily available from a variety of electrical suppliers that deal in network components.



### **DUMMY PLUGS:**

Place male dummy plugs into opposite ends of post system at unused communication ports.



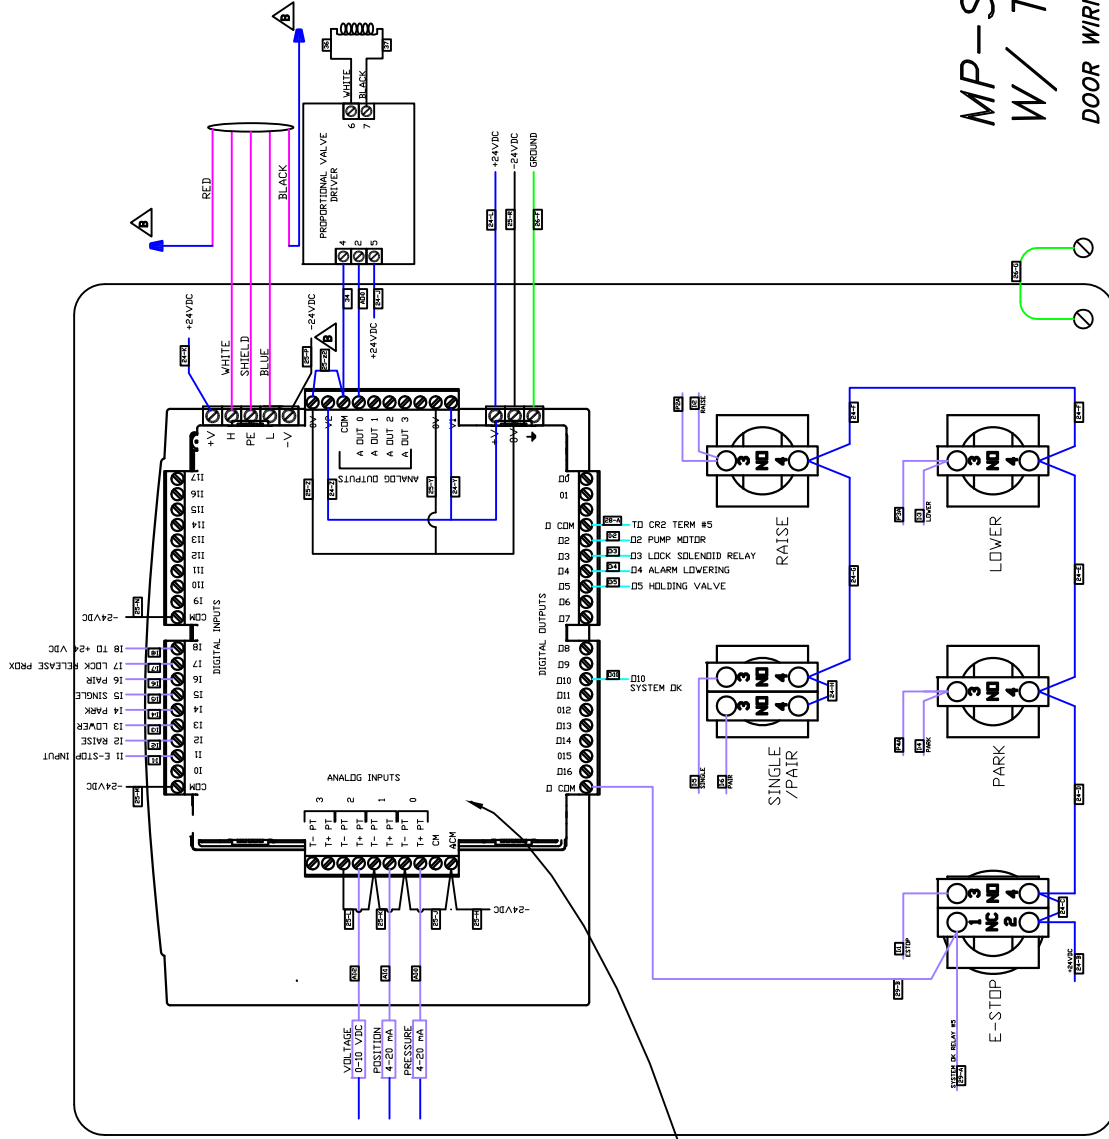

# MP-SERIES (24 VDC) W/ TOUCHSCREEN

DOOR WIRING  
 PNP-SOURCING-POSITIVE LOGIC WIRING

NOTICE OF CONFIDENTIAL INFORMATION		NOTES		TOLERANCES		SCALE		DRAWN		MOHAWK RESOURCES LTD.	
1. REMOVE ALL SHARP CORNERS & EDGES. 2. UNLESS OTHERWISE SPECIFIED, SURFACE FINISH TO BE 125 RMS. CONFORM TO AISC SPECIFICATIONS TO E-70X ELECTRODES OR E-70T CODE S3 FLUX CORE WIRE ONLY.		1. ± .01		1. ± .01		1/2		PMT/2009		MP-24VDC-Series w/Touchscreen Monitor Box Wiring and Screen	
		2. ± .02		2. ± .02		CHECKED		APPROVED		TITLE	
		3. ± .03		3. ± .03		MP-6000-		WEIGHT		FROM	
		4. ± .04		4. ± .04		NEXT ASSEMBLY		DATE		DRAWING NUMBER	
				FILE NAME MP-6000-A-051		10-2012		30		MP-6000-A-051	



# MOHAWK



## CHARGER INFORMATION

MP-18-SERIES  
(24 VDC VERSION)  
ELECTRIC/HYDRAULIC  
PORTABLE LIFT



# Charger Status Lights:

Each post comes equipped with a dual battery charger which provides charging for two 12 VDC batteries (in series makes 24 VDC). Each charger is rated for 120 VAC, 60 Hz, 4 Amp draw. Keep this in mind if using extension cords and multiple adapters into a single outlet. (4 chargers will draw 4 x 4 amps = 16 amps total). There are three charging levels that the charger progresses through to full charge. Refer to the MINN KOTA MK220D manual enclosed at end of this manual. Bank 1 Refers to battery on the left (as viewed from the control box), Bank 2 is battery on the right (under the charger).

Note that to protect the charger, the lift will not function when power is supplied to the charger receptacle. Once power is supplied to charger receptacle, "Power On" light illuminates on charger and lift control panel will power.

**Bulk Charging Mode:** Each bank will show **Solid Yellow Lights**. (charger delivers full current to batteries until they reach ~75% charge)

**Absorption Charging Mode:** Each bank will show **Flashing Yellow Lights**. (charging current tapers down while battery voltages held at 14.4V at 77DegF.)

**Maintenance / Float Charging Mode:** Each bank will show **Flashing Green Lights**. (charger voltage dropped to 13.4V per bank to maintain full charge on battery)

**Ready:** Each bank will show **Solid Green Lights**. (batteries have been in maintenance mode for more than 24 hrs).

Any **Red Light** would indicate error in charging. Consult charger section for details.



**NOTE:** Avoid halting charging cycle until batteries are fully charged (this may decrease the life and charge holding capacity of the batteries). Do not recharge fully charged batteries. Status of left battery may differ from status of right battery. Wait until both batteries are fully charged prior to using lift.



Anywhere. Anytime.



**OWNER'S MANUAL FOR  
MINN KOTA ONBOARD  
BATTERY CHARGERS  
Models: MK110D, MK210D,  
MK220D, MK315D, MK330D**

**Service Information:**

Please call our service department at 800-227-6433 if you have any problems with your battery charger. A technical support representative will be happy to assist you.



Compliant with FCC  
PART 15, Class B

## **1. SAFETY INFORMATION**

### **IMPORTANT SAFETY INSTRUCTIONS**

#### **SAVE THESE INSTRUCTIONS!**

This manual contains important safety and operating instructions applicable to the safe and efficient use of your Minn Kota battery charger.

The Minn Kota battery charger is a powerful electrical device. If incorrectly installed, configured or operated, the battery charger can damage batteries and / or electrical equipment. Please read thoroughly the instructions and safety information contained in this manual before operating the battery charger.

#### **WARNING: RISK OF EXPLOSIVE GASES**

WORKING IN THE VICINITY OF A LEAD ACID BATTERY IS DANGEROUS. BATTERIES CONTAIN SULFURIC ACID AND PRODUCE EXPLOSIVE GASES. A BATTERY EXPLOSION COULD RESULT IN LOSS OF EYESIGHT OR SERIOUS BURNS. FOR THIS REASON, IT IS OF UTMOST IMPORTANCE THAT YOU FOLLOW THE INSTRUCTIONS EACH TIME YOU USE THE CHARGER.

TO REDUCE THE RISK OF BATTERY EXPLOSION, FOLLOW THESE INSTRUCTIONS AND THOSE PUBLISHED BY THE BATTERY MANUFACTURER FOR ANY EQUIPMENT YOU INTEND TO USE IN THE VICINITY OF THE BATTERY. REVIEW CAUTIONARY MARKINGS ON THESE PRODUCTS AND ON ENGINE, MOTOR OR OTHER EQUIPMENT REQUIRING BATTERY USAGE.

Use of an attachment not recommended or sold by Johnson Outdoors Inc. may result in risk of fire, electric shock, or injury to persons or property.

The charger is not intended for use by young children or infirm persons without supervision. Young children should be supervised to ensure that they do not play with the charger.

To reduce risk of damage to electric plug or cord, pull by the plug rather than the cord when disconnecting the battery charger.

An extension cord should not be used unless absolutely necessary. Use of the improper extension cord could result in a risk of fire or electric shock. If extension cord must be used, make sure:

- a) That pins of plug of the extension cord are the same number, size and shape of those of the plug on the battery charger;
- b) That extension cord is properly wired and in good electrical condition;
- c) That wire in extension cord is proper size as follows:

Minimum recommended AWG wire size for various length extension cords used with the Minn Kota battery charger:

Length of Cord in feet	25	50	100
AWG Size	16	14	12

Do not operate the battery charger with a damaged cord or plug.

Do not operate the battery charger if it has received a sharp blow, been dropped or otherwise damaged in any way.

Do not disassemble the charger. Incorrect reassembly may result in a risk of electric shock or fire.

To reduce risk of electric shock, unplug the charger from outlet before attempting any maintenance or cleaning. Disconnecting the leads will not reduce this risk.

To reduce to risk of shock or spark, never touch the ring terminals together while the charger is plugged into an outlet or extension cord.

External connections to the battery charger shall comply with the United States Coast Guard electrical regulations (33CFR183, Sub Part 1).

## **2. PERSONAL PRECAUTIONS**

Consider having someone close enough nearby to come to your aid when you work near a lead acid battery.

Have plenty of fresh water and soap nearby in case battery acid contacts skin, clothing or eyes.

Wear complete eye protection and clothing protection. Avoid touching eyes while working near battery.

If battery acid contacts skin or clothing, wash immediately with soap and water. If acid enters eye, immediately flood eye with running cold water for at least 10 minutes and get medical attention immediately.

Never smoke or allow a spark or flame in vicinity of battery, engine, motor or other flammable or explosive equipment.

Be extra cautious to reduce risk of dropping a metal tool onto battery. It might spark or short circuit battery or other electrical part that may cause explosion.

Remove personal metal items such as rings, bracelets, necklaces, and watches when working with a lead acid battery. A lead acid battery can produce a short circuit current high enough to weld such items, causing severe burns.

Use the Minn Kota battery charger for charging and maintaining FLOODED / WET CELL, MAINTENANCE FREE, AND AGM / STARVED ELECTROLYTE batteries only. It is not intended to supply power to low voltage electrical systems other than for charging and maintaining batteries. Do not use the charger for charging dry-cell batteries that are commonly used with home appliances. These batteries may burst and cause injury to persons and damage to property.

NEVER charge a frozen battery.

### **3. PREPARING TO CHARGE**

1) If necessary to remove battery from boat or vehicle to charge or maintain, always remove grounded terminal from battery first (if applicable). Make sure all accessories in the boat or vehicle are off, so as not to cause an arc.

2) Be sure area around battery is well ventilated while battery is being charged or maintained.

3) Clean battery terminals. Be careful to keep corrosion from coming in contact with eyes.

4) Add distilled water in each cell until battery acid reaches level specified by battery manufacturer ONLY AFTER the battery has been charged. Adding water to a discharged battery may result in acid leaking out of the battery and causing injury to persons and damage to property. Do not overfill. Study all battery manufacturers' specific precautions; however, make sure to REPLACE ALL CELL CAPS after refilling so that water evaporation is avoided. Water will evaporate over time if cell caps are not replaced after refilling. For a battery without removable cell caps, such as valve regulated lead acid batteries, carefully follow manufacturer's recharging instructions.

**NOTE: The battery fluid level should be checked every 30 days**

5) Study all battery manufacturers' specific precautions while charging and recommended rates of charge.

### **4. DC CONNECTION PRECAUTIONS**

1) The Minn Kota charger will only charge 12 volt 6 cell lead acid batteries. Do not connect the output of the charger to any other voltage or type of battery.

2) The charger's DC output terminals are designed to be permanently mounted and connected to batteries.

3) Connect and disconnect DC output terminals only after removing the AC plug from the electric outlet.

4) The charger output leads must be connected with the correct polarity for the charger to function. The RED lead must be connected to the POSITIVE terminal of the battery and the BLACK lead must be connected to the NEGATIVE terminal of the battery. **See section 6 under "CONNECTING THE BATTERIES TO THE CHARGER" for proper connection procedure.**

### **5. GROUNDING AND AC POWER CORD CONNECTION INSTRUCTIONS**

The Minn Kota battery charger should be grounded to reduce risk of electric shock. The charger is equipped with an electric AC power cord with a grounded plug. The plug must be plugged into an outlet that is properly installed and grounded in accordance with all local codes and ordinances.

**DANGER** – Never alter AC cord or plug provided – if it will not fit outlet, have proper outlet installed by a qualified electrician. Improper connection can result in a risk of an electric shock.

**CAUTION** – To reduce risk of fire or electric shock, connect battery charger directly to grounding receptacle (three-prong). An adapter should not be used with battery charger.

## **6. INSTALLING THE BATTERY CHARGER**

### **CHOOSING THE MOUNTING LOCATION:**

For optimum performance, the charger should be mounted flush on a bulkhead in a protected area away from rain or spray. Do not mount the charger above batteries as lead-acid batteries give off corrosive gasses which will damage the charger over time. Never allow battery acid to drip on charger when reading electrolyte specific gravity or filling battery. Also, as with most electrical devices, do not mount the charger below the waterline of the boat or directly adjacent to fuel tanks.

Each DC output cord is 6 feet long. Make sure that all DC output cords can reach the batteries and that the AC power cord can reach a power source. When using an extension cord, make the AC connection to the charger outside of the battery compartment as far away as practical to reduce the risk of a spark igniting gasses in the compartment.

Each output cord is equipped with a temperature sensor. By monitoring external temperature, the battery charger adjusts the charging profile of the battery to assure full charge without overcharging or undercharging the battery. Attempting to lengthen or shorten the output wires could damage the temperature sensor and affect the charger output.

If the DC battery leads are not long enough, they may be lengthened by splicing and soldering 12 AWG (minimum) wire. Each splice should be covered with dual wall adhesive lined heat shrink tubing to protect the joint from corroding. The splice should be made between the fork in the output cable and the fuse holder. The fuse holder should always remain within 7" of the battery terminals. The maximum extension length is 15 feet. You may contact the Minn Kota Service Department with any questions. Do not splice the AC power cord, as this voids the three year Limited Warranty.

Even though the Minn Kota charger is capable of operating in a high ambient temperature environment, a minimum of 6 inches of unobstructed area should be allowed on all sides of the unit for proper air circulation and cooling. Proper cooling and circulation will allow the charger to operate at peak efficiency.

### **MOUNTING THE CHARGER:**

Due to the weight of the charger and the pounding that boats routinely endure, take the time to securely mount the charger to prevent damage. Mounting with bolts, nuts, and washers is preferable to mounting with screws. Use the largest diameter bolts possible, and use all four mounting holes.

Your battery charger is supplied with an AC plug holder designed to hold the power cord plug when not in use. Mount the AC plug holder with four screws in a convenient dry site to prevent corrosion to the AC plug and to prevent the AC plug from making contact with the battery posts.

**CAUTION** – Because the body of the battery charger is metallic, do not directly mount the charger to the hull of an aluminum boat. Use a means of isolation (such as wood or plastic) to prevent the charger body as well as mounting fasteners from coming in contact with the aluminum boat structure or hull. Doing so will eliminate any risk of electrolysis that may occur when AC power is connected to the charger.

**WARNING** – MAKE SURE THE CHARGER IS DISCONNECTED FROM AC POWER BEFORE CONNECTING THE BATTERIES TO THE OUTPUT CORDS.

**CAUTION** - Before making any connections to batteries in a confined space (such as a battery compartment of a boat), open the door or hatch of the compartment and allow it to air out for 15 minutes. This allows any gasses that have accumulated in the compartment to escape.

### **CONNECTING THE BATTERIES TO THE CHARGER:**

FOLLOW THESE STEPS WHEN THE BATTERY CHARGER IS *INSTALLED IN A BOAT OR VEHICLE*. A SPARK NEAR THE BATTERY MAY CAUSE BATTERY EXPLOSION. TO REDUCE THE RISK OF A SPARK NEAR THE BATTERY:

1. Position AC and DC cords to reduce risk of damage by hood, door, or moving engine parts.
2. Stay clear of fan blades, belts, pulleys and other parts that can cause injury to persons.
3. Check polarity of battery posts. POSITIVE (POS, P, +) battery post is usually larger in diameter than NEGATIVE (NEG, N, -) post.
4. Determine which post of the battery is grounded (connected) to the chassis (if any). If negative post is grounded to the boat hull or chassis (as in most vehicles), see (5) below. If positive post is grounded to the boat hull or chassis, see (6) below. If neither is grounded, the order in which the output leads are connected does not matter.
5. For negative-grounded boat or vehicle, connect POSITIVE (RED) output terminal to POSITIVE (POS, P, +) ungrounded post of battery first. Then connect NEGATIVE (BLACK) output to NEGATIVE (NEG, N, -) grounded post of battery.
6. For positive-grounded boat or vehicle, connect NEGATIVE (BLACK) output to NEGATIVE (NEG, N, -) ungrounded post of battery first. Then, connect POSITIVE (RED) output terminal to POSITIVE (POS, P, +) grounded post of battery.
7. When disconnecting charger, disconnect AC power cord from electric outlet first.
8. When disconnecting output terminals from battery posts, always do so in reverse sequence of the connecting procedure while as far away from battery as practical.

FOLLOW THESE STEPS WHEN BATTERY IS *OUTSIDE BOAT OR VEHICLE*. A SPARK NEAR BATTERY MAY CAUSE BATTERY EXPLOSION. TO REDUCE THE RISK OF A SPARK NEAR BATTERY:

1. Check polarity of battery posts. POSITIVE (POS, P, +) battery post is usually larger in diameter than NEGATIVE (NEG, N, -) post.
2. Connect POSITIVE (RED) output terminal to POSITIVE (POS, P, +) post of battery.
3. Connect NEGATIVE (BLACK) output terminal to NEGATIVE (NEG, N, -) post of battery.
4. Do not face battery when making final connection.
5. When disconnecting charger, disconnect AC power cord from electric outlet first.
6. When disconnecting output terminals from battery posts, always do so in reverse sequence of the connecting procedure while as far away from battery as practical.
7. A marine (boat) battery does not need to be removed and charged on shore. However, instructions must be followed for location of charger when permanently mounted or used on board.

Each output bank is independent and isolated from one another and the AC input. The Minn Kota charger can charge independent batteries or combinations of batteries hooked in series or parallel without disconnecting the batteries from any switches or wires / straps joining the batteries. See diagram on page 8.

## **7. OPERATING INSTRUCTIONS**

Make sure the charger is properly mounted and the DC output cords are connected properly to the batteries. Double check the polarities of the output cords and make sure the correct bank of the charger is connected to the correct battery.

### **INDICATOR LIGHTS:**

To begin charging, connect the charger to AC power. All lights will turn on momentarily. The following will be displayed on the charger:

A GREEN power light is lit to indicate AC power is applied. Each bank has YELLOW, GREEN, and RED lights to indicate charging status and error conditions.

Minn Kota's Multi-Stage Charging has three modes of operation that deliver a fast, precise charge profile by automatically controlling current and voltage without overcharging your batteries.

### **Stage 1: Bulk Mode**


During this stage, the charger delivers full current until the battery reaches ~75% charge. A YELLOW light is lit for each bank to indicate the battery is charging in the Bulk Mode.

### **Stage 2: Absorption Mode**

The charging current tapers down while the battery voltage is held at 14.4V at 77°F. A flashing YELLOW light is lit for each bank to indicate the battery is charging in the Absorption Mode.

### **Stage 3: Maintenance Mode**

When the battery reaches full charge, the charger voltage is dropped to 13.4V at 77°F. A flashing GREEN light is lit for each bank to indicate the battery is in Maintenance Mode and ready to use. After 24 hours, the charger automatically turns off and a GREEN light is lit for each bank to indicate the battery is in long term Maintenance Mode and ready to use. The charger will automatically turn on when the battery voltage drops below 12.6V.

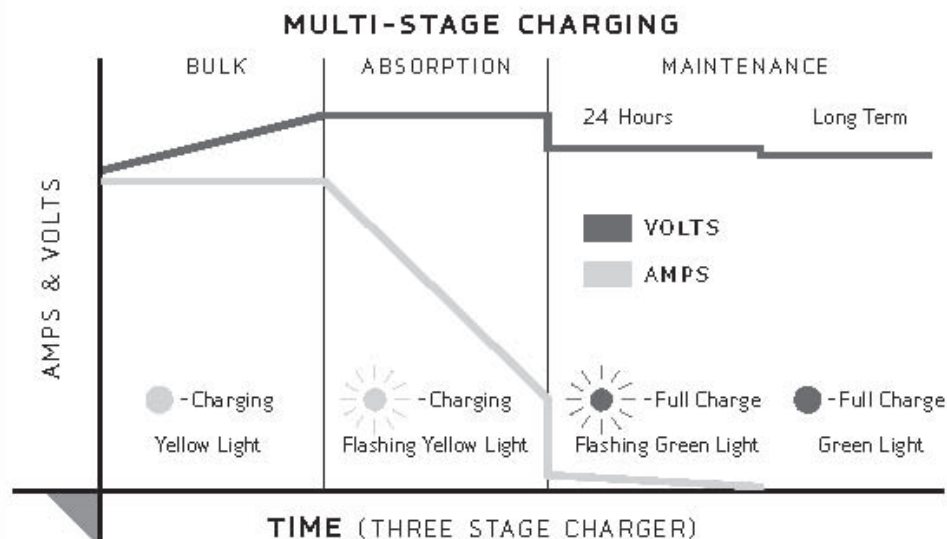



## Error Conditions:

1) A **RED** light for each bank is lit if any of the following apply:

- a) No battery is connected to an output cord. This may also indicate a blown fuse in the fuse holder.
- b) The battery is connected reverse polarity.
- c) A short circuit.
- d) The battery voltage is below 4 volts. The bank will not charge a battery in this condition. (see note below)
- e) The battery voltage is above 18 volts. The bank will not charge a battery in this condition.

2) A flashing **RED** light is lit for each bank if there is a damaged temperature sensor on the output cord. The bank will not operate if this occurs.

3) Flashing **RED** and **GREEN** lights are lit for each bank if any of the following apply:

- a) The battery voltage does not rise above 10.5V after 3 hours. The battery may be damaged and will not be charged.
- b) Charging in Bulk Mode exceeds 20 hours. The battery may be damaged and will not be charged

**NOTE** – A 12 volt battery with an open-circuit voltage below 4 volts has either been discharged to the point of internal damage, may be heavily sulfated, or may have internal shorted cells. Attempting to charge a battery in this state is dangerous. The battery should be replaced.

**CAUTION** – If a **RED** light is lit, disconnect the AC power from the charger immediately. Determine the reason based on the above information and take the necessary corrective action to remedy the situation. If you are unable to remedy the situation and need help, call the Minn Kota Service Department at 1-800-227-6433 and a technical support representative will be happy to assist you.

**CAUTION** – We recommend that you not recharge your battery, (or batteries), with the watercraft or motor lower unit in the water during electrical storms. Severe damage to the motor or charging system may occur if lightning strikes nearby or if storm related high voltage conditions exist.

**CAUTION** – Generators with a modified square wave output can damage this MINN KOTA charger. Generators with a sine wave output can be used to power this charger.

**WARNING** – TO REDUCE RISK OF ELECTRIC SHOCK, DO NOT PERFORM ANY SERVICING OTHER THAN THOSE CONTAINED IN THE OPERATING INSTRUCTIONS.

### INLINE FUSE:

Each output cord has inline fuses on the **RED** and **BLACK** leads located near the ring terminals. These fuses serve as protection from surges and short circuits caused by a damaged charger output cable. If a fuse blows, replace it with the exact type and rating of the original fuse. Improper battery connections will normally not cause a fuse to blow since this is handled by the chargers internal circuitry.

## **8. MAINTENANCE / CLEANING / STORAGE INSTRUCTIONS**

Check battery charger for dirt, oil, battery corrosion, etc. Use a water and baking soda solution for cleaning corrosion. Wipe clean using a dry cloth.

Check ring terminals for dirt, oil, and battery corrosion; then disconnect from battery posts and clean as necessary with water and baking soda solution and dry with a clean cloth.

When the charger is not in use, coil the power cord to prevent damage.

If power cord or plug becomes damaged, you may contact the Minn Kota Service Repair Department for service repair information. Otherwise, dispose of the battery charger in compliance with local law. Damaged cords and plugs can cause electric shock or electrocution.

When storing the battery charger, store in a clean dry area.

**NOTE** – This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**CAUTION** – Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

## 9. TROUBLESHOOTING

### PROBLEM:

Check Connection (Red) light comes on.

### SOLUTION:

- Check polarity of leads to battery.
- Check connections to battery and fuses in output cord.
- Check voltage at battery. The bank will not charge a battery below 4 volts or above 18 volts.
- If still not working, call the Minn Kota Service Department at 1-800-227-6433.

### PROBLEM:

Check Connection (Red) light is flashing.

### SOLUTION:

- The temperature sensor in the output cord is damaged. Check to make sure the output cord is not damaged. If the output cord was extended, check to make sure the procedure in Section 6 was followed.
- If still not working, call the Minn Kota Service Department at 1-800-227-6433.

### PROBLEM:

Indicator lights will not illuminate.

### SOLUTION:

- Check the AC power at the outlet.
- Make sure the GFCI (Ground Fault Circuit Interrupter) on the outlet has not tripped.
- Check the AC power at the end of the extension cord.
- If still not working, call the Minn Kota Service Department at 1-800-227-6433.

### PROBLEM:

The red and green lights are flashing.



### SOLUTION:

- Check to make sure there are not any loads on the battery
- Check the fluid in the battery and add fluid if necessary.
- If the voltage of the battery does not increase above 10.5 volts after 3 hours or does not increase to the absorption voltage of 14.4 volts in 20 hours, then the bank will shut down and will not charge. The battery should be tested.
- If still not working, call the Minn Kota Service Department at 1-800-227-6433.


### Specifications:

Model	Part No.	System Volts	Banks	Output per Bank (amps)	Total Output (amps)	Input Cable	Output Cable	Size L x W x H	Weight (lbs)	Input Current (120VAC, 60Hz)
MK110D	1821105	12	1	10	10	18AWG - 6'	16AWG - 6'	10-1/2" x 7-1/2" x 4"	10	2.5A
MK210D	1822105	12 / 24	2	5	10	18AWG - 6'	16AWG - 6'	11-1/2" x 7-1/2" x 4"	11	2.5A
MK220D	1822205	12 / 24	2	10	20	18AWG - 6'	16AWG - 6'	13-1/2" x 7-1/2" x 4"	15	4.4A
MK220DS	1822204	12 / 24	2	10	20	18AWG - 8.5'	16AWG - 6'	13-1/2" x 7-1/2" x 4"	15	4.4A
MK315D	1823155	12 / 24 / 36	3	5	15	18AWG - 6'	16AWG - 6'	12-1/2" x 7-1/2" x 4"	14	2.7A
MK330D	1823305	12 / 24 / 36	3	10	30	18AWG - 6'	16AWG - 6'	16-1/4" x 7-1/2" x 4"	20	5.2A
MK330DS	1823304	12 / 24 / 36	3	10	30	18AWG - 8.5'	16AWG - 6'	16-1/4" x 7-1/2" x 4"	20	5.2A




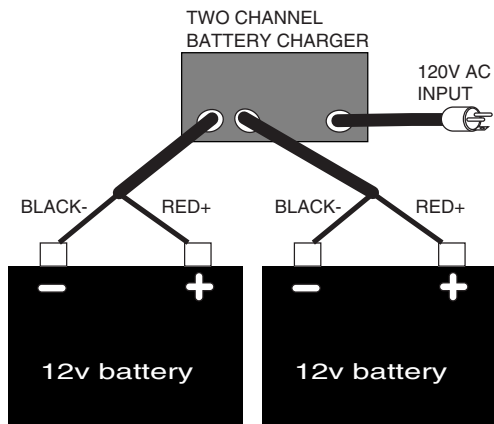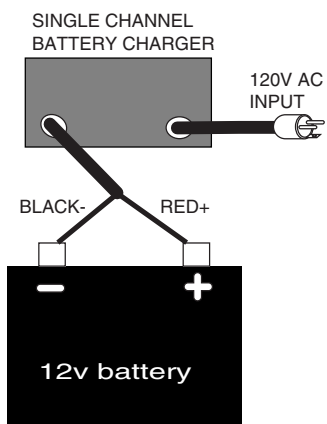

NOTE: If batteries are connected in series for 12/24 - 24V, the series connection wire should be left in place during charging.

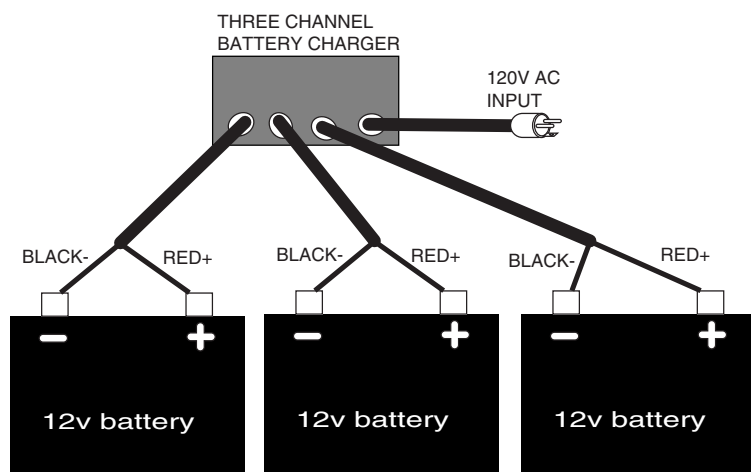

NOTE: If batteries are connected in series for 12/24 - 24 - 24/36 - 36V, the series connection wire should be left in place during charging.

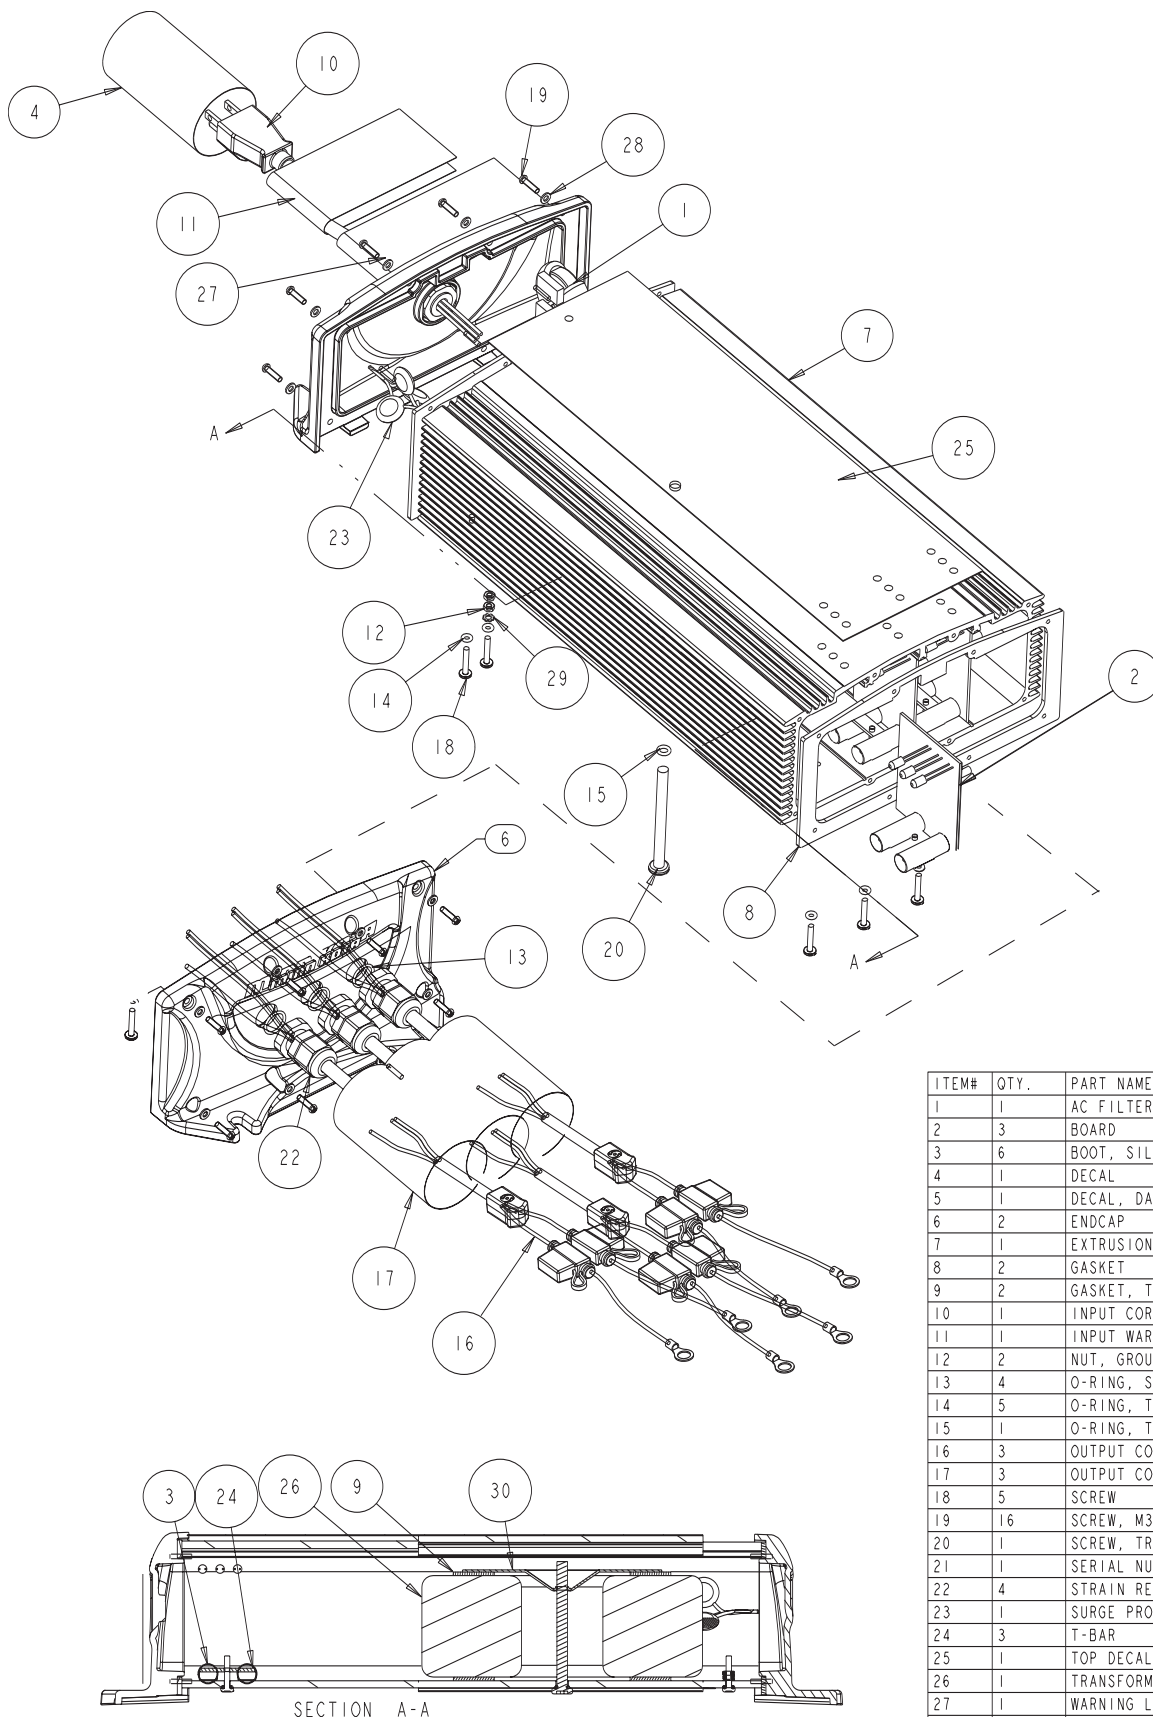

ITEM#	QTY.	PART NAME
1	1	AC FILTER
2	3	BOARD
3	6	BOOT, SILICONE
4	1	DECAL
5	1	DECAL, DATE CODE
6	2	ENDCAP
7	1	EXTRUSION
8	2	GASKET
9	2	GASKET, TRANSFORMER
10	1	INPUT CORD
11	1	INPUT WARNING LABEL
12	2	NUT, GROUND M3
13	4	O-RING, STRAIN RELIEF PG9
14	5	O-RING, T-BAR SCREW
15	1	O-RING, TRANSFORMER SCREW
16	3	OUTPUT CORD
17	3	OUTPUT CORD DECAL
18	5	SCREW
19	16	SCREW, M3
20	1	SCREW, TRANSFORMER M6
21	1	SERIAL NUMBER
22	4	STRAIN RELIEF, PG9
23	1	SURGE PROTECTOR
24	3	T-BAR
25	1	TOP DECAL
26	1	TRANSFORMER
27	1	WARNING LABEL
28	16	WASHER, 3MM
29	1	WASHER, LOCK M3
30	1	WASHER, TRANSFORMER

This page provides Minn Kota® WEEE compliance disassembly instructions. For more information about where you should dispose of your waste equipment for recycling and recovery and/or your European Union member state requirements, please contact your dealer or distributor from which your product was purchased.

**Tools required but not limited to:** Flat Head screw driver, Phillips screw driver, Socket set, Pliers, wire Cutters..

# MOHAWK



## BATTERY INFORMATION

MP-18-SERIES  
(24 VDC VERSION)  
ELECTRIC/HYDRAULIC  
PORTABLE LIFT




# Deka AGM Series (Absorbed Glass Mat) for longer and safer battery operation



Deka's AGM (Absorbed Glass Mat) Series uses a special absorbed electrolyte technology that is superior to conventional lead-acid batteries. This completely sealed valve-regulated battery line eliminates gas emissions and acid leakage for longer and safer battery operation.

## How AGM Works

Unlike conventional "flooded" lead-acid batteries, AGM sealed valve-regulated technology eliminates the need to add water because the oxygen and hydrogen gases react to maintain the necessary amounts of moisture. Highly porous microfiber separators wrapped around the positive plates completely absorb and trap the electrolyte, so there is no excess to spill or leak out of the battery. Oxygen formed from the positive plates during charging passes horizontally through the separator pores to the negative plates, where it reacts with hydrogen and changes back to water to replenish the electrolyte.

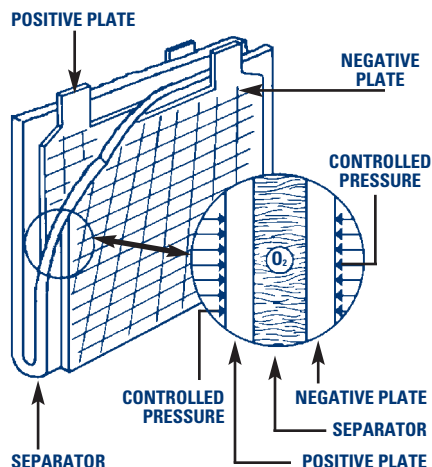

Oxygen diffuses through the horizontal separator pores to the negative plate as this is the only available path.



QUALITY SYSTEM  
CERTIFIED  
**ISO 9001**  
**ISO/TS 16949**  
ENVIRONMENTAL  
SYSTEM CERTIFIED  
**ISO 14001**

## AGM Features –

- Specially-engineered safety relief valve system effectively **controls critical internal gas pressure**, preventing capacity loss from excessive gas seepage. This one-way valve also prevents outside air from entering the battery—a common cause of failure in most sealed valve-regulated battery designs.
- Fine microfiber **glass separators are highly porous** to hold electrolyte more efficiently and have extremely low electrical resistance for higher capacity.
- Power path grids are **computer-cast and pasted** to uniform thickness, allowing for the exact degree of compression needed for optimum oxygen flow between the plates and separators. (Plates compressed too tightly will impede oxygen flow, while plates packed too loosely allow valuable oxygen to escape to the top of the battery. Both conditions seriously impair performance and shorten battery life.)
- Exclusive **individual plate formation** provides the highest quality and most consistent performance.†

## AGM Benefits –

- **Maintenance-free** construction eliminates the need to add water.
- **Completely sealed** valve-regulated design eliminates acid spills and terminal corrosion.
- **Safer operation** substantially minimizes chance of acid spray, fumes and explosion hazards when charged correctly.
- **Flexible design** can be installed in almost any position. (However, upside-down installation is not recommended.)
- **State-of-charge easily determined** by open circuit voltage.
- **Lower electrical resistance** provides higher discharge rates.
- **High freeze-resistance** offers longer battery life.
- **Resists vibration** damage for longer operating time.
- **Lightweight construction** for easy installation.
- **Requires less charging time** than conventional batteries.

"POWERED FOR PERFORMANCE"®

**EAST PENN manufacturing co., inc.**

Lyon Station, PA 19536-0147 • Phone: 610-682-6361 • Fax: 610-682-4781

Order Department Hotline: 610-682-4231





www.dekabatteries.com • e-mail: eastpenn@eastpenn-deka.com

DISTRIBUTED BY:

ABSORBED GLASS MAT SERIES

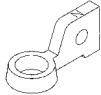

# ABSORBED GLASS MAT SERIES

GROUP NO.	PART NO.	FOOTNOTES	MINUTES DISCHARGED AT*						DISCHARGE AMPS PER 12-VOLT BATTERY TO 1.75 VPC @ 80°F (27°C)*						
			75 AMPS	50 AMPS	25 AMPS	15 AMPS	8 AMPS	5 AMPS	5 MINS.	10 MINS.	15 MINS.	20 MINS.	30 MINS.	60 MINS.	90 MINS.
STARTING OR DEEP-CYCLE – EV – TROLLING MOTOR – WHEELCHAIR															
U1	8AU1	2,38,39,Y	10	20	54	98	200	340	110	75	60	50	39	23	16
	8AU1H	2,17,38,39,Y	10	20	54	98	200	340	110	75	60	50	39	23	16
22NF	8A22NF	2,38,39,G	22	40	102	180	365	620	160	120	95	80	62	35.5	28
24	8A24	2,17,38,39,G	35	60	150	280	550	900	220	165	130	110	85	50.5	36
	8A24NH	2,38,39,G	35	60	150	280	550	900	220	165	130	110	85	50.5	36
27	8A27	2,17,38,39,G	43	75	185	330	640	1080	270	200	153	130	98	59	44
31	8A31DT	2,16,17,U	53	87.4	200	348	706	1265	305	226	174	147	114	68.2	49.0
4D	8A4D	2,17	106	180	413	745	1512	2507	508	408	318	266	200	115	85
8D	8A8D	2,17	138	230	517	953	1874	3040	600	475	386	325	256	151	106
GC2	8AGC2	2,G	94	171	409	718	1409	2304	—	—	—	—	—	—	—
GROUP NO.	PART NO.	VOLTS	AMPERE HOUR CAPACITY*					APPROX. WEIGHT LBS. (KGS.)	MAXIMUM OVERALL DIMENSIONS INCHES (MM)			STANDARD/OPTIONAL TERMINALS			
			100 HR.	20 HR.	8 HR.	5 HR.	1 HR.		LENGTH	WIDTH	HEIGHT				
STARTING OR DEEP-CYCLE – EV – TROLLING MOTOR – WHEELCHAIR															
U1	8AU1	12	37.0	32.0	29.5	27.5	23.0	24.0 (10.9)	7 3/4 (197)	5 1/2 (130)	7 1/4 (184)				
	8AU1H	12	37.0	32.0	29.5	27.5	23.0	24.0 (10.9)	8 5/8 (211)	5 1/2 (130)	7 1/4 (184)				
22NF	8A22NF	12	63.0	55.0	50.0	46.5	35.5	38.5 (17.5)	9 3/4 (238)	5 1/2 (140)	9 1/4 (235)				
24	8A24	12	91.0	79.0	72.0	69.2	50.5	53.0 (24.0)	10 3/4 (276)	6 1/4 (171)	9 3/4 (251)				
	8A24NH	12	91.0	79.0	72.0	69.2	50.5	53.0 (24.0)	10 3/4 (260)	6 1/4 (171)	9 3/4 (251)				
27	8A27	12	100.0	92.0	84.0	78.0	59.0	63.0 (28.6)	12 3/4 (324)	6 1/4 (171)	9 3/4 (251)				
31	8A31DT	12	110.0	105.0	90.0	86.0	68.2	69.0 (31.3)	12 3/4 (329)	6 1/4 (171)	9 3/4 (238)				
4D	8A4D	12	210.0	198.2	176.0	164.0	115.0	129.0 (58.5)	20 3/4 (527)	8 1/2 (216)	10 (254)				
8D	8A8D	12	250.0	245.0	212.0	197.0	151.1	158.0 (71.7)	20 3/4 (527)	11 (279)	10 (254)				
GC2	8AGC2	6	220.0	187.0	173.7	163.0	102.6	69.5 (32.0)	10 3/4 (260)	7 1/4 (181)	10 3/4 (276)				

## FOOTNOTES:

- 2 - Black cover / Gray case
- 16 - Dual terminal universal design
- 17 - Includes handle
- 38 - "Non-Spillable" defined by DOT (Department of Transportation) definition
- 39 - "Non-Spillable" defined by ICAO (International Commercial Airline Organization) and IATA (International Airline Transportation Association) definitions
- B - Flag terminal w/ 3/8" diameter hole
- G - Offset post w/ horizontal hole, stainless steel 5/16" bolt & hex nut
- U - Molded-in offset SAE post and vertical 5/16" NEG., 3/8" POS. stainless steel studs & locking hex nuts
- Y - Small L terminals with round holes


\* Nominal

All batteries are manufactured in polypropylene cases.

† Excludes Group U1

**Warranty void if opened or improperly charged. Caution: Constant under- or overcharging will damage any battery and shorten its life.** Use a good constant potential, voltage-regulated charger. For 12-volt batteries, charge to at least 14.4 volts but no more than 14.6 volts at 68°F (20°C). For 6-volt batteries, charge to at least 7.2 volts but not more than 7.3 volts at 68°F (20°C). Do not charge in a sealed container. The AGM Series has more capacity at high discharge rates than conventional deep cycle batteries.

## Constant Voltage vs. Temperature

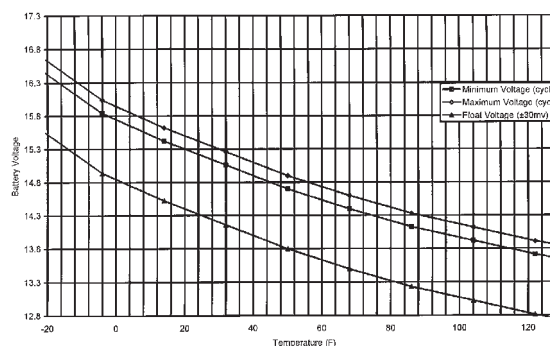

Shown is the constant charging voltage in relation to the ambient temperature for cyclic and float use.

## Potential Applications of AGM

### Starting, Lighting and Ignition

Cars • Trucks • Marine • Snowmobiles  
Lawn & Garden Tractors

### Traction

Wheelchairs • Floor Sweepers • Guided Vehicles  
Small Fork Lifts • Trolling Motors


### Industrial

Cable TV • Emergency Lighting • Exit Lighting  
Alarm and Security Systems • PBX Systems • Utility Control  
Switching Equipment • Medical Equipment  
Recreational Vehicles • Electronic Cash Registers

### Portable Devices

Construction Equipment • Portable Pumps and Generators  
Portable Test and Measuring Equipment  
Portable Tools • Mobile TV, VCR, VTR

## Capacity vs. Operating Temperature

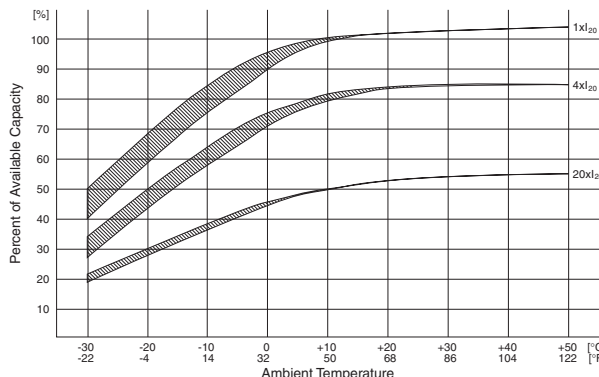

Shown are the changes in capacity for a wider ambient temperature range, giving the available capacity as a percentage of the rated capacity at different ambient temperatures, for three different load examples, with uninterrupted discharge to the appropriate discharge cut-off voltage. The values for the upper edge of the curve were obtained from charging at an ambient temperature of +20°C (68°F) with a voltage limit of 2.3 V/cell. For the lower edge, charging was carried out at the specified ambient temperature. The curves show the behavior of the battery after a number of cycles.



# Valve-Regulated Lead-Acid (VRLA): Gelled Electrolyte (gel) and Absorbed Glass Mat (AGM) Batteries

*EAST PENN Expertise and American Workmanship*

*Quality System Certified to ISO 9001*

## Introduction

Valve-regulated lead-acid (VRLA) technology encompasses both gelled electrolyte and absorbed glass mat (AGM) batteries. Both types are valve-regulated and have significant advantages over flooded lead-acid products.

More than a decade ago, East Penn began building valve-regulated batteries using tried and true technology backed by more than 50 years experience. East Penn's unique computer-aided manufacturing expertise and vertical integration have created a product that is recognized as the **highest quality, longest lived VRLA battery available from any source.**

East Penn's gel and AGM batteries are manufactured to tough quality standards. East Penn manufactures high power gel and AGM batteries with excellent performance and life.

## Applications

VRLA batteries can be substituted in virtually any flooded lead-acid battery application (in conjunction with well-regulated charging), as well as applications where traditional flooded batteries cannot be used. Because of their unique features and benefits, VRLA batteries are particularly well suited for:

### Deep Cycle, Deep Discharge Applications

- Marine Trolling
- Electronics
- Sailboats
- Electric Vehicles
- Wheelchairs
- Golf Cars
- Portable Power
- Floor Scrubbers
- Personnel Carriers
- Marine & RV House Power
- Commercial Deep Cycle Applications

### Standby and Emergency Backup Applications

- UPS (Uninterrupted Power Systems)
- Cable TV
- Emergency Lighting
- Computer Backup
- Solar Power
- Telephone Switching
- Village Power

### Unusual and Demanding Applications

- Race Cars
- Air-transported Equipment
- Off-road Vehicles
- Wet Environments
- Marine & RV Starting
- Diesel & I.C.E. Starting

## What is a gel battery?

A gel battery is a lead-acid electric storage battery that:

- is sealed using special pressure valves and should never be opened.
- is completely maintenance-free.\*
- uses thixotropic gelled electrolyte.
- uses a recombination reaction to prevent the escape of hydrogen and oxygen gases normally lost in a flooded lead-acid battery (particularly in deep cycle applications).

- is non-spillable, and therefore can be operated in virtually any position. However, upside-down installation is not recommended.
- \* Connections must be retorqued and the batteries should be cleaned periodically.*

## What is an AGM battery?

An AGM battery is a lead-acid electric storage battery that:

- is sealed using special pressure valves and should never be opened.
- is completely maintenance-free.\*
- has all of its electrolyte absorbed in separators consisting of a sponge-like mass of matted glass fibers.
- uses a recombination reaction to prevent the escape of hydrogen and oxygen gases normally lost in a flooded lead-acid battery (particularly in deep cycle applications).
- is non-spillable, and therefore can be operated in virtually any position. However, upside-down installation is not recommended.

*\* Connections must be retorqued and the batteries should be cleaned periodically.*

## How does a VRLA battery work?

A VRLA battery is a "recombinant" battery. This means that the oxygen normally produced on the positive plates of all lead-acid batteries is absorbed by the negative plate. This suppresses the production of hydrogen at the negative plate. Water (H<sub>2</sub>O) is produced instead, retaining the moisture within the battery.

**It never needs watering, and should never be opened** as this would "poison" the battery with additional oxygen from the air. Opening the battery will void the warranty.

## What are the differences between gel batteries and absorbed glass mat (AGM) batteries?

Both are recombinant batteries. Both are sealed valve-regulated (SVR) – also called valve-regulated lead-acid (VRLA). AGM batteries and gel batteries are both considered "acid-starved". In a gel battery, the electrolyte does not flow like a normal liquid. The electrolyte has the consistency and appearance of petroleum jelly. Like gelled electrolyte batteries, absorbed electrolyte batteries are also considered non-spillable – all of the liquid electrolyte is trapped in the sponge-like matted glass fiber separator material.

The "acid-starved" condition of gel and AGM batteries protects the plates during heavy deep-discharges. The gel battery is more starved, giving more protection to the plate; therefore, it is better suited for super-deep discharge applications.

Due to the physical properties of the gelled electrolyte, gel battery power declines faster than an AGM battery's as the temperature drops below 32°F. AGM batteries excel for high current, high power applications and in extremely cold environments.

---

## ***What is the difference between VRLA batteries and traditional wet batteries?***

Wet batteries do not have special pressurized sealing vents, as they do not work on the recombination principle. They contain liquid electrolyte that can spill and cause corrosion if tipped or punctured. Therefore, they are not air transportable without special containers. They cannot be shipped via UPS or Parcel Post or used near sensitive electronic equipment. They can only be installed "upright."

Wet batteries lose capacity and become permanently damaged if:

- left in a discharged condition for any length of time (due to sulfation). This is especially true of antimony and hybrid types.
- continually over-discharged, due to active material shedding. This is especially true of automotive starting types.

Our gel cells have triple the deep cycle life of wet cell antimony alloy deep cycle batteries, due to our unique design. The shelf life of a VRLA battery is seven times higher than the shelf life of a deep cycle antimony battery.

## ***How do VRLA batteries recharge? Are there any special precautions?***

While our VRLA batteries accept a charge extremely well due to their low internal resistance, **any** battery will be damaged by continual under- or overcharging. Capacity is reduced and life is shortened.

Overcharging is especially harmful to any VRLA battery because of the sealed design. Overcharging dries out the electrolyte by driving the oxygen and hydrogen out of the battery through the pressure relief valves. Performance and life are reduced.

If a battery is continually undercharged, a power-robbing layer of sulfate will build up on the positive plate, which acts as a barrier to recharging. Premature plate shedding can also occur. Performance is reduced and life is shortened.

Therefore, **it is critical that a charger be used that limits voltage.** The charger must be temperature-compensated to prevent under- or overcharging due to ambient temperature changes. (See **Charging Voltage vs. Ambient Temperature** chart on page 11.)

### ***Important Charging Instructions***

**The warranty is void if improperly charged.** Use a good constant potential, temperature-compensated, voltage-regulated charger. **Constant current chargers should never be used on VRLA batteries.**

## ***Can VRLA batteries be installed in sealed battery boxes?***

**NO! Never install any type of battery in a completely sealed container.** Although most of the normal gasses (oxygen and hydrogen) produced in a VRLA battery will be recombined as described above, and not escape, **oxygen and hydrogen will escape from the battery in an overcharge condition** (as is typical of any type battery).

For safety's sake, these potentially explosive gasses **must** be allowed to vent to the atmosphere and **must never be trapped in a sealed battery box or tightly enclosed space!**

## ***Can our VRLA batteries be used as starting batteries as well?***

Our VRLA batteries will work in SLI (Starting, Lighting and Ignition) applications as long as the charging voltage is regulated to the appropriate values from the tables on page 11. Many vehicle regulators are set too high for gel batteries; therefore, the charging system may require adjustment to properly recharge a gel battery for best performance and life.

AGM batteries excel in low temperature, high current applications such as cold weather starting.

## ***What do the ratings and specifications signify for this line?***

All ratings are **after 15 cycles** and conform to BCI specifications.

### ***CCA = Cold Cranking Amperes at 0°F (-17.8°C)***

Cold cranking amperes equal the number of amperes a new, fully charged battery will deliver at 0°F (-17.8°C) for thirty seconds of discharge and maintain at least 1.2 volts per cell (7.2 volts for a 12-volt battery).

### ***CA = Cranking Amperes at 32°F (0°C)***

Same as above, tested at 32°F (0°C).

### ***RC = Reserve Capacity at 80°F (27°C)***

The reserve capacity is the time in minutes that a new, fully charged battery can be continuously discharged at 25 amperes and maintain at least 1.75 volts per cell (10.5 volts for a 12-volt battery).

### ***Minutes discharged at 50, 25, 15, 8 and 5 Amperes***

Minutes discharged is the time in minutes that a new, fully charged battery will deliver at various currents and maintain at least 1.75 volts per cell. These are nominal or average ratings.

### ***Ampere Hour Capacity at 20, 6, 3 and 1 Hour Rates***

Ampere hour capacity is a unit of measure that is calculated by multiplying the current in amperes by the time in hours of discharge to 1.75 volts per cell. These are nominal or average ratings.

#### ***EXAMPLE***

10 amperes for 20 hours (10 x 20) = 200 Ah @ the 20-hour rate  
8 amperes for 3 hours (8 x 3) = 24 Ah @ the 3-hour rate  
30 amperes for 1 hour (30 x 1) = 30 Ah @ the 1-hour rate

Therefore, if you have an application that requires a draw of 17 amperes for 3 hours, you would need a 51 Ah battery (@ the 3 hour rate)...(17 x 3 = 51). However, this is 100% of the capacity of this 51 Ah battery.


**Most system designs will specify a battery that will deliver a minimum of twice the capacity required.** This means the battery will discharge to 50% of its capacity. Using a 50% depth of discharge (versus 80% or 100%) will dramatically extend the life of any battery. Therefore, when helping to specify a battery for a system, choose a battery with at least **twice** the capacity required for best performance. If 50 Ah is required, specify at least a 100 Ah battery.

## CHART A

### Independent Laboratory Testing BCI 2-Hour Life

#### Group Size "27" Batteries East Penn Gel and AGM vs. Competitor


This chart compares the cycles run until the battery capacity dropped to 50% of the 15th cycle's capacity (on discharges at the 2-hour rate to a 10.5-volt cutoff).

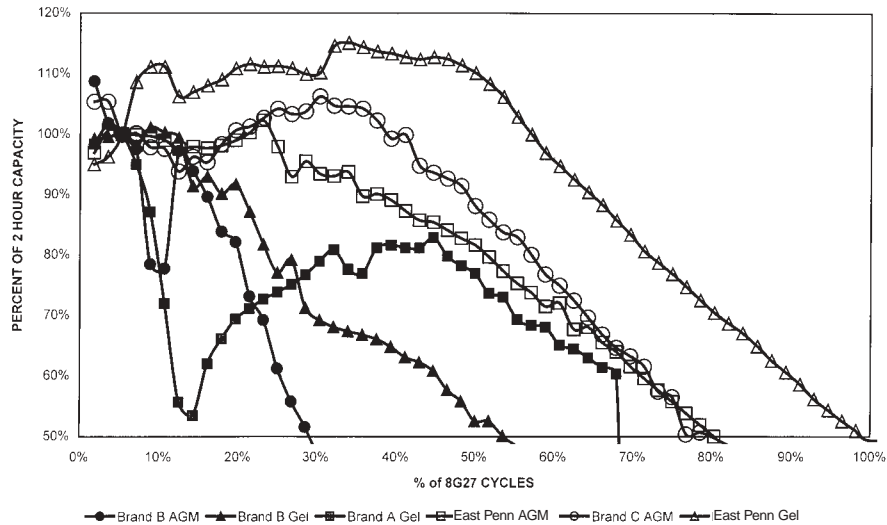

## CHART B


### Charging Current vs. Charging Time

Shown is the current needed to charge a battery from 0% to 90% state of charge in a given time. Or time required to charge a battery from 0% to 90% state of charge at a given current. For example, to charge an 8G8D (curve H) to 90% in 3.5 hours, 100 amperes are required; at 35 amperes, it would take 10 hours

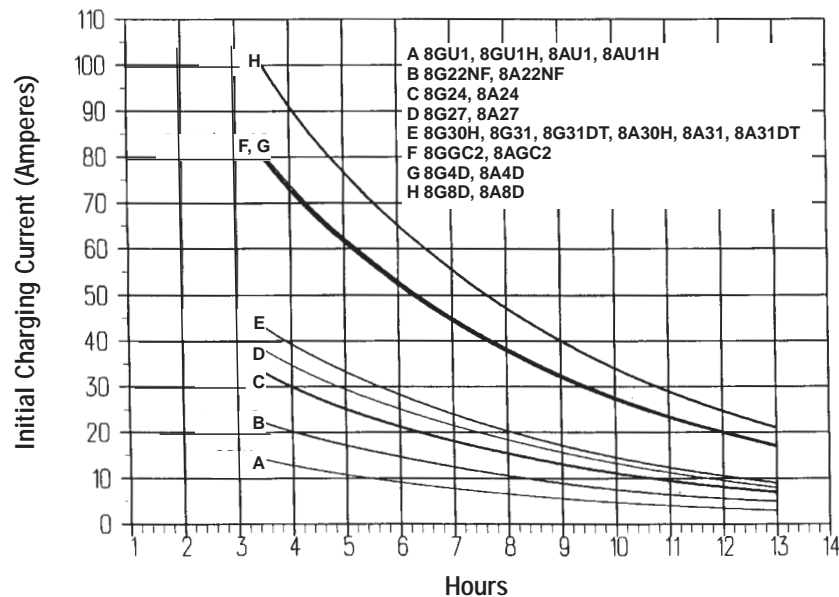




**CHART C**  
**VRLA Battery Voltage During Constant Current Discharge**  
*Voltage vs. Percent Discharged*

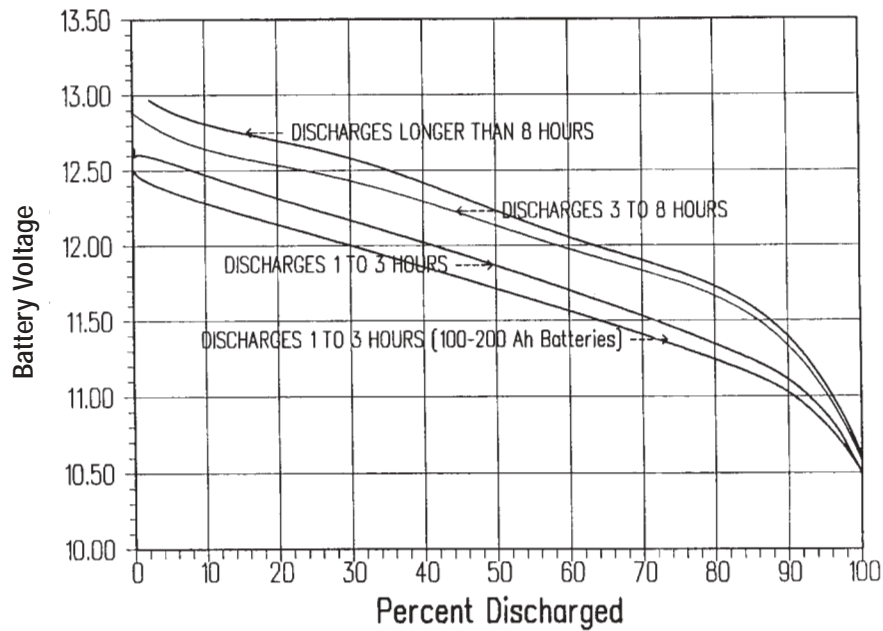

**CHART D**  
**Gel Percent Cycle Life vs. Recharge Voltage**

This chart shows the effect on life of overcharging a gel battery.  
 (e.g.: Consistently charging at 0.7 volts above the recommended level reduces life by almost 60%!)

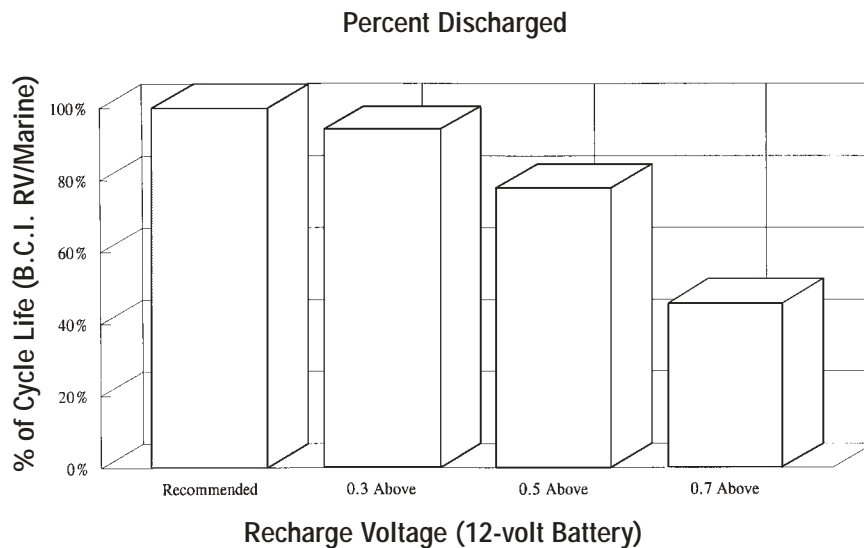

---

## ***What are the features and benefits that make East Penn's VRLA batteries unique?***

### ***East Penn Expertise***

East Penn builds VRLA batteries to the highest standards. Our manufacturing process features improved controls using state-of-the-art computers and the latest manufacturing technology and equipment. Therefore, the VRLA batteries produced by East Penn consistently meet the highest quality performance and life standards.

### ***Ultrapremium Sealing Valve***

A critical feature of any VRLA battery, gelled or absorbed, is the quality of the sealing valve. Not only must the valve keep the cell pressurized and safely release excessive pressure and gas due to overcharging, but it must also keep the cell from being contaminated by the atmosphere. Oxygen contamination will discharge a VRLA battery and eventually ruin the battery.

Our valves are UL recognized and 100% tested after manufacturing. The benefit is **reliable performance and long life**.

### ***Spillproof and Leakproof***

A major advantage of VRLA batteries is their spillproof and leakproof feature. However, all VRLA batteries are not created equal in their degree of non-spillability. Some manufacturer's AGM batteries are unevenly filled. Over-saturation of the separators leaves liquid electrolyte that could spill. Under-saturation could lead to premature failure. Some gels do not set properly; they remain liquid and can leak or spill.

Our exclusive gel electrolyte is formulated, mixed and controlled to assure proper "set" in every battery. East Penn's computer-controlled gel mixing and filling equipment ensures homogenization of the mix. This assures a gel battery that will not spill or leak. This feature allows our gel cell to be operated in virtually any position. However, we do not recommend an upside-down orientation.

The AGM filling process assures that each cell is saturated with the maximum amount of electrolyte that can be held by the separators, without leaving excess electrolyte that could spill or leak.

### ***Exclusive Gel Formula***

The gelled electrolyte is another critical element in this type of battery. Our gelled electrolyte contains sulfuric acid, fumed silica, pure demineralized, deionized water, and a phosphoric acid additive. The phosphoric acid is a key reason that our batteries deliver **dramatically longer cycle life** than leading gel competitors and 3 times longer cycle life than traditional wet cells.

### ***Exclusive AGM Electrolyte***

Our AGM electrolyte contains high purity sulfuric acid and absolutely pure totally demineralized, deionized water to increase battery performance. Since the designs are "acid-starved" to protect the plates from deep discharge, the acid concentration can drop to nearly zero during an extremely deep discharge. Substances that will not dissolve in acid may become soluble when the concentration drops this low. Upon recharge, these dissolved substances crystallize out of the electrolyte, potentially destroying the battery. Our electrolyte prevents these events.

### ***Exclusive Computerized Gel Mixing***

Proper gel mixing is critical to life and performance. Consistency in mixing means consistent reliability. We have designed and built the newest, state-of-the-art gel battery manufacturing facility in the world. An example is our proprietary computerized gel mixing operation.

Our exclusive formula is mixed using computer control in every stage of the process. **Computer control delivers superior consistency for gel battery performance that is unequalled.**

Our temperature-controlled process and specially designed equipment assure a homogenous gel. It is important to note that our equipment was designed by our engineers specifically for gel mixing... even down to the contour of the tank bottoms and feed pipe locations. **No other battery manufacturer has comparable equipment.**

### ***Multi-Staged Filling/Vacuuming Operation***

Most other manufacturers fill their gel cells in a one step process, vibrating the battery with hopes of releasing most of the air pockets. This system is less than perfect and leaves voids or air pockets at the critical gel-to-plate interface. These voids are non-reactive and reduce overall battery performance.

Our process fills and vacuums each cell several times. This multi-step process assures complete evacuation of air and **complete gel-to-plate interface**. Our computerized process also weighs every battery before and after filling as a check for proper gel levels. The benefit is **more power-per-pound of battery**.

Our AGM topping process assures that the maximum retainable electrolyte quantity is held within the battery separators, without leaving any unabsorbed liquid to spill or leak.

### ***Tank Formed Plates***

East Penn is the **only** battery manufacturer that uses tank formation to activate the battery plates. This process **guarantees a fully formed and voltage matched plate**. The extra handling of the plates provides an additional inspection step in the process to verify plate quality.

### ***Ultrapremium, Gel Glass Mat, Double Insulating Separators***

Another critical component is the separator, which isolates the positive from the negative plate. The separator must allow maximum charge flow between the plates for maximum performance. Separator failure is a leading cause of warranty claims and customer dissatisfaction.

East Penn uses an **ultrapremium grade separator** in our gel batteries. We believe that this expense (which is 5 to 6 times higher than other types) is worth the benefits of extended life and performance:

- The fiberglass mats embed themselves into the surface of the plates, acting like reinforcing rods in concrete. This extra reinforcement locks the active material onto the plate for longer life and extended performance.
- The ultra-clean separators have no oil contamination or other impurities. Therefore, **resistance is low and battery performance is high**.
- Excellent porosity allows maximum charge flow, which means **more power-per-pound**.
- Superior resistance to oxidation dramatically reduces separator failure, which **extends life**.
- Our separators are **especially suited for gel batteries**, while others use separators designed for flooded automotive batteries.

---

### ***Ultrapremium AGM glass mat separators***

Glass mat separator properties can vary considerably. East Penn uses glass mat engineered to have an ideal balance of properties—i.e. absorbency, compressibility, puncture resistance and electrical resistance. This attention to detail results in high performance and long life.

### ***Exclusive Thru-Partition Weld Seals***

One of the causes of self-discharge in batteries is the minute electrical currents that flow between each cell through the partition at the weld area. These currents accelerate the discharge of batteries not in use.

We block these currents by using an **exclusive weld seal** or gasket. This feature **dramatically reduces self-discharge** to less than 3% per month: the lowest self-discharge rate of any battery manufacturer and seven times lower than many conventional batteries!

### ***Exclusive Patented Calcium/Copper Lead Alloy Grids***

This exclusive alloy provides **longer shelf life, more power-per-pound and superior corrosion resistance**. By using special grain refiners, we can **dramatically improve performance and life**.

### ***Heavy-Duty Motive Power Style Grid Design***

While other manufacturers cut costs by using automotive style grids, we use a high-performance deep cycle grid. This heavy-duty grid design is similar to the grid in a motive power battery.

The hefty “power rods” designed into our grids not only lock the active material onto the grid, but also act as “bus bars” to collect and direct the energy to the terminals. The benefit is **more power-per-pound** of battery for your equipment and **longer battery life**.

### ***Multiple Plate Lug Milling***

Shiny, well milled plate lugs are critical to our superior cast-on-strap quality. Each of our plate lugs is automatically milled **to assure the highest quality** strap with no loose or dropped plates. Our lugs are then fluxed and tinned automatically for an **additional assurance of quality**.

### ***Heavier Plate Straps***

We use an **exclusive lead/tin alloy** in a unique multi-stage cast-on-strap operation. The result is heavier straps with **outstanding lug-to-strap knit**. This eliminates dropped and loose plates, thereby **improving performance and life**.

### ***Polyester Element Wrap***

Another cause of deep-cycle battery failure is “mossing.” This phenomenon occurs late in a battery’s life, as the positive active material actually grows around the edge of the separator and eventually “shorts” against the negative plate. This ends the battery’s service life.

Our AGM separators wrap around the bottom of the plate and are wider than the plates. This makes mossing failures unlikely. To prevent life-shortening mossing in our gel batteries, we use a **special polyester fiber sheet** that is wrapped around the edge of each element, similar to the wrap in an industrial battery. The result is **longer service life**.

### ***Exclusive Forged Posts and Bushings***

“Black” posts and oxygen-contaminated batteries are often due to porous lead terminal posts. A battery can lose its critical pressure through tiny pores and fissures in the battery terminals. Pressure

loss is harmful to the battery and is evident by black posts, which are caused by sulfuric acid fumes escaping from the battery through and around the lead posts and bushings. These fumes can cause corrosion and can damage sensitive electronic equipment.

These pores and fissures are caused by the industry’s method of casting posts and bushings. This method produces tiny air pockets and paths which allow corrosive gas to escape, causing life shortening depressurization, cell dry-out and corrosion damage.

To eliminate this problem, **we use forged terminal posts and bushings**, which are completely solid with absolutely **no porosity**. The benefit is **longer life**, better performance and **no leakage of corrosive gas**...especially important when installed in or near sensitive electronic equipment.

### ***Acid Stratification Prevention***

Acid stratification can occur in conventional wet cells. During charge, acid is released at the plate surfaces. During discharge, acid is consumed at the plate surfaces. Since the concentration is not uniform, diffusion (spontaneous mixing by random molecular motions) begins. If this mixing occurred rapidly, stratification would not occur, but it is relatively slow, allowing lighter parts of electrolyte to “float” toward the surface and heavier parts to “sink” toward the bottom.

The top portion of the plates do not perform as well in contact with lower concentration electrolyte. The bottom portion of the plates do not perform as well with the higher concentration, and will corrode prematurely. High voltage “equalization” charging is sometimes used in wet batteries to make gas bubbles that re-mix the electrolyte.

Because the immobilized gel will not “float” or “sink” within itself when a non-uniform concentration exists, it cannot stratify. Therefore, **no high-voltage equalizing charge is necessary**. Simply recharge at the standard 13.8 to 14.1 voltage setting. This means **longer life and consistent performance** in stationary and standby applications.

Electrolyte in an AGM battery is strongly held by the capillary forces between the glass mat fibers, but not completely immobilized. Stratification is possible in extremely tall cells, but cannot occur in batteries of the size covered in this document.

### ***Convenient Carrying Handles***

Carrying handles are included on the (gel) 8GU1H, 8G24, 8G27, 8G30H, 8G31DT, 8G31, 8G4D and 8G8D models. Handles are also available on (AGM) 8AU1H, 8A24, 8A27, 8A31DT, 8A4D and 8A8D. **This feature makes carrying, installation and removal easier, more convenient and less time consuming.**

### ***Dozens of Terminal Options Available***

Our batteries are delivered with the most popular type of terminal; however, on a special order basis **many terminal options are available**. This gives you total flexibility to specify the **proper terminal for your application**... without making compromises.

---

### ***Proprietary Case, Cover, and Pressure Vent***

We design and mold our own rugged polypropylene cases, vents and covers in our on-site, state-of-the-art plastics molding facility. This provides **ultimate control** of our high performance designs, quality and delivery to our manufacturing plant, **assuring you the highest quality** battery and most reliable service.

### ***Environment and Worker Protection***

It's nice to know that every possible safeguard was designed into our process to **protect our co-workers and the environment**... special safeguards that are exclusive to East Penn. One benefit is assurance of a consistent source for batteries without fear of governmental interference or delays.

### ***Over 250 Quality Assurance Checks***

Hundreds of quality checks are performed to assure total confidence in the performance and life of our batteries.

For example:

- **100% Cycling.** After initial charging, **every battery is discharged and then recharged** at the factory. This allows us to check the performance of the battery and give it a second charge that **equalizes the cells for improved performance and longer life.**  
  
It's interesting to note that, as a cost-saving measure, we use the current generated during the initial discharge to recharge other batteries in this computer-controlled process.
- **Extended Shelf Stand Test.** Before shipment, every battery is required to stand for a designated period of time. Beginning and ending voltages are compared. This **extra quality assurance step** verifies that the critical pressure control valves are functioning properly.
- **Filling Weight Control.** During this computerized process, batteries are weighed before and after filling. This **assures that the exact amount of electrolyte** is in each battery.
- **Multi-Staged Filling and Vacuuming Process.** Every battery is filled and vacuumed several times during this computerized process. Multi-staged vacuuming **assures complete electrolyte-to-plate interface**, with no power-robbing air pockets.
- **Computerized Polarity Check.** Every battery is checked by computer for proper polarity.
- **High Rate Discharge Test.** Every battery is discharged at approximately twice the rated capacity. A sensitive computer monitors the voltage drop during this discharge to assure that every battery performs as designed.
- **Formed Element Inspection.** Elements are assembled and **charged outside the battery container** in a computerized forming and drying process. This allows visual inspection of every grid, plate, separator, and formed element before being sealed inside the battery, assuring perfect cell elements with longest life and highest performance.
- **Tank Formed Plates.** Voltage matched plates are critical in standby applications. Forming each plate outside the battery assures the **highest quality**, best matched plates in the industry, and also allows a visual check before and during assembly.

### ***State-of-the-Art Technology***

Within our newly constructed multi-million dollar VRLA production facility, we have incorporated **state-of-the-art manufacturing processes** that are unmatched by any other battery manufacturer. This major addition allows us to build the **most modern and reliable VRLA batteries in the industry.**

*The designs of East Penn's VRLA batteries are always improving. The preceding sections accurately describe East Penn's VRLA products as of the date of publication. East Penn reserves the right to change their processes to improve quality, value or utilize advances in manufacturing technology. Ratings and capacities may change without notice.*

***How do East Penn's VRLA battery features compare with other types of batteries?***

FEATURE		EPM GEL	OTHER GEL	EPM AGM	OTHER AGM	ALL WET CELLS
1.	EPM Expertise	YES	NO	YES	NO	EPM ONLY
2.	Spillproof and Leakproof	YES	YES	YES	YES	NO
3.	Sealed Valve-Regulated	YES	YES	YES	YES	NO
4.	Ultra-Premium Sealing Valve	YES	NO	YES	NO	NO
5.	Exclusive Gel Formula	YES	NO	NO	NO	NO
6.	Deep Discharge Protection	YES	YES	YES	YES	NO
7.	Exclusive Computerized Gel Mixing	YES	NO	NO	NO	NO
8.	Tank Formed Plates	YES	NO	YES	NO	NO
9.	Multi-Staged Gel Filling/Vacuuming	YES	NO	NO	NO	NO
10.	Ultra-Premium Glass-Mat Dual Insulating Separators	YES	NO	NO	NO	NO
11.	Exclusive Thru-Partition Weld Seals	YES	NO	YES	NO	NO
12.	Exclusive Patented Calcium/Copper Lead Alloy Grids	YES	NO	YES	NO	NO
13.	Heavy-Duty Motive Power Style Grids	YES	NO	YES	NO	NO
14.	Grid Lug Milling, Brushing and Fluxing	YES	?	YES	NO	EPM ONLY
15.	Heavy-Duty Special Alloy Plate Straps	YES	NO	YES	NO	NO
16.	Special Polyester "Moss Guard" Element Wrap	YES	NO	NO	NO	NO
17.	Forged Posts and Bushings	YES	NO	YES	NO	EPM ONLY
18.	Acid Stratification Prevention	YES	YES	YES	YES	NO
19.	Carrying Handles	YES	?	YES	LIMITED	LIMITED
20.	Dozens of Terminal Options	YES	?	YES	?	EPM ONLY
21.	Highest Cycle Life	YES	NO	YES	NO	NO
22.	Highest Performance	YES	NO	YES	NO	N.A.
23.	Shelf Stand Test	YES	?	YES	NO	NO
24.	250+ Quality Assurance Checks w/ ISO 9001 Certification	YES	?	YES	NO	EPM ONLY
25.	State-of-the-Art Technology & Facility	YES	NO	YES	NO	EPM ONLY

# Answers to the Most Frequently Asked Questions

*NOTE: Before reviewing this section, be sure you understand the difference between gel, AGM, and flooded batteries.*

## ***How do we justify the premium price of VRLA batteries to those unfamiliar with this type of battery?***

Simply review the advantages, features and benefits, performance, and **impressive life cycle results**. Based upon this and the **lowest cost-per-month or duty cycle** you and/or your customer should have no trouble choosing VRLA batteries.

However, please remember that these batteries are not for everyone or every application. Always be aware of the charging considerations. (See pages 11 & 12.)

## ***What are the advantages and disadvantages of the different types of battery designs?***

### ***Gelled Electrolyte Advantages:***

- Totally maintenance-free
- Air transportable
- Spillproof/leakproof
- No corrosion
- Superior deep cycle life
- Installs upright or on side (side installation may lose about 10% capacity)
- Very low to no gassing (unless overcharged)
- Compatible with sensitive electronic equipment
- Superior shelf life
- Superior rechargeability (from 0% to 90% in 3½ hours)
- No recharge current limitation @ 13.8 volts
- Rugged and vibration-resistant
- Very safe at sea with no chlorine gas in bilge (due to sulfuric acid and salt water mixing)
- Versatile: Starting, Deep Cycle, Stationary
- Operates in wet environments...even under 30 feet of water
- Will not freeze to -20°F/-30°C (if fully charged)
- Lowest cost-per-month (cost ÷ months of life)
- Lowest cost-per-cycle (cost ÷ life cycles)

### ***Gelled Electrolyte Disadvantages:***

- Higher initial cost
- Heavier weight
- Water cannot be replaced if continually overcharged
- Automatic temperature-sensing, voltage-regulated chargers **must** be used
- Charge voltage **must** be limited to extend life (13.8 to 14.1 volts maximum at 68°F)

### ***Absorbed Electrolyte Advantages:***

- Totally maintenance-free
- Air transportable
- Spillproof/leakproof
- No corrosion
- Installs upright or on side
- Lower cost than gel cell batteries
- Compatible with sensitive electronic equipment
- Very low to no gassing (unless overcharged)
- Excellent for starting and stationary applications
- Superior for shorter duration/higher rate discharges
- Superior under extreme cold conditions when fully charged
- Superior shelf life
- Superior rechargeability (from 0% to 90% in 3½ hours)
- Rugged and vibration-resistant
- Very safe at sea with no chlorine gas in bilge (due to sulfuric acid and salt water mixing)
- Operates in wet environments...even under 30 feet of water

### ***Absorbed Electrolyte Disadvantages:***

- Shorter cycle life than gel in very deep cycle applications
- Automatic temperature-sensing, voltage-regulated chargers **must** be used
- Water cannot be replaced if continually overcharged
- Charge voltage **must** be limited (14.4 to 14.6 volts maximum at 68°F)

### ***Flooded Electrolyte Advantages:***

- Lowest initial cost
- Higher cranking amps
- Water can be added (if accessible)
- Excellent for starting applications
- Tolerant of improper recharge voltage
- Certain designs are good for deep cycle applications
- Replacements readily available
- Good under extreme cold conditions when fully charged

### ***Flooded Electrolyte Disadvantages:***

- Spillable
- Operates upright only
- Shorter shelf life
- Fewer shipping options
- Cannot be installed near sensitive electronic equipment
- Watering may be required (if accessible)



## Why can't VRLA batteries be opened?

VRLA (Valve-Regulated Lead-Acid) batteries, sometimes called SLA (Sealed Lead-Acid) batteries or SVR (Sealed Valve-Regulated) batteries work on a recombination principle. Oxygen gas is produced at the positive plates during charge. The charged negative plates react first with this oxygen and subsequently with the electrolyte. Water is produced and the negative plates are very slightly discharged. Additional charging recharges the negative plates instead of producing hydrogen gas. Since very little hydrogen and oxygen is lost and the water (H<sub>2</sub>O) is retained, we say that the gasses have recombined. To work properly, the oxygen produced must be retained in the battery until the reaction is completed. Positive pressure allows the gas to be retained.

If any VRLA (gelled or absorbed electrolyte) battery is overcharged, gas will be vented from the valves. Hydrogen as well as oxygen will be released. If continued, the electrolyte will eventually dry out and the battery will fail prematurely. This is why charging limits are so critical.

In a sealed battery a balance is maintained between the hydrogen, oxygen and charge. If a VRLA battery is opened, or leaks, the negative plates are exposed to extra oxygen from the atmosphere. This excess oxygen upsets the balance. The negative plates become discharged. The positive plates may be subsequently severely overcharged. The battery **will** fail prematurely, and the **warranty will be voided**.

## Some say calcium grids don't do well in flooded deep cycle applications. Why does East Penn use calcium grids in VRLA batteries for deep cycle applications?

Flooded calcium alloy makes a very efficient, low resistance battery. Therefore, when deeply discharged, the plates release all their available power, eventually causing plate shedding and active material fall-out. In contrast, with flooded antimony batteries, the antimony helps lock the active material onto the grid. Therefore, the plate does not shed as easily, which extends the deep cycle life of the battery when compared to flooded calcium.

Our VRLA calcium alloy battery (**East Penn's exclusive patented alloy**) is also very efficient with low resistance. However, when deeply discharged, the electrolyte is used up before the plates are totally discharged because the battery is "acid-starved." This feature:

- limits the discharge the plates can deliver.
- protects the plates from shedding due to deep discharge.
- extends the life of the battery.

## Why do EPM VRLA batteries have longer cycle life than others?

Some of the major features that contribute to our long cycle life are:

- Our patented calcium/copper grid alloy **delivers superior performance** due to the purity of the lead. Copper is added as a "grain refiner." This means that the microscopic grains in our lead grids are odd-shaped, so they retard corrosion and **extend the life** of our grid.
- Our **thicker grids** have more corrosion resistance than thinner grids.

- Our VRLA batteries are protected against deep discharge because they are "**acid-starved**." This means that the battery uses the power in the acid before it uses the power in the plates. Therefore, the **plates are never subjected to destructive ultra-deep discharges**.
- With proper temperature-sensing, voltage-regulated charging (refer to table on page 11) the VRLA battery **never runs out of water**.
- Our gel batteries contain ultra-premium, **glass-mat**, dual-insulating separators which will not break down in service. The glass mat embeds itself into the plate, which **retards life-shortening shedding**.
- Our gel batteries contain polyester element wrap which **retards "mossing"** or active material growth that causes short circuits.
- Our AGM batteries contain separators at the ideal compression and ideal saturation to achieve the best balance between capacity utilization and recombination efficiency.
- Over **250 quality control checks** assure superior performance and long battery life.

## Why do EPM VRLA batteries have longer shelf life?

Our calcium/copper lead alloy premium separators and demineralized electrolyte are **ultra-pure**. Impurities in the lead alloy, separators and electrolyte cause tiny currents inside a cell which eventually discharge the battery and shorten its shelf life. **The purer the components, the longer the shelf life**. No one can match East Penn's purity!

Our exclusive "**weld seal gasket**" blocks the minute cell-to-cell currents that cause self-discharge. The better the weld seal, the longer the shelf life. Weld seals are **exclusive** to East Penn VRLA batteries.

## Does depth of discharge affect cycle life?

Yes! The harder any battery has to work, the sooner it will fail.

Typical* VRLA Battery Cycling Ability vs. Depth of Discharge		
	Typical Life Cycles	
Capacity Withdrawn	Gel	AGM
100%	450	150
80%	600	200
50%	1000	370
25%	2100	925
10%	5700	3100

\* You may experience longer or shorter life based upon application, charging regimen, temperature, rest periods, type of equipment, age of battery, etc.

As you can see, **the shallower the average discharge, the longer the life**. This is why it's important to size a battery system to deliver at least twice the average power required, to assure shallow discharges.

Follow these tips for the longest life:

- Avoid ultra-deep discharges.
- Don't leave a battery at a low stage of charge for an extended length of time. Charge a discharged battery as soon as possible.
- Don't cycle a battery at a low state of charge without regularly recharging fully.
- Use the highest initial charging current available (up to 30% of the 20-hour capacity per hour) while staying within the proper temperature-compensated voltage range.


## Why can't EPM VRLA batteries be discharged too low?

Our VRLA batteries are designed to be “acid-starved.” This means that the power (sulfate) in the acid is used before the power in the plates. This design protects the plates from ultra-deep discharges. Ultra-deep discharging is what causes life-shortening plate shedding and accelerated positive grid corrosion which can destroy a battery.

## Why does temperature have such a dramatic effect on batteries?

Temperature is a major factor in battery performance, shelf life, charging and voltage control. At higher temperatures there is dramatically more chemical activity inside a battery than at lower temperatures. The following charts graphically illustrate this fact.

### Typical Self-Discharge of VRLA Batteries at Different Temperatures

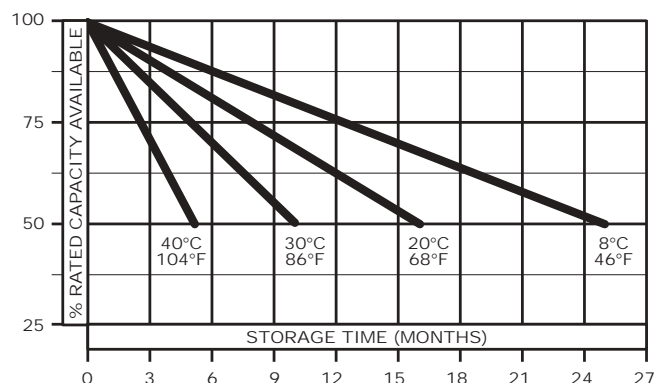

### AGM Charge and Float Voltages at Various Temperature Ranges

Temp. °F	Charge		Float		Temp. °C
	Optimum	Maximum	Optimum	Maximum	
≥ 120	13.60	13.90	12.80	13.00	≥ 49
110 – 120	13.80	14.10	12.90	13.20	43 – 49
100 – 110	13.90	14.20	13.00	13.30	38 – 43
90 – 100	14.00	14.30	13.10	13.40	32 – 38
80 – 90	14.10	14.40	13.20	13.50	27 – 32
70 – 80	14.30	14.60	13.40	13.70	21 – 27
60 – 70	14.45	14.75	13.55	13.85	16 – 21
50 – 60	14.60	14.90	13.70	14.00	10 – 16
40 – 50	14.80	15.10	13.90	14.20	4 – 10
≤ 40	15.10	15.40	14.20	14.50	≤ 4

### Gel Charge and Float Voltages at Various Temperature Ranges

Temp. °F	Charge		Float		Temp. °C
	Optimum	Maximum	Optimum	Maximum	
≥ 120	13.00	13.30	12.80	13.00	≥ 49
110 – 120	13.20	13.50	12.90	13.20	44 – 48
100 – 109	13.30	13.60	13.00	13.30	38 – 43
90 – 99	13.40	13.70	13.10	13.40	32 – 37
80 – 89	13.50	13.80	13.20	13.50	27 – 31
70 – 79	13.70	14.00	13.40	13.70	21 – 26
60 – 69	13.85	14.15	13.55	13.85	16 – 20
50 – 59	14.00	14.30	13.70	14.00	10 – 15
40 – 49	14.20	14.50	13.90	14.20	5 – 9
≤ 39	14.50	14.80	14.20	14.50	≤ 4

## What is acid stratification? How do VRLA batteries prevent it?

See page 6 for a detailed explanation of this phenomenon.

## How does a battery recharge?

The process is the same for all types of lead-acid batteries: flooded, gel and AGM. The actions that take place during discharge are the reverse of those that occur during charge.

The discharged material on both plates is lead sulfate ( $\text{PbSO}_4$ ). When a charging voltage is applied, charge flow occurs. Electrons move in the metal parts; ions and water molecules move in the electrolyte. Chemical reactions occur at both the positive and negative plates converting the discharged material into charged material. The material on the positive plates is converted to lead dioxide ( $\text{PbO}_2$ ); the material on the negative plates is converted to lead ( $\text{Pb}$ ). Sulfuric acid is produced at both plates and water is consumed at the positive plate.


If the voltage is too high, other reactions will also occur. Oxygen is ripped from water molecules at the positive plates and released as a gas. Hydrogen gas is released at the negative plates—unless, oxygen gas can reach the negative plates first and “recombine” into  $\text{H}_2\text{O}$ .

A battery will “gas” near the end of charge because the charge rate is too high for the battery to accept. A temperature-compensating, voltage-regulating charger, which automatically reduces the charge rate as the battery approaches the fully charged state, eliminates most of this gassing. **It is extremely important not to charge batteries for long periods of time at rates which cause them to gas** because they use water, which in sealed valve-regulated batteries cannot be replaced. Of course, no battery should be overcharged for a long period of time...even at low rates using so-called “trickle charges.”

In a fully charged battery, most of the sulfate is in the sulfuric acid. As the battery discharges, some of the sulfate begins to form on the plates as lead sulfate ( $\text{PbSO}_4$ ). As this happens, the acid becomes more dilute, and its specific gravity drops as water replaces more of the sulfuric acid. A fully discharged battery has more sulfate in the plates than in the electrolyte.

The following illustration shows the relationship between specific gravity readings and the combination of the sulfate from the acid with the positive and negative plates at various states of charge.



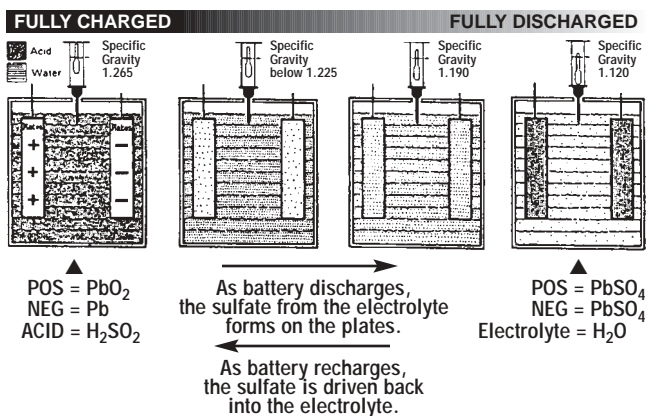

## How critical is recharge voltage? Why are all VRLA batteries so charge sensitive?

All lead-acid batteries give off hydrogen from the negative plate and oxygen from the positive plate during charging.

VRLA batteries have pressure-sensitive valves. Without the ability to retain pressure within the cells, hydrogen and oxygen would be lost to the atmosphere, eventually drying out the electrolyte and separators.

Voltage is electrical pressure. Charge (ampere-hours) is a quantity of electricity. Current (amperes) is electrical flow (charging speed). A battery can only store a certain quantity of electricity. The closer it gets to being fully charged, the slower it must be charged. Temperature also affects charging.

If the right pressure (voltage) is used for the temperature, a battery will accept charge at its ideal rate. If too much pressure is used, charge will be forced through the battery faster than it can be stored. Reactions other than the charging reaction occur to transport this current through the battery—mainly gassing. Hydrogen and oxygen are given off faster than the recombination reaction. This raises the pressure until the pressure relief valve opens. The gas lost cannot be replaced. Any VRLA battery will dry out and fail prematurely if it experiences excessive overcharge. **Note:** It is the pressure (voltage) that initiates this problem—a battery can be “over-charged” (damaged by too much voltage) even though it is not fully “charged.”

This is why charging voltage must be carefully regulated and temperature compensated to the values on page 11.


## How long does it take to recharge a fully discharged VRLA battery?

A specific time is difficult to determine because recharging depends on so many variables:

- Depth of discharge
- Temperature
- Size and efficiency of the charger
- Age and condition of the battery

See the following Charging Guides for an estimated time based upon the initial charge current the battery accepts.

## Typical Charging Time vs. 90% and 100% State of Charge

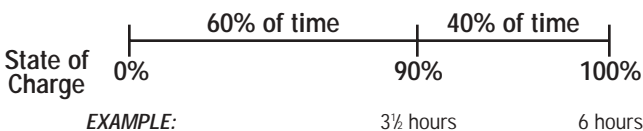

It will take about 60% of the charge time to bring a VRLA battery from 0% charged to 90% charged. It will take the remaining 40% of the total charging time to put the last 10% of the charge back into the battery.

Charge is a quantity of electricity equal to rate of flow (Amperes) times time (hours), and usually expressed in Ampere-hours (Ah).

0% state of charge is defined as the depth of discharge giving a terminal voltage of 10.50 Volts – measured under a steady load at the 20-hour rate at 80°F. (The 20-hour rate is the 20-hour capacity divided by 20 hours.)

Typically, the charge that must be returned to a VRLA battery to achieve a 100% state of charge is from 105% to 115% of the charge removed.

## Charging Guides

### Typical Charge Time vs. Initial Charge Current to 90% Full Charge

(Using an automatic temperature-sensing, voltage-regulating charger set at 13.8V. Totally discharged battery at 11.80–12.0 volts.)

Part No.	Initial Amperes		
	13 hrs*	6 hrs*	3 1/2 hrs*
8GU1, 8GU1H, 8AU1, 8AU1H	3	8	15
8G22NF, 8A22NF	5	12	23
8G24, 8A24	7	17	33
8G27, 8A27	8	21	41
8G30H, 8G31, 8G31DT, 8A30H, 8A31, 8A31DT	9	24	45
8G4D, 8GGC2, 8A4D, 8AGC2	17	42	83
8G8D, 8A8D	20	50	100

\*approximate

HOW TO USE THIS CHART: When charger is first turned on, read amps after about one minute. Initial ampere reading will indicate approximate charging time.

### EXAMPLE

If an 8G24 reads about 17 ampere charge current when first turned on, the battery will be at 90% in about 6 hours.

**IMPORTANT:** Always use an automatic temperature-sensing, voltage-regulated charger! Set charger at 13.8 to 14.1 volts at 68°F for gel, or 14.4 to 14.6 volts at 68°F for AGM. Do not exceed 14.1 volts for gel or 14.6 volts for AGM.

## How can continual undercharging harm a battery?

In many respects, **undercharging is as harmful as overcharging**. Keeping a battery in an undercharged condition allows the positive grids to corrode and the plates to shed, dramatically shortening life. Also, an undercharged battery must work harder than a fully charged battery, which contributes to short life as well.

An undercharged battery has a greatly reduced capacity. It may easily be inadvertently over-discharged and eventually damaged.

## How can you tell if an VRLA battery is fully charged?

By using a voltmeter.

<b>Open Circuit Voltage vs. State of Charge Comparison*</b>			
% Charge	Flooded	Open Circuit Voltage Gel	AGM
100	12.60 or higher	12.85 or higher	12.80 or higher
75	12.40	12.65	12.60
50	12.20	12.35	12.30
25	12.00	12.00	12.00
0	11.80	11.80	11.80

NOTE: Divide values in half for 6-volt batteries.  
\* The "true" O.C.V. of a battery can only be determined after the battery has been removed from the load (charge or discharge) for 24 hours.

## How can you tell if a VRLA battery has been damaged by under- or overcharging?

The only way is **with a load test**. Use the same procedure you would use with a wet cell battery:

- Recharge if the open circuit voltage is below 75%.
- If adjustable, set the load at  $\frac{1}{2}$  the CCA rating or three times the 20 hour rate.
- Apply the load for 15 seconds. The voltage should stabilize above 9.6 volts while on load.
- If below 9.6 volts, recharge and repeat test.
- If below 9.6 volts a second time, replace the battery.

## What is a float charger? What float voltage is recommended?

This type of charger continually delivers a pre-set voltage to the battery, regardless of charge conditions.

These chargers are used in stationary, emergency back-up power, emergency lighting, and other applications.

The frequency of discharge and temperature will dictate a more exact setting. For example, the more frequent the discharge, the higher the suggested recharge voltage, to a **maximum of 2.35 volts per cell (at 20°C/68°F)**.

Our recommended float voltage is 2.25 to 2.3 volts per cell for gel and absorbed models.

## What is a thermal runaway?

The appropriate charge voltage depends on the battery temperature (see page 11). A warmer battery requires a reduced voltage. If the voltage is not reduced, current accepted by the battery increases. When the current increases, the heating increases. This can continue in a loop feeding on itself with the battery temperature and charging current rising to destructive levels.

Gel batteries are much less susceptible to thermal runaway than AGM batteries. Batteries may become more susceptible with increasing age. Without a recombination reaction, flooded batteries convert most excess charging energy to gas, not heat. This makes them almost immune from the thermal runaway.

Thermal runaway can be prevented with:

- Temperature compensation monitoring at the battery—not at the charger.
- Limiting charging currents to appropriate levels (see page 11).
- Allowing for adequate air circulation around the batteries.
- Using timers, or Ampere-hour counters.
- Using smart chargers that recognize the signature of a thermal runaway event which will shut the charger down.

## How do I know if a charger is "gel friendly" or "AGM friendly"?

Unfortunately, many chargers on the market claim to be gel "friendly" or "OK for sealed batteries", but are not. Some overcharge the batteries, while others may not fully charge the batteries. Some chargers claim to be "smart". Some "smart" chargers do a good job, others do not. The best choice of charger often depends on the application.

Use only "voltage-regulated" or "voltage-limited" chargers. **Standard constant current or taper current chargers must not be used. The voltage must fall in the range of the chart on page 11.** Almost all applications require temperature sensing and voltage compensation. Beware, many chargers measure the ambient temperature which could be significantly different from the battery's internal temperature.

Low frequency current ripple (to about 333 Hz) can be detrimental to sealed batteries depending on the application. On applications where the charger is connected continuously to a float voltage, especially where simultaneous charge and discharge may occur, the level of current ripple must be a consideration.

If you are not sure if a charger is performing properly, follow this procedure:

- Using a fully discharged VRLA battery (OCV about 11.8V) and a digital voltmeter, record the initial open circuit voltage at the battery terminals.
- Using an automatic charger as described above, set voltage if adjustable (14.1V for gel, 14.4V for AGM models).
- Connect and start charging. Record initial on-charge voltage and current.
- Each hour or so, check and record the on-charge voltage across the battery terminals. Except for occasional, brief "blips" or pulses, the voltage should not exceed the voltage limits noted in "b" above.

- e. At the end of charge (when the current is very low or goes to zero) check and record the voltage. Note that the charger may have turned off by then.
- f. The disconnected battery should be at 100% or above after a 24 hour rest.

During the charging time, the charger should not have exceeded the limit (except for occasional, brief pulses). This indicates that the charger is working properly.

Keep in mind that the voltage limit is at 68°F/20°C. Charging at higher or lower temperatures will change this limit.

**A temperature-sensing charger should always be used, as manual adjustments are never accurate and will damage any VRLA battery.**

### ***Do VRLA batteries have a "memory" like ni-cad batteries?***

One of the major disadvantages of nickel-cadmium (ni-cad) batteries is that after shallow discharge cycles, the unused portions of the electrodes "remember" the previous cycles and are unable to sustain the required discharge voltage beyond the depth of the previous cycles. The capacity is lost and can only be restored by slowly discharging completely (generally outside the application), and properly recharging. **VRLA batteries do not exhibit this "use it" or "lose it" capacity robbing effect known as memory.**

### ***What is a safe charge rate or voltage setting for outdoor applications with wide temperature fluctuations if a temperature-sensing charger is not available?***

**NONE!** As the chart on page 11 (Effect of Temperature on Recharge Voltage) shows, charging voltage varies widely with temperature. **There is no fixed voltage setting or current that will work.** A temperature-sensing, voltage-regulated charger must be used. Anything else will damage any battery and **cause premature failure!**

### ***Can a VRLA battery be load tested?***

Yes. See page 13 (How can you tell if a VRLA battery has been damaged by under- or overcharging?).

### ***Why do some VRLA batteries bulge? Why do some VRLA batteries appear "sucked in"? Are there visual signs of a faulty or plugged pressure relief valve?***

To prevent the permanent loss of gases so that recombination has time to take place, each cell can hold up to about 1.5 psi without venting.

Batteries with very large cells, such as the 8G4D, 8G8D, 8A4D, 8A8D and 8GGC2, will bulge somewhat as this normal pressure builds. This is especially true in higher temperatures, because the polypropylene case is pliable. Therefore, **a certain amount of bulge is normal.**

The valves only let gas out, never in. A partial vacuum can form within a sealed battery under various circumstances. Battery temperature and ambient pressure play a role, but predominantly the recombination and discharge reactions are responsible. After charging ends, the recombination reaction continues until most of the oxygen in the battery headspace is consumed. The total volume of the battery components decreases slightly during a discharge. Deeply discharged batteries often have a "sucked-in" appearance. Batteries with large cells may display this appearance even when fully charged.


If a battery bulges severely on charge, this is not normal. It is an indication of a blocked valve or an overcharge situation. Such a battery should be removed from service.

A sucked-in appearance can also be normal. A sucked-in battery should be charged, but if it remains sucked-in after charging, the appearance can safely be ignored; however, if only a single cell displays or lacks this appearance a load test would be prudent.

### ***How safe are VRLA batteries? Can they explode?***

VRLA batteries are very safe, unless abused. However, as with any type battery, certain safety precautions must be taken.

**ALWAYS WEAR SAFETY GLASSES  
WHEN WORKING AROUND BATTERIES!**

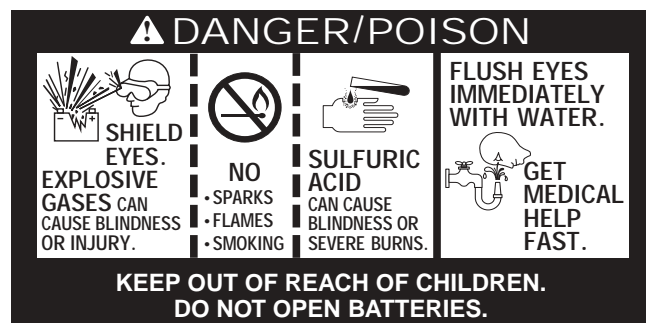

**CALIFORNIA PROPOSITION 65 WARNING:** Batteries, battery posts, terminals and related accessories contain lead and lead compounds and other chemicals known to the state of California to cause cancer and birth defects or other reproductive harm. **Wash hands after handling.**

Because VRLA batteries normally emit very little to no hydrogen gas, they are safe near sensitive electronic equipment. They do not cause corrosion of surrounding metals. No hydrogen gas means no dangerous explosions... **UNLESS SEVERELY OVERCHARGED!**

**Do not install any lead-acid battery in a sealed container or enclosure. Hydrogen gas from overcharging must be allowed to escape.**

**DO NOT CHARGE IN EXCESS OF 14.1V @ 68°F - Gel Cells  
14.6V @ 68°F - Absorbed**

**Always use a reliable, temperature-sensing, voltage-regulated, automatic charger.**

Because SVR batteries have immobilized electrolyte, they cannot spill or leak, even if punctured. That is why they are approved for air transport by the International Commercial Airline Organization (ICAO), International Airline Transport Association (IATA), and Department of Transportation (DOT) as noted on the label if properly insulated from short circuits.

Also, when protected against short circuits and securely braced/ blocked, our VRLA batteries “are not subject to any other requirements of 49 CFR Parts 171-180...” for shipping.

### ***Which way does current flow? On which side should a circuit breaker be installed?***

During discharge, electrons progress through the external circuit from the negative post toward the positive post. Inside the battery, positive ions move toward the positive plate by diffusion where they react, leaving neutral molecules in solution. The resulting neutral molecules move back toward the negative plate by diffusion. There are also negative ions in the electrolyte offsetting the positive ion charges. Some travel by diffusion toward both the negative and the positive plates, where they are consumed. During charge, all of the directions reverse.

Although not physically accurate, when designing circuits or making calculations, it is just as valid to consider positive charges moving through the whole circuit. Indeed, this is the convention used to define the direction of current in electronics (known as conventional current).

#### **Proper location of disconnects depends on the application.**

Vehicles can vary, but in most cases, the negative terminal is treated as ground. The entire chassis is connected to the negative terminal of the battery. The positive side of the circuit is considered “hot.”

**Switches/circuit breakers should usually be installed on the hot side of a device.** When disconnecting the entire battery from the system with a fusible link or circuit breaker, breaking the connection from the negative terminal to the chassis often works best.

In multiple battery installation, there could be other considerations such as total voltage, multiple voltages, and the effects on other devices.

### ***What do I need to know about installation, especially in salt water marine applications?***

#### ***Wiring and Waterproofing***

**ALWAYS WEAR SAFETY GLASSES  
WHEN WORKING AROUND BATTERIES!**

- Cabling of the approved gauge should be tinned copper. If using untinned copper, allow plenty of spray silicone to “wick” along the strands.
- Install heat-shrink tubing with a silicone interior; the silicone forms an excellent moisture barrier. Cut the tubing long enough to cover the terminal lug and plenty of the insulated portion of the cable. Slip tubing onto the cable.
- Crimp on the appropriate terminal.
- Position the heat-shrink tubing. Heat and inspect.
- Clean battery terminals and connect. Be sure perfect metal-to-metal contact is made, with no dirt, corrosion, grease or foreign material to interfere with current flow.
- Always attach the cable connected to the solenoid or starter first. Attach the ground cable last! Tighten snugly, BUT DO NOT OVERTIGHTEN, which will damage the terminals or crack the battery cover. This will destroy the battery and VOID THE WARRANTY.

g. Spray exposed terminals and connectors with several coats of battery terminal corrosion protection spray. (Mask surrounding areas to protect against overspray.)

h. For batteries which may be exposed to very wet environments (e.g. bilge mounted batteries) total encasement of the exposed terminals and connectors is necessary. However, do not block or cover the vents. **Allow ventilation.**

A battery terminal boot should be used. Install the boot on the cable before crimping the terminal. Fill the boot with petroleum jelly and fit over the sprayed connectors (as in “g” above).

i. Battery charging in a boat requires a charger specifically designed for marine applications. In addition to battery gases, bilges often contain potentially dangerous fuel fumes. Follow all wiring and grounding recommendations of the charger manufacturer for on-board and on-shore connections.


**Using a charger not specifically designed for marine applications or failure to follow the marine charger manufacturer's grounding and wiring recommendations could result in major corrosion damage to the hull or prop, and create a serious risk of electrical shock or fire, personal injury or death.**

#### ***Battery Installation***

**Note:** In a multi-battery installation, it is often best to replace the entire set of batteries when one battery is weak or has failed.


#### ***Series***

A “series” system increases the voltage, but keeps the battery capacity (cranking amps, amp hours, reserve minutes, and minutes running time) the same. Therefore, two 12-volt batteries connected in series (POS to NEG, NEG to POS) will deliver 24 volts at the same rating as one battery: During recharge, each battery receives the same amount of current; e.g. if the charger is putting out 10 amps, both batteries are getting 10 amps.

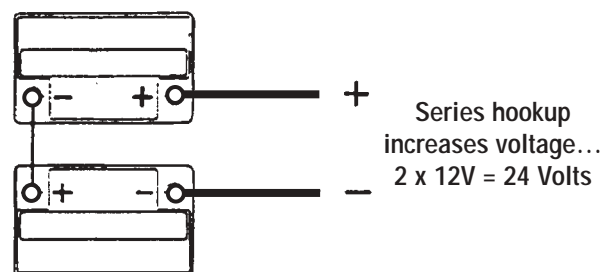

#### ***Parallel***

A “parallel” system increases the capacity available, but keeps the voltage the same. Therefore, two 12-volt batteries with 400 CCA, 110 R.C. and 65 Ah will deliver 12 volts, 800 CCA, 220 R.C. and 130 Ah. (Actually, since each battery's load is lighter, the reserve capacity will more than double.)

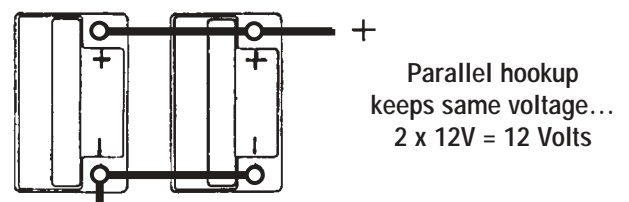


During recharge, the current (amps) is split between the batteries. The battery that is discharged the most will receive more current than the other until both are brought up to full charge.

### Series/Parallel

A "series/parallel" system provides a combination of voltage and capacity for special applications. Note: Never mix different types and sizes of batteries in the same bank.

### Dual Voltage

The illustration shows an arrangement that would supply 24 volts to a starter and 12 volts to the electronics (or vice versa).

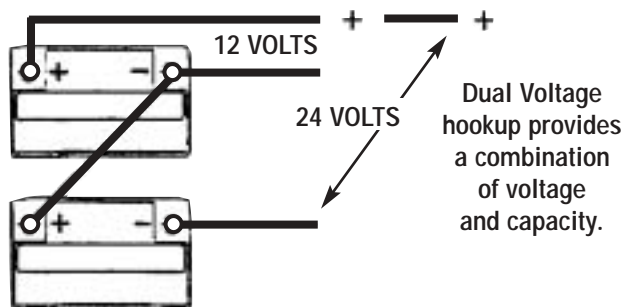

To properly recharge, a sophisticated "battery isolator" should be installed. Otherwise, one battery will be continually overcharged and the other undercharged in a dual-voltage set-up.

**IMPORTANT:** Do not install any type of battery in a completely sealed box or enclosure. In the event of overcharging, the potentially explosive gasses must be allowed to escape.

MEMBER OF:



QUALITY SYSTEM  
CERTIFIED TO  
**ISO 9001**  
**ISO/TS 16949**



**ABYC**  
AMERICAN BOAT  
& YACHT CLUB



**DISCLAIMER:** By providing this information, East Penn, its employees and distributors make no representation or warranties about the information provided in this document. All content is provided without warranties, express or implied. East Penn and its representatives are not to be held liable for any and all damages whatsoever in using or interpreting the information in this document, whether suitable or not.

"POWERED FOR PERFORMANCE"™

**EAST PENN manufacturing co., inc.**

Lyon Station, PA 19536-0147 • Phone: 610-682-6361 • Fax: 610-682-4781

**Order Department Hotline: 610-682-4231**

www.eastpenn-deka.com

E-mail: eastpenn@eastpenn-deka.com

E.P.M. Form No. 0139 Rev. 3/04  
© 2004 by EPM Printed in U.S.A.

**DISTRIBUTED BY:**

No part of this document may be copied or reproduced, electronically or mechanically, without written permission from the company.



## RECYCLING IS CRITICAL

Did you know lead-acid batteries are virtually 100% recyclable? They have a higher recycling rate than other waste products such as aluminum, paper, glass and plastic. Be sure to return your lead-acid batteries to a dealer. In most states it is illegal to discard a battery in the trash.



## BE CAREFUL!

**WARNING:** Batteries produce explosive gases. Keep sparks, flames, and cigarettes away from batteries at all times. Protect your eyes at all times. Never lean over battery when jumping or performing other maintenance. Remember... always wear safety glasses when working around batteries!



**SHIELD EYES.**

**EXPLOSIVE GASES CAN CAUSE BLINDNESS OR INJURY.**

**NO SPARKS • FLAMES • SMOKING**

**SULFURIC ACID CAN CAUSE BLINDNESS OR SEVERE BURNS.**

**FLUSH EYES IMMEDIATELY WITH WATER.**

**GET MEDICAL HELP FAST.**

**⚠ DANGER/POISON**

**KEEP OUT OF THE REACH OF CHILDREN.**

**DO NOT TIP. KEEP VENT CAPS TIGHT AND LEVEL.**

**DO NOT OPEN FLUSH COVER BATTERIES.**

## TYPES OF MARINE/RV BATTERIES

The various types of batteries used in Marine and RV service are:

- Maintenance-Free Non-Accessible Engine Starting with no filler caps
- Low-Maintenance Accessible Starting with filler caps
- Dual Purpose (Starting/ Cycling) with filler caps
- Deep Cycle with filler caps

You may have one or more of the same type or different types on board your boat or RV. Determine which type of battery or batteries you have and follow the correct set of instructions.

## SERVICE TIPS

Always wear safety glasses when working around batteries. Batteries can explode! Protect your eyes.

1. Perform a visual inspection. Inspect for defective or cracked case and cover, and loose or damaged terminal posts or cables. Replace battery and/ or cables immediately if any damage is found.

## SERVICE TIPS (continued)

Look for loose connections or hold-downs. Tighten snugly if appropriate. **DO NOT OVER-TIGHTEN TO AVOID BATTERY DAMAGE!**

2. Keep the batteries and battery compartment clean and corrosion free. Dirty, corroded batteries can self-discharge, which will affect performance and life.

Clean corrosion with a paste made from baking soda and water. Apply liberally. Any corrosion is neutralized when the solution stops bubbling. Wash off with large quantities of water to avoid environmental damage.

3. Shine lead posts and terminal ends with a wire brush or steel wool to clean corrosion and assure a low resistance connection. Reassemble and coat lead parts with petroleum jelly or a terminal protection spray.
- Repaint hold-down, tray and surrounding parts if necessary.

## CHECK THE STATE OF CHARGE

Always wear safety glasses when working around batteries. Batteries can explode! Protect your eyes.

- **MAINTENANCE-FREE NON-ACCESSIBLE TYPES, WITH NO FILLER CAPS:**

1. Check the state-of-charge of the battery with a voltmeter. If the reading is above 12.4 volts, the battery is at least 75% charged and should be OK. If below 12.4 volts, see the Charging Tips section.

- **ACCESSIBLE TYPES, WITH FILLER CAPS:**

1. Using a voltmeter: Check the state-of-charge of the battery. If the reading is above 12.4 volts, the battery is at least 75% charged and should be OK. If below 12.4 volts, see the Charging Tips Section. Or,
2. Using a hydrometer: Check the state-of-charge of the battery by taking a reading from one cell. Use a different cell each time. If the reading is above 1.225 specific gravity, the battery is at least 75% charged and should be OK. If below 75%, see the Charging Tips section.

**Be careful of the sulfuric acid in the battery.** It can burn eyes, clothing and damage paint and electronic equipment. **FLUSH EYES IMMEDIATELY WITH LARGE QUANTITIES OF COOL WATER. GET MEDICAL HELP FAST.**

Specific gravity readings need to be corrected to 80°F (27°C) to allow for temperature of the electrolyte and to insure accurate readings. For each 10 degrees above 80°F (27°C), add four points to the hydrometer reading.

## CHECK THE STATE OF CHARGE (continued)

For each 10 degrees below 80°F (27°C), subtract four points to the hydrometer reading. For example, at 90°F (32°C) a hydrometer reading of 1.250 would be corrected to 1.254. Likewise, at 70°F (21°C) a hydrometer reading of 1.250 would be corrected to 1.246.

If the electrolyte level is too low to read with a hydrometer, add distilled water as noted below and run the engine or equipment at least two hours to mix the electrolyte and avoid a false reading.

3. Check electrolyte levels in all cells. If necessary, add distilled water (or clear, odorless drinking water). Do not use water with high iron content to avoid battery damage. **Never add acid, only water to a battery.** If it will be necessary to charge the battery, bring the levels in all cells to just above the separators inside the cells to allow for expansion during charging. Top off after charging as noted below.

If it is not necessary to charge the battery, (or after charging) top off by filling each cell with distilled water to just below the filler tube in each cell.

## LOAD TESTING

Always wear safety glasses when working around batteries. Batteries can explode! Protect your eyes.

Using a voltmeter or hydrometer will tell you if your battery is charged. But these tests will not indicate if a battery can "hold a load." A battery can be fully charged, but be so weak or worn out that it can no longer perform its function of starting an engine or running accessory loads. Therefore, you must also perform a load test to determine the state of health of your battery.

1. Follow the instructions on the variable load tester or ask your favorite service dealer to load test your battery.
2. If the battery maintains a minimum "on load" voltage of 9.6 volts for 30 seconds, it is in good condition. If not, recharge and load test again.
3. If it fails a second time, **replace the battery immediately.**

### CHARGING TIPS

**Always leave filler caps in place**, tight and secure to reduce the risk of battery explosion and serious injury!  
**Always wear safety glasses when working around batteries. Batteries can explode! Protect your eyes.**

Do not charge batteries without proper instruction.

1. Batteries should be charged if hydrometer reading is below 1.225 specific gravity, or open circuit voltage is below 12.4 volts, or if the first load test is below 9.6 volts as noted previously.
2. Carefully read and follow the instructions that came with the charger to avoid serious injury, property damage and/or battery damage.
3. Unplug the charger before connecting or disconnecting a battery to avoid dangerous sparks which can cause a battery to explode.
4. Do not leave a battery on charge for more than 48 hours to avoid damaging the battery by over-charging. If gassing or spewing of electrolyte occurs, or the battery case feels hot, reduce or temporarily halt charging to avoid damaging the battery.
5. Stop the charge when two hydrometer or voltage readings recorded two hours apart indicate no increase. Further charging would be useless and may damage the battery and shorten its life. If the battery won't come up to full charge, replace it.
6. **NEVER attempt to charge a frozen battery.** To avoid explosion and serious injury, allow it to warm to 60°F (16°C) before charging.
7. **NEVER** leave a battery on a trickle charger longer than 48 hours. Serious damage to the battery WILL occur.

### 12 VOLT BATTERY CHARGING TIME TO FULL CHARGE @ 80°F

BATTERY VOLTAGE	SPECIFIC GRAVITY	STATE OF CHARGE	MAXIMUM RATE @				
			50 AMPS	30 AMPS	20 AMPS	10 AMPS	
12.6	1.265	100%	--- FULL CHARGE ---				
12.4	1.225	75%	20 min.	35 min.	48 min.	90 min.	
12.2	1.190	50%	45 min.	75 min.	95 min.	180 min.	
12.0	1.155	25%	65 min.	115 min.	145 min.	280 min.	
11.8	1.120	0%	85 min.	150 min.	195 min.	370 min.	

### NOTE:

Times are approximate and depend upon battery condition, age and design, the efficiency of the charger, line voltage and other factors.

### OFF-SEASON STORAGE

Batteries that are not in use during the off-season must be cared for as follows to extend battery life and reliability:

1. Disconnect the batteries to avoid self-discharge due to parasitic loads such as clocks, ground faults, etc.
2. Put into storage fully charged and keep them above 75% state-of-charge. Check state-of-charge every 90 days and recharge if necessary.
3. Ideally, store batteries in a cool, dry place with temperatures not below 32°F (0°C) or above 80°F (27°C). Typically, batteries will self-discharge at faster rates at higher temperatures. For example:

TEMPERATURE	SELF-DISCHARGE RATE
-------------	---------------------

100°F (38°C)	.....3 Pts. Specific Gravity per day
80°F (27°C)	.....2 Pts. Specific Gravity per day
50°F (10°C)	.....1/2 Pt. Specific Gravity per day
30°F (-1°C)	.....1/10 Pt. Specific Gravity per day

### NOTE:

This is only an example. Self-discharge may be higher or lower depending upon battery chemistry, lead alloys, age and other factors.

### California Proposition 65 Warning

Batteries, battery posts, terminals and related accessories contain lead and lead compounds, and other chemicals known to the state of California to cause cancer and birth defects or other reproductive harm. **Wash hands after handling.**

# Marine / RV Battery Care & Maintenance

- STARTING
- DEEP-CYCLE
- DUAL PURPOSE

DISTRIBUTED BY:

**EAST PENN manufacturing co., inc.**

Lyon Station, PA 19536-0147

Phone: 610-682-6361 • Fax: 610-682-4781

**Order Department Hotline: 610-682-4231**

[www.eastpenn-deka.com](http://www.eastpenn-deka.com)

E-mail: [eastpenn@eastpenn-deka.com](mailto:eastpenn@eastpenn-deka.com)

E.P.M. Form No. 0273 Rev. 3/04

© 2004 by EPM Printed in U.S.A.

No part of this document may be copied or reproduced, electronically or mechanically, without written permission from the company.

**– Material Safety Data Sheet –****Lead Acid Battery Wet, non-spillable (UN2800)****SECTION I**

**Manufacturer's Name:** East Penn Manufacturing Co., Inc.  
Deka Road, Lyon Station, PA 19536  
**Telephone Number for Information:** (610) 682-6361  
**Emergency Telephone Number:** CHEMTREC: 1-800-424-9300, In Washington D.C. or outside continental U.S., call 1-202-483-7616

**Date:** January 29, 2007  
**Trade Name:** Gell; Absorbed Electrolyte, Sealed Valve Regulated Non Spillable Battery  
**Classification:** Battery wet, non-spillable, electric storage UN2800

**SECTION II****HAZARDOUS INGREDIENTS/IDENTITY INFORMATION**

Hazardous Components Specific Chemical Identity (Common Name (s))	OSHA PEL	ACGIH TLV	Range Percent By Weight	Average
Lead, CAS #7439921	0.05 mg/m <sup>3</sup>	0.05 mg/m <sup>3</sup>	60-75%	67%
Sulfuric Acid, CAS #7664939	1.00 mg/m <sup>3</sup>	1.00 mg/m <sup>3</sup>	5-15%	10%
Antimony, CAS #7440360	0.50 mg/m <sup>3</sup>	0.50 mg/m <sup>3</sup>	0-0.1%	<0.1%
Arsenic, CAS #7440382	0.01 mg/m <sup>3</sup>	0.01 mg/m <sup>3</sup>	0.01 %	<0.1%
Polypropylene, CAS#9003070	N/A	N/A	2-10%	4%
Calcium, CAS#7440702	1.0 mg/m <sup>3</sup>	1.0 mg/m <sup>3</sup>	0-0.1%	<0.1%
Tin CAS #7440315	2.0 mg/m <sup>3</sup>	2.0 mg/m <sup>3</sup>	0-0.1%	<0.1%

**SECTION III****PHYSICAL/CHEMICAL CHARACTERISTICS**

**Electrolyte (Sulfuric Acid):**  
**Appearance and Odor:** Clear, Odorless, colorless liquid  
**Boiling Point:** 235 – 240° F  
**Evaporation Rate (Butyl Acetate=1):** less than 1.0  
**Melting Point:** N/A

**Solubility in Water:** 100%  
**Specific Gravity (H<sub>2</sub>O=1):** 1.270 – 1.330  
**Vapor Density (AIR=1):** Greater than 1  
**Vapor Pressure (mm Hg):** 10

**SECTION IV****FIRE AND EXPLOSION HAZARD DATA**

**Flash Point (Method Used):** Non-Flammable  
**Extinguishing Media:** Class ABC extinguisher,  
**NOTE:** CO<sub>2</sub> may be used, but not directly on the cell. The thermal shock may cause cracking of the battery case and/or cases.  
\* Hydrogen gas may be generated during battery changing.

**Flammable Limits:** \*Hydrogen Gas  
**LEL:** 4% **UEL:** 74%

**SECTION V****REACTIVITY DATA**

**Stability:** Stable **Condition to Avoid:** Prolonged overcharging, sources of ignition

**Incompatibility (Materials to Avoid):** Sulfuric Acid: Contact with combustibles and organic materials may cause fire and explosion. Also reacts violently with strong reducing agents, metals, strong oxidizers and water. Contact with metals may produce toxic sulfur dioxide fumes and may release flammable hydrogen gas.

**Hazardous Decomposition of By-Products:** Sulfuric Acid: Excessive overcharging or fire may create Sulfur trioxide, carbon monoxide, sulfuric acid mist, sulfur dioxide, and hydrogen.

**Lead Compounds:** Contact with strong acid or base or presence of nascent hydrogen may generate highly toxic arsine gas.



## SECTION VI HEALTH HAZARD DATA

**Route(s) of Entry:** Not Applicable under normal use.

**Carcinogenicity:**

Sulfuric Acid: The International Agency for Research on Cancer (IARC) has classified "strong inorganic acid mist containing sulfuric acid" as a Category 1 carcinogen, a substance that is carcinogenic to humans. This classification does not apply to liquid forms of sulfuric acid contained within a battery. Inorganic acid mist (sulfuric acid mist) is not generated under normal use of this product. Misuse of the product such as overcharging, may result in the generation of sulfuric acid mist.

Lead Compounds: Lead is listed as a 2B carcinogen, likely in animals at extreme doses. Proof of carcinogenicity in humans is lacking at present.

Arsenic: Listed by National Toxicology Program (NTP), IARC, OSHA and NIOSH as a carcinogen only after prolonged exposure at high levels.

**Signs and Symptoms of Exposure:** Avoid contact, with absorbed electrolyte (sulfuric acid) may cause irritation of eyes, nose and throat. Contact with eyes and skin causes irritation and skin burns. Absorbed electrolyte is corrosive.

**Medical Conditions Generally Aggravated by Exposure:** Pregnant women and children must be protected from lead exposure.

**Health Hazards (Acute and Chronic):** Do not open battery, avoid contact with internal components. Internal components include lead and absorbed electrolyte. Electrolyte is corrosive and contact may cause skin irritation and chemical burns.

**Emergency and First Aid Procedures: (contact with electrolyte)**

- 1) Flush contacted area with large amounts of water for at least 15 minutes. Remove contaminated clothing and obtain medical attention if necessary. Eye wash and/or emergency shower should be readily available.
- 2) If swallowed, give large volumes of water. **DO NOT** induce vomiting, obtain medical treatment.

## SECTION VII PRECAUTIONS FOR SAFE HANDLING AND USE

**Steps to be Taken in Case Material is Released or Spilled:** Electrolyte material is corrosive. Contains sulfuric acid. Neutralize any spilled material. Reference 1996 North American Emergency Response Guidebook, #154.

**Waste Disposal Method:** Lead-acid batteries are completely recyclable. For information on returning batteries to East Penn for recycling, contact your East Penn Representative. Dispose of any collected material in accordance with local, state or applicable federal regulations.

**Precautions to be Taken in Handling and Storing:** Store away from reactive material as defined in Section V, Reactivity Data. Place cardboard between layers of stacked batteries to avoid damage and short circuit. Do not allow metallic materials to simultaneously contact both terminals.

**Other Precautions:** If battery case is broken, avoid direct contact with internal components. Keep away from ignition sources during charging.

## SECTION VIII CONTROL MEASURES

**Respiratory Protection (Specific Type):** N/A

**Ventilation:** Must be provided when charging in an enclosed area.

**Protective Gloves:** Recommended

**Eye Protection:** Recommended

**Other Protective Clothing or Equipment:** N/A

**Work Hygienic Practices:** Good Personal hygiene and work practices are recommended.

## SECTION IX

### OTHER REGULATORY INFORMATION

<u>NFPA Hazard Rating</u>	<u>Sulfuric Acid</u>	<u>Lead</u>
Health (Blue)	3	3
Flammability (Red)	0	0
Reactivity (Yellow)	2	0

Note: Sulfuric acid is water-reactive if concentrated.

**U.S. DOT:** Batteries, wet, non-spillable, electric storage

Hazard Class/Division	8
ID Number	UN2800
Packing Group	III
Label Requirements	Corrosive

**RCRA:** Spent lead-acid batteries are not regulated as hazardous waste when recycled. Spilled sulfuric acid is a characteristic hazardous waste, EPA hazardous waste number D002 (corrosivity).

#### **CERCLA (Superfund) and EPCRA (Emergency Planning and Community Right to Know ACT)**

- a) Reportable Quantity (RQ) for spilled 100% sulfuric acid is 1000 lbs.
- b) Sulfuric acid is a listed "Extremely Hazardous Substance" under EPCRA with a Threshold Planning Quantity (TPQ) of 1000 lbs.
- c) Batteries are subject to EPCRA reporting requirements under sections 302/304, 311/312, and 313.  
Reporting quantities are as follows:
  - Lead: section 311/312 = 10,000 lbs.
  - Title II I section 313 = 100 lbs.
  - Sulfuric Acid: section 311/312 = 500 lbs.
  - Title III section 313 = 500 lbs.

**California Prop 65:** Batteries, battery posts, terminals and related accessories contain lead and lead compounds, and other chemicals known to the State of California to cause cancer and birth defects or other reproductive harm. **WASH HANDS AFTER HANDLING.**

For additional information concerning East Penn Manufacturing Co., Inc. products or questions concerning the content of this MSDS please contact your East Penn representative.

This information is accurate to the best of East Penn Mfg. Co.'s knowledge or obtained from sources believed by East Penn to be accurate. Before using any product, read all warnings and directions on the label.

# MOHAWK



## OPTIONS

MP-18-SERIES  
ELECTRIC/HYDRAULIC  
PORTABLE LIFT

# CHASSIS LIFTING BEAM

See next page for chassis beam diagram and specifications.

If it is desired to raise a vehicle by the frame, this can be done by using optional chassis lifting beams. The chassis lift beam fits into the cradle where the tire would normally fit and spans between a pair of posts. The beam comes with lifting pads and height adapters that slide and stack along the beam to accommodate the frame pick up points.

## **Directions for Use:**

Drive vehicle into bay.

Roll chassis beam under desired end of vehicle where frame pick points are.

Slide pads to desired positions and stack adapters as desired to accommodate frame pick points.

Roll posts to each end of chassis beam, cradling ends of chassis beam with forks.

Lift pair until chassis beam contacts frame.

Verify proper frame engagement.

Check other posts for proper engagement of tires or frame (depending on if another chassis beam is used or the other end is lifted by tires)

Operate lift as desired.

## **NOTICE:**

The chassis beam is rated for 35,000 lbs total.

Always ensure that the beams are cradled in the forks as close as possible to the carriages. (Do not place beams on tips of forks) Also, ensure that vehicle is centered on chassis beam to ensure even loading of beam and posts.



This beam is intended to be used in conjunction with another beam or another set of mobile column posts to lift the entire vehicle. Do not use this beam to pick up just one end of a vehicle only. Load beam only on lifting pads, do not load beam on center.

This beam is intended for use on Mohawk MP-Series 15" Long Fork lifts ONLY.

Refer to the ANSI standard "Vehicle Lift Points for Service Garage Lifting," ANSI/SAE J2184-Oct92, safety manual "Lifting it Right," ALI/SM01, and "Vehicle Lifting Points Guide" ALI/LP-Guide for proper positioning of vehicles on lift.




THIS ACCESSORY HAS BEEN TESTED AND CERTIFIED BY A NATIONALLY  
RECOGNIZED TESTING LABORATORY (NRTL) TO MEET THE REQUIREMENTS OF  
ANSI/ALI ALCTV-2011 FOR AUTOMOTIVE LIFT CONSTRUCTION.

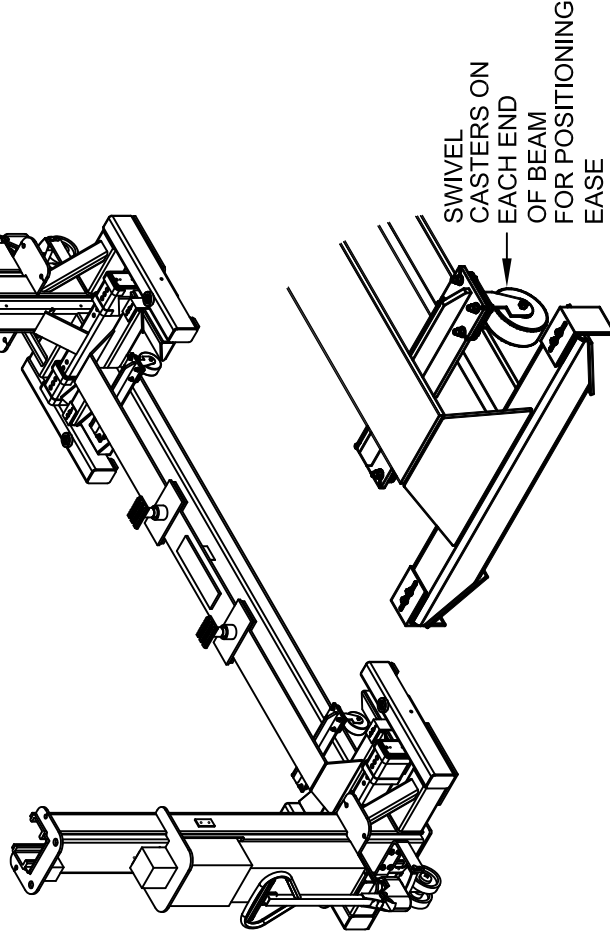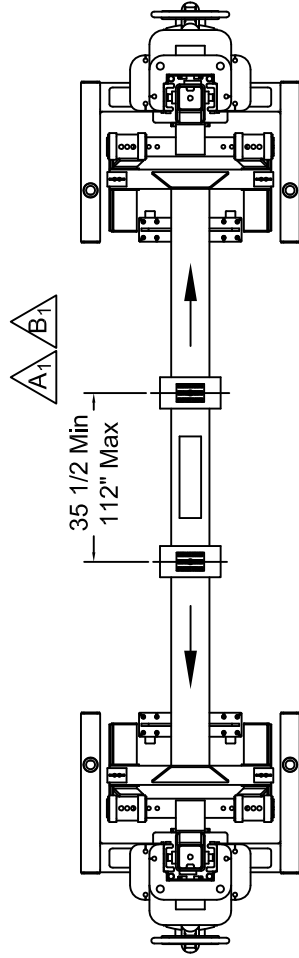

## Chassis Lifting Beam

These beams can be rolled on the floor between to Mohawk  
MP-Series mobile lifts and lifted by the column forks. Beams  
include twin lifting pads to engage vehicle chassis.

Capacity:  
35,000 lbs per beam  
(35,000 lbs per post pair)

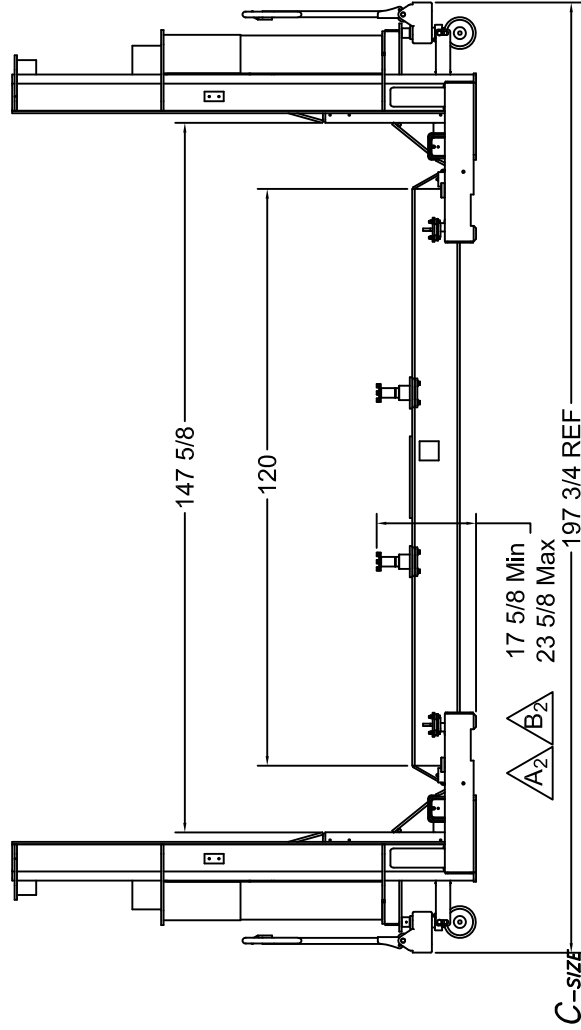

### NOTICE OF CONFIDENTIAL INFORMATION

INFORMATION CONTAINED HEREIN IS CONFIDENTIAL AND PROPERTY OF  
MOHAWK RESOURCES LTD. IT SHALL BE USED SOLELY FOR PURPOSES OF INSPECTION, INSTALLATION,  
OR MAINTENANCE. THE INFORMATION SHALL NOT BE USED OR DISCLOSED  
BY THE RECIPIENT FOR ANY OTHER PURPOSES WHATSOEVER.

- NOTES:
1. REMOVE ALL SHARP CORNERS & EDGES.
  2. UNLESS OTHERWISE SPECIFIED, SURFACE FINISH TO BE 125 RMS.
  3. WELDING MEDIUM SHALL CONFORM TO AWS SPECIFICATIONS TO E-70XX ELECTRODES OR E-70T1 CODE 5.3 FLUX CORE WIRE ONLY.

TOLERANCES:  
ANGULAR  
FRACTIONAL  
DECIMAL  
0.XX  
0.XXX  
± 1°  
± .030  
± .005

FILE NAME  
MP-18 Options.dwg

NEXT ASSEMBLY

	SCALE	DRAWN	MOHAWK RESOURCES LTD.
	1/16	rw7089	
	CHECKED	APPROVED	
	DATE	WEIGHT	TITLE
	8/2005	~500	Mobile Post Lift Chassis Beam
		FROM	DRAWING NUMBER
		n/a	MP-2300-Spec

#	DESCRIPTION	DATE	APPROVED	#	DESCRIPTION	DATE	APPROVED
B	1. DIM WAS 35 1/2 MIN/112 MAX	04/01/2010	rw7089	A	1) WAS 36 1/2 MIN, 112" MAX	05/30/2006	dak0879
	2. DIM WAS 18 MIN/24 MAX				2) WAS 17 1/2 MIN, 23 1/2 MAX		

# WING PLOW ADAPTERS

See next page for wing plow adapter diagram and specifications.

The wing plow adapters are to be used when it is desired to raise a vehicle with side wing plows or RV's with side extensions where the forks are not able to get close to the tires. The wing plow adapters are used with a pair of posts to enable lifting of the whole front axles of a vehicle by the tires.

## **Directions for Use:**

Drive vehicle into bay.

Roll wing plow adapters around each side of front axle tires (center tires on beam lengths).

Roll posts to each end of adapters, inserting forks fully into adapter sockets.

Lift pair until wing plow adapters engaged tires.

Verify proper engagement.

Check other posts for proper engagement of tires.

Operate lift as desired.

## **NOTICE:**




The wing plow adapters are rated for 25,000 lbs total (per pair of beams, see spec on next page) Always ensure that the wing plow adapters are fully inserted over the lifting forks. Also, ensure that vehicle is centered on the wing plow adapters to ensure even loading of beams and posts.

These adapters are intended to be used in conjunction with another set of mobile column posts to lift the entire vehicle. Do not use these to pick up just one end of a vehicle only. These adapters are designed to lift only tires and must not be top loaded. Do not use these to pick up vehicles by frames. Use adapters only in pairs. These adapters must not be single loaded.

The wing plow adapters are intended for use on Mohawk MP-Series 15" Long Fork lifts ONLY.



THIS ACCESSORY HAS BEEN TESTED AND CERTIFIED BY A NATIONALLY  
RECOGNIZED TESTING LABORATORY (NRTL) TO MEET THE REQUIREMENTS OF  
ANSI/ALI ALCTV-2011 FOR AUTOMOTIVE LIFT CONSTRUCTION.

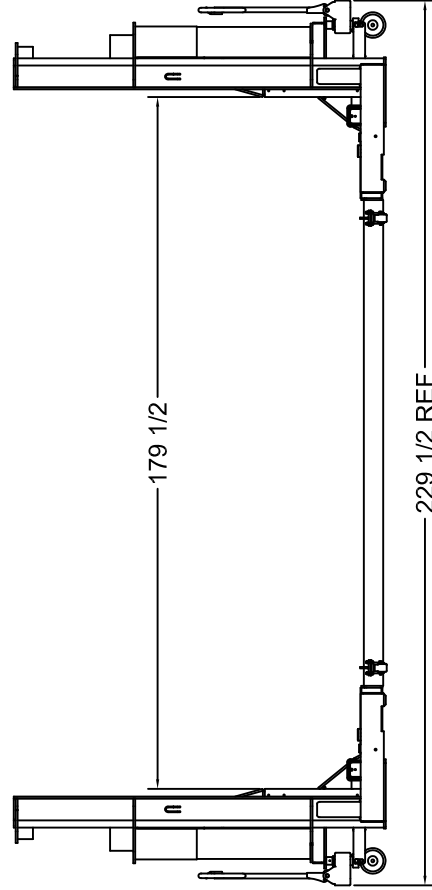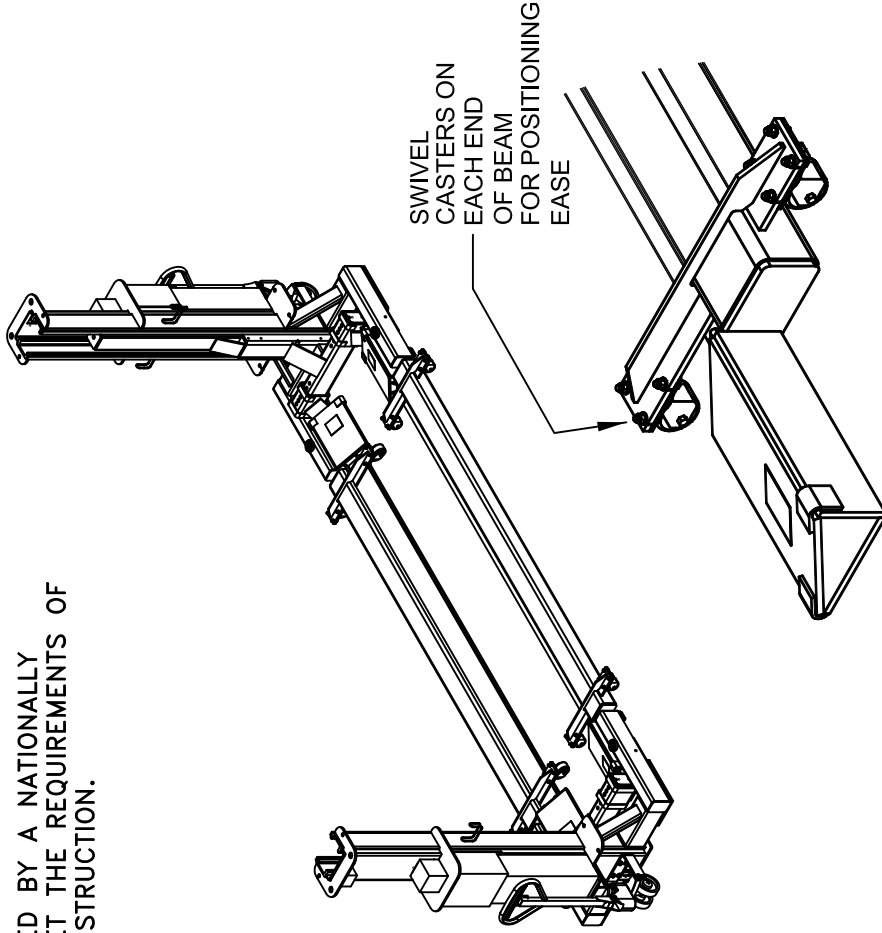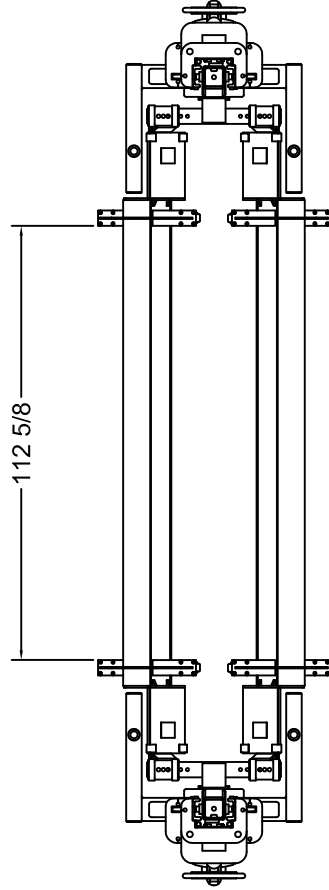

## Wing Plow Beam Adapters

### A.K.A. RV SLIDE OUT ADAPTERS

These beams can be rolled on the floor between two Mohawk MP-Series mobile lifts and lifted by the column forks. Beams are used in pairs to engage a full set of tires in the same manner that the lifting forks would. Length of beam gives lift the ability to raise plows with side wing plows or RV's with side extensions.

Capacity: 25,000 lbs per Post Pair

C-SIZE

#### NOTICE OF CONFIDENTIAL INFORMATION

INFORMATION CONTAINED HEREIN IS CONFIDENTIAL AND PROPERTY OF MOHAWK RESOURCES LTD. IT SHALL BE USED SOLELY FOR PURPOSES OF INSPECTION, INSTALLATION, OR MAINTENANCE. THE INFORMATION SHALL NOT BE USED OR DISCLOSED BY THE RECIPIENT FOR ANY OTHER PURPOSES WHATSOEVER.

- NOTES:
1. REMOVE ALL SHARP CORNERS & EDGES.
  2. UNLESS OTHERWISE SPECIFIED, SURFACE FINISH TO BE 125 RMS.
  3. WELDING MEDIUM SHALL CONFORM TO AWS SPECIFICATIONS TO E-70XX ELECTRODES OR E-70T1 CODE 5.3 FLUX CORE WIRE ONLY.

TOLERANCES:
ANGULAR ± 1°
FRONTAL ± .030
DECIMAL ± .030
0.XXX ± .005
FILE NAME
MP-18 Options.dwg

NEXT ASSEMBLY

SCALE	DRAWN
1/16	rw7089
CHECKED	APPROVED
DATE	WEIGHT
8/2005	~1200 LB.

FROM	TITLE	MOHAWK RESOURCES LTD.
n/a	Mobile Post Lift Wing Plow Beam Adapters	
DRAWING NUMBER		
MP-2400-Spec		

# FORK TRUCK ADAPTERS

See next page for fork truck adapter diagram and specifications.

The fork truck adapters are to be used when it is desired to raise a fork truck by the undercarriage for wheels free servicing. The fork truck adapters are used with a pair of posts.

## **Directions for Use:**

Locate a pair of posts (Master and Slave) in the desired lifting location.

Assembly ramps and pads onto posts as shown in specification diagram.

Drive fork truck onto pads until center of gravity of fork truck is at center of pad.

Locate rubber blocks as desired to contact frame.

Lift pair until fork truck pad engaged fork truck frame.

Verify proper frame engagement with pads.

Lift pair approximately 6 inches verifying that truck center of gravity is centered on pad.

Shake truck slightly to ensure secure and balanced support of frame.

Operate lift as desired.

## **WARNING:**

Any removal of components from vehicle while raised may alter the center of gravity of the vehicle and produce an unsafe or unstable condition of the vehicle or the lifting system that may cause injury to personnel or damage to equipment. Ensure vehicle center of gravity is always located at center of lifting pads. Use jack stands as an added measure of safety to ensure load stabilization.

## **NOTICE:**

The fork truck adapters are rated for 14,000 lbs per post (28,000 lbs per post pair).

Always ensure that the fork truck adapter pads are fully inserted over the lifting forks inboard against fork tubes. (not on tips of forks). Also, ensure that fork truck center of gravity is centered on the adapter pads to prevent offset loading of posts.


Do not use these to pick up just one end of a vehicle only. Do not use these to pick up vehicles by tires. Use adapters only in pairs. These adapter are designed only to pick up fork trucks.

The fork truck adapters are intended for use on Mohawk MP-Series 15" Long Fork lifts ONLY.





THIS ACCESSORY HAS BEEN TESTED AND CERTIFIED BY A NATIONALLY RECOGNIZED TESTING LABORATORY (NRTL) TO MEET THE REQUIREMENTS OF ANSI/ALI ALCVT-2011 FOR AUTOMOTIVE LIFT CONSTRUCTION. FOR USE WITH MOHAWK MP-SERIES LIFTS WITH 15" FORKS.

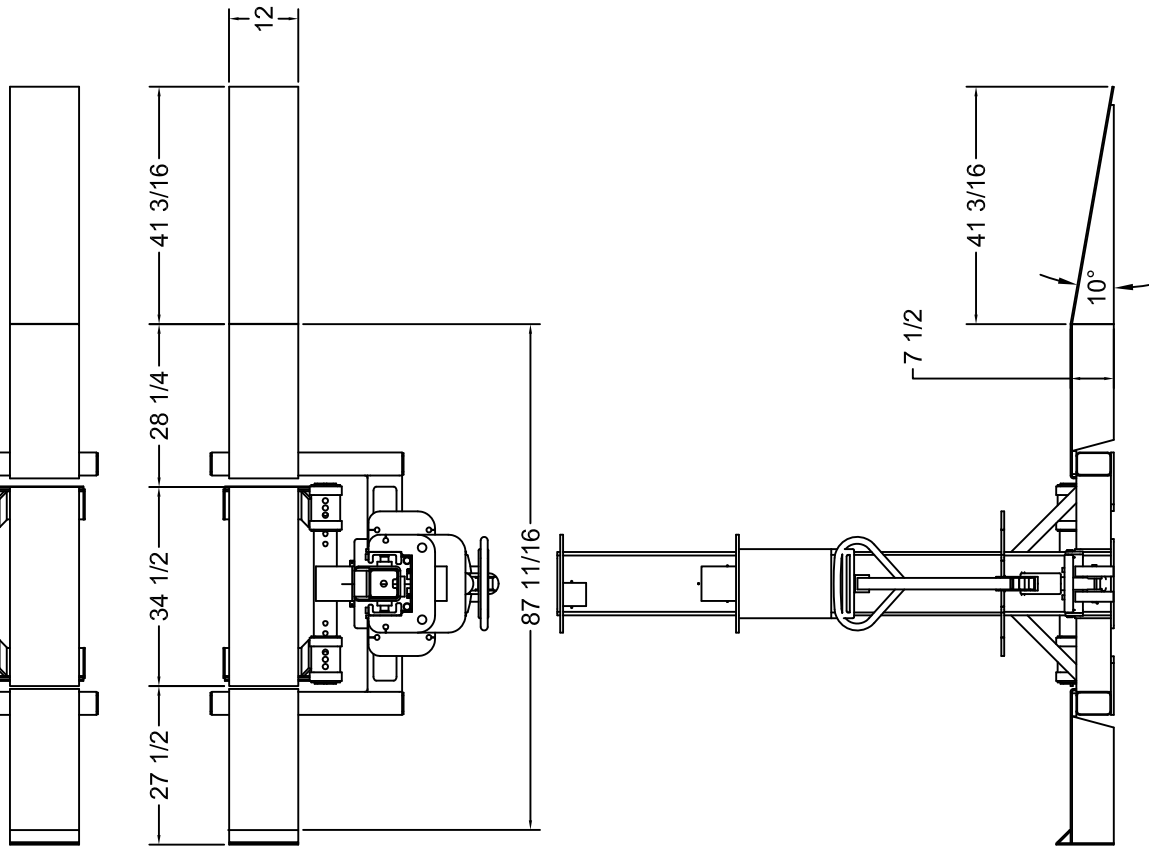


**C-SIZE**

## Fork Truck Adapters

These adapters consist of 2 ramps, 2 frame pads and 2 front wheel supports that set on top of the standard Mohawk MP-series mobile lift forks. As the lift raises, the frame pads are lifted by the forks while the ramps and front wheel supports stay on the floor.

Capacity:  
14,000 lbs per pad (per post)  
(28,000 Lbs Total per set)

<p><b>NOTICE OF CONFIDENTIAL INFORMATION</b></p> <p>INFORMATION CONTAINED HEREIN IS CONFIDENTIAL AND PROPERTY OF MOHAWK RESOURCES LTD. IT IS TO BE KEPT SECRET AND NOT DISCLOSED TO ANY OTHER PERSONS OR ENTITIES WITHOUT THE WRITTEN PERMISSION OF MOHAWK RESOURCES LTD. IT SHALL BE USED SOLELY FOR PURPOSES OF ESTIMATION, INSTALLATION, AND MAINTENANCE OF THE EQUIPMENT. IT IS NOT TO BE USED FOR ANY OTHER PURPOSES WHATSOEVER.</p>		<p><b>NOTES:</b></p> <ol style="list-style-type: none"> <li>1. REMOVE ALL SHARP CORNERS &amp; EDGES.</li> <li>2. UNLESS OTHERWISE SPECIFIED, SURFACE FINISH TO BE 125 RMS.</li> <li>3. WELDING MEDIUM SHALL CONFORM TO AWS SPECIFICATIONS TO E-70XX ELECTRODES OR E-7001 CODE 5.3 FLUX CORE WIRE ONLY.</li> </ol>		<p><b>TOLERANCES:</b></p> <p>ANGULAR: <math>\pm 1^\circ</math></p> <p>INTERNAL DECIMAL: <math>\pm .030</math></p> <p>EXTERNAL DECIMAL: <math>\pm .030</math></p> <p>XXX: <math>\pm .005</math></p>		<p>SCALE: <b>1/16</b></p> <p>CHECKED: _____</p> <p>APPROVED: _____</p> <p>DRAWN: <b>rwv7089</b></p>		<p><b>MOHAWK RESOURCES LTD.</b></p>	
						<p>TITLE: <b>Mobile Post Lift Fork Truck Adapters</b></p>			
						<p>DATE: <b>8/2005</b></p>		<p>WEIGHT: <b>&lt;550</b></p>	
						<p>FROM: <b>n/a</b></p>		<p>DRAWING NUMBER: <b>MP-2200-Spec</b></p>	
						<p>FILE NAME: <b>MP-18 Options.dwg</b></p>		<p>NEXT ASSEMBLY: _____</p>	
						<p>LB: _____</p>		<p></p>	

# HMMWV ADAPTERS

See next page for HMMWV adapter diagram and specifications.

The HMMWV adapters are specifically to be used when it is desired to raise a HMMWV (Hummer) by the front and rear bumpers for wheels free servicing. These adapters can also be used to pick up mobile military generators, a/c units, etc. These adapters are used with a pair of posts.

## **Directions for Use:**

Drive the vehicle into the lifting area.  
Slip the HMMWV adapters over the forks of a master and slave post.  
Drop the fork retainer pins in the holes at the carriages.  
Locate posts at the front and rear of the vehicle.  
Locate lifting pads at desired locations to contact frame at bumper ends.  
Ensure pads are at widest settings possible.  
Lift pair until pads engaged frame.  
Verify proper frame engagement with pads.  
Lift pair approximately 6 inches.  
Shake truck slightly to ensure secure and balanced support of frame.  
Operate lift as desired.

## **WARNING:**





Any removal of components from vehicle while raised may alter the center of gravity of the vehicle and produce an unsafe or unstable condition of the vehicle or the lifting system that may cause injury to personnel or damage to equipment. Ensure vehicle center of gravity is always located at center of lifting pads. Use jack stands as an added measure of safety to ensure load stabilization.

## **NOTICE:**

The HMMWV adapters are rated for 12,000 lbs per post (24,000 lbs per post pair)  
Always ensure that the HMMWV adapters are fully inserted over the lifting forks and retaining pins are inserted into carriage holes. Also, ensure that HMMWV center of gravity is centered on the between the pads to prevent offset loading of posts.  
Do not use these to pick up just one end of a vehicle only. Use adapters only in pairs.  
The HMMWV adapters are intended for use on Mohawk MP-Series 15" Long Fork lifts ONLY.



THIS ACCESSORY HAS BEEN TESTED AND CERTIFIED BY A NATIONALLY  
RECOGNIZED TESTING LABORATORY (NRTL) TO MEET THE REQUIREMENTS OF  
ANSI/ALI ALCTV-2011 FOR AUTOMOTIVE LIFT CONSTRUCTION. FOR USE  
WITH MOHAWK MP-SERIES LIFTS WITH 15" FORKS.

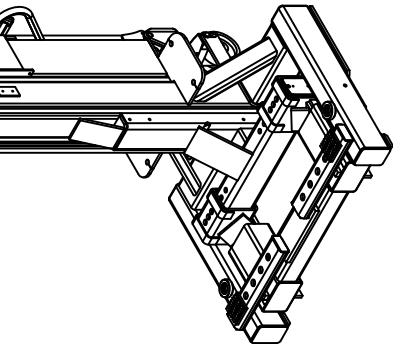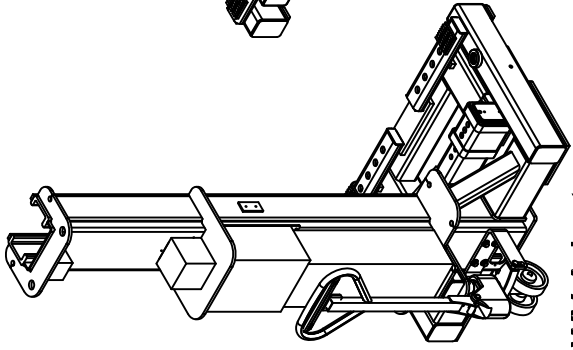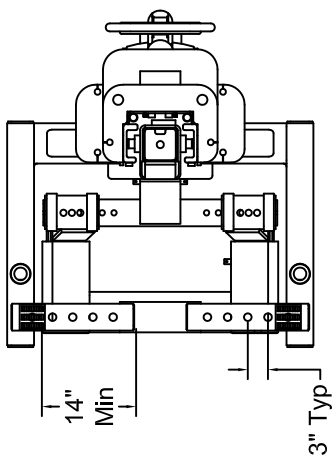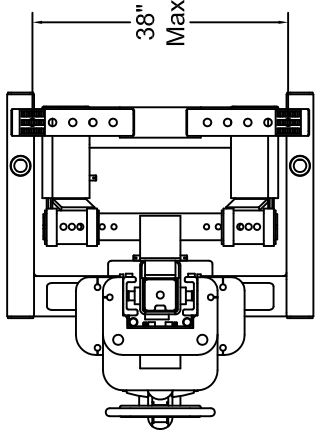



### HMMWV Adapters

A.K.A. FRONT TO REAR BUMPER ADAPTERS  
A.K.A. U.S.A.F GENERATOR ADAPTER

These adapters slip over the standard forks of the Mohawk MP-18 Series lifts and convert the lift into a "2-Post Frame Engaging Lift". They can also be used to pick by the bumpers. Designed specifically for military HMMWV's.

Capacity: 12,000 lbs per post  
(24,000 Lbs Total)

Accessories include:  
(4) Lifting Pads, Square  
(4) Lifting Pads, Square, 1"  
(4) Lifting Pads, Square, 2"  
(4) 3" Height Adapters  
(4) 6" Height Adapters

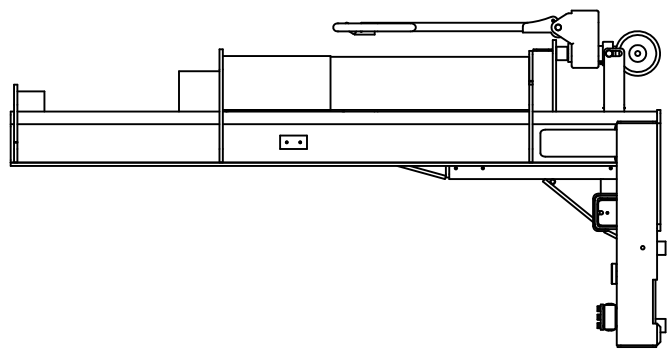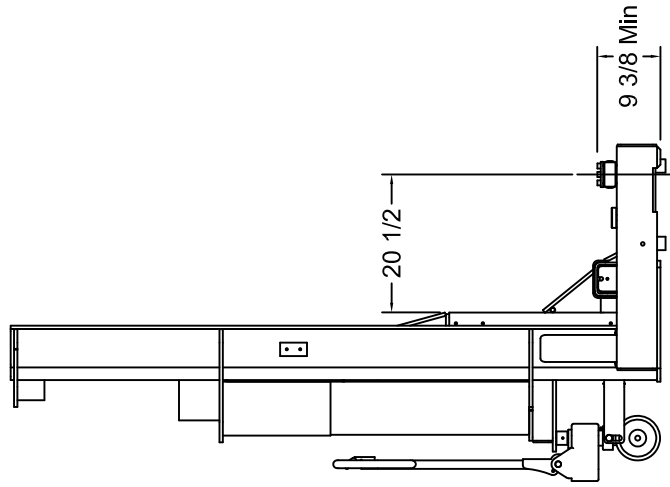

C-SIZE

### NOTICE OF CONFIDENTIAL INFORMATION

INFORMATION CONTAINED HEREIN IS CONFIDENTIAL AND PROPERTY OF MOHAWK RESOURCES LTD. IT SHALL BE USED SOLELY FOR PURPOSES OF INSPECTION, INSTALLATION, OR MAINTENANCE. THE INFORMATION SHALL NOT BE USED OR DISCLOSED BY THE RECIPIENT FOR ANY OTHER PURPOSES WHATSOEVER.

- NOTES:
1. REMOVE ALL SHARP CORNERS & EDGES.
  2. UNLESS OTHERWISE SPECIFIED, SURFACE FINISH TO BE 125 RMS.
  3. WELDING MEDIUM SHALL CONFORM TO AWS SPECIFICATIONS TO E-70XX ELECTRODES OR E-70T1 CODE 5.3 FLUX CORE WIRE ONLY.

TOLERANCES:	ANGULAR ± 1°
FRACTIONAL ± .030	DECIMAL ± .005
0.XX 0.XXX	FILE NAME MP-18 Options.dwg

SCALE 1/16	DRAWN rw7089	MOHAWK RESOURCES LTD.
CHECKED	APPROVED	TITLE Mobile Post Lift HMMWV Adapters
DATE 8/2005	WEIGHT ~550 LB.	FROM n/a
NEXT ASSEMBLY	DRAWING NUMBER MP-2500-Spec	

# FRAME CONTACT ADAPTERS

See next page for Frame Contact Adapters diagram and specifications.

The frame contact adapters are designed to convert a mobile column lift post pair into a frame engaging lift for wheels free servicing. These adapters are used with a pair of posts.

## **Directions for Use:**

Drive the vehicle into the lifting area.  
Slip the frame contact adapters over the forks of a master and slave post.  
Drop the fork retainer pins in the holes at the carriages.  
Locate posts at the both sides of the vehicle.  
Locate lifting pads at desired locations to contact frame pick up points.  
Ensure pads are at widest settings possible for stability.  
Lift pair until pads engaged frame.  
Verify proper frame engagement with pads.  
Lift pair approximately 6 inches.  
Shake truck slightly to ensure secure and balanced support of frame.  
Operate lift as desired.

## **WARNING:**




Due to the nature of this design where loading of the adapters is outside the base envelope of the posts, this is a non-certifiable option and voids the certification on the lift it is used on.

## **WARNING:**

Any removal of components from vehicle while raised may alter the center of gravity of the vehicle and produce an unsafe or unstable condition of the vehicle or the lifting system that may cause injury to personnel or damage to equipment. Ensure vehicle center of gravity is always centrally located between the lifting pads. Use jack stands as an added measure of safety to ensure load stabilization.

## **NOTICE:**

The frame contact adapters are rated for 4,000 lbs per post (8,000 lbs per post pair)  
Always ensure that the frame contact adapters are fully inserted over the lifting forks and retaining pins are inserted into carriage holes. Also, ensure that vehicle center of gravity is centered between the pads to prevent offset loading of posts.  
Do not use these to pick up just one end of a vehicle only. Use adapters only in pairs.  
The frame contact adapters are intended for use on Mohawk MP-Series 15" Long Fork lifts ONLY.

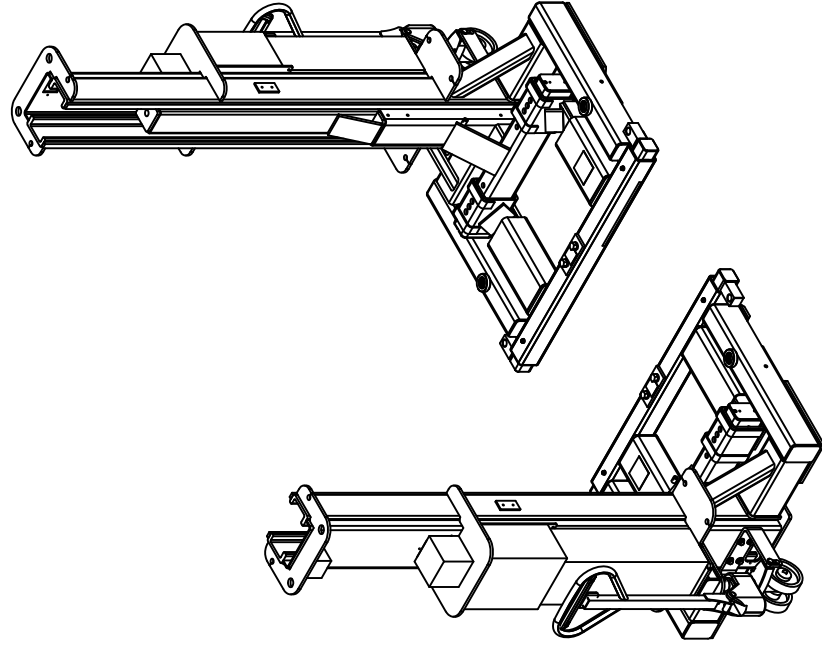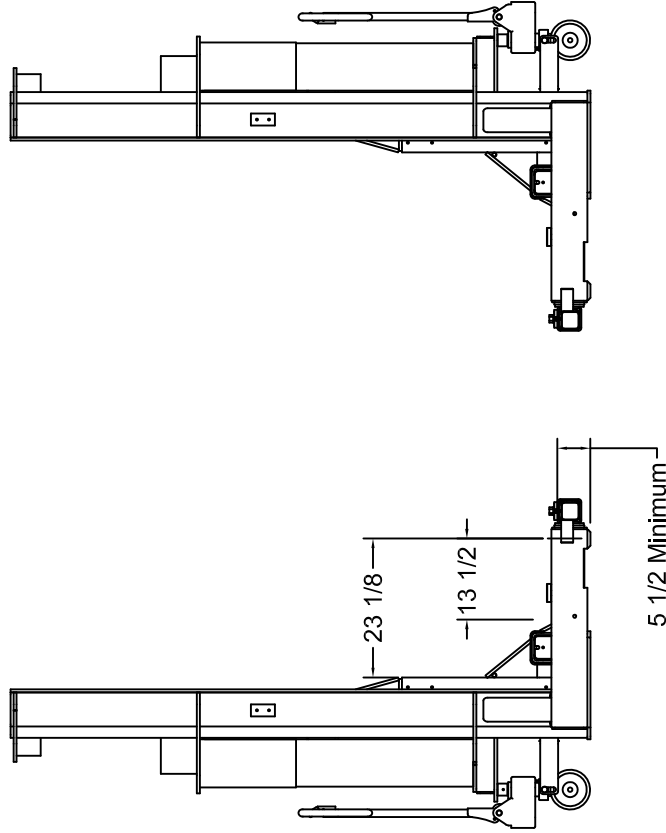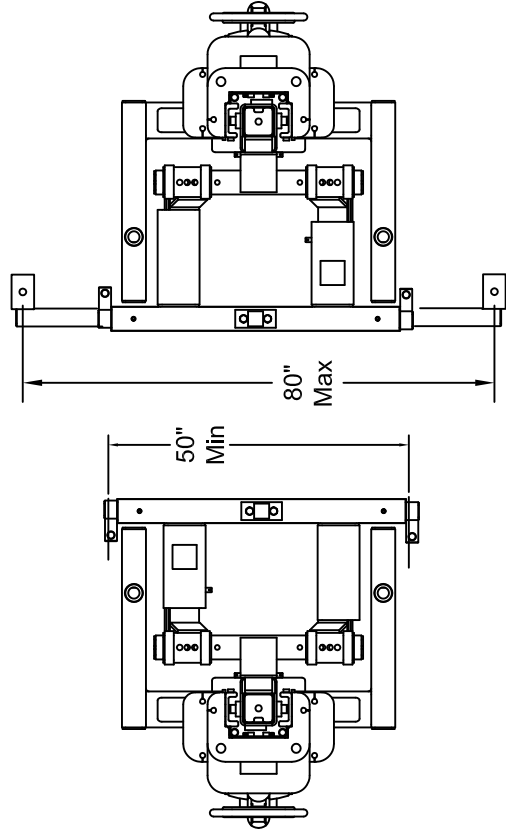

## Auto Frame Contact Adapters

These adapters slip over the standard forks of the Mohawk MP-18 Series lifts and convert the lift into a "2-Post Frame Engaging Lift".

Capacity: 4,000 lbs per Post  
(8,000 lbs Total per Post pair)

Accessories include: (4) Lifting Pads  
(4) 3" Height Adapters  
(4) 6" Height Adapters

Note: Due to the nature of this design extending beyond the base frame of the posts, this is NOT a certified option and use of this option on a certified lift void the certification of the lift.

C-SIZE

### NOTICE OF CONFIDENTIAL INFORMATION

INFORMATION CONTAINED HEREIN IS CONFIDENTIAL AND PROPERTY OF MOHAWK RESOURCES LTD. IT IS TO BE USED SOLELY FOR PURPOSES OF INSPECTION, INSTALLATION, OR MAINTENANCE. THE INFORMATION SHALL NOT BE USED OR DISCLOSED BY THE RECIPIENT FOR ANY OTHER PURPOSES WHATSOEVER.

- NOTES:
1. REMOVE ALL SHARP CORNERS & EDGES.
  2. UNLESS OTHERWISE SPECIFIED, SURFACE FINISH TO BE 125 RMS.
  3. WELDING MEDIUM SHALL CONFORM TO AWS SPECIFICATIONS TO E-70XX ELECTRODES OR E-70T1 CODE 5.3 FLUX CORE WIRE ONLY.

TOLERANCES:	± .030
ANGULAR	± 1°
FRACTIONAL	± .030
DECIMAL	± .005
FILE NAME	MP-18 Options.dwg

NEXT ASSEMBLY	DATE	WEIGHT	FROM
	8/2005	~500 LB.	n/a

SCALE	DRAWN	MOHAWK RESOURCES LTD.
1/16	rw7089	
CHECKED	APPROVED	TITLE
		Mobile Post Lift Frame Contact Adapters
DATE	WEIGHT	DRAWING NUMBER
8/2005	~500 LB.	MP-2100-Spec



# MOHAWK *Because Quality Lasts Forever*



Model A-7

## Model A-7

The A-7 is a 7,000 lb. capacity asymmetric lift that allows full opening of all vehicle doors as well as total undercar/underdash access, thanks to Mohawk's unique "clear floor" design. Low 4" arms accommodate all imports and low-riding sports cars. Includes both 3" and 6" adapters.

## Parallelogram Lifts

Standard models from 36,000 to 100,000 lb. capacities with track lengths from 26'-48'. Available in surface or flush mount with full under-vehicle access for all trucks, buses and heavy equipment.



Model 50-26-S



Model TP-16

## Models System I, LC-12, LMF-12, TP-16, TP-18, TP-26 & TP-30

These 10,000 to 30,000 lb. capacity models are the ideal heavy-duty lifts for up to Class VI trucks. Mohawk's unique "clear floor" design makes these the perfect lifts for all fleet applications. Truck adapters are also standard equipment.

## MP-Series Mobile Column

Mohawk's mobile columns are capable of lifting 32,000 to 240,000 lbs. All columns operate together, individually or can be divided into separate pairs. Adjustable lifting forks accommodate the widest range of vehicles. No wheel reducer sleeves needed.



Model  
MP-18-006



Model TR-75

## TR-Series Ramp Style Lifts

Standard models from 19,000 to 120,000 lbs. for total under-vehicle access. Available in 20', 25', and 30' long runways. Completely operated by a single technician and feature fully interlocked, redundant safety systems.



Mohawk Resources, LTD. • P.O. Box 110  
65 Vrooman Ave • Amsterdam, NY 12010  
(800) 833-2006 or (518) 842-1431  
**[www.mohawklifts.com](http://www.mohawklifts.com)**



# SEND US YOUR PHOTOS!

MOHAWK IS ALWAYS INTERESTED IN SEEING HOW YOUR LIFTS ARE USED. WE HAVE CREATED AN ON-LINE PHOTO DATABASE FOR CUSTOMERS TO VIEW OUR LIFTS IN USE.



VISIT [WWW.MOHAWKLIFTS.COM/PR/](http://WWW.MOHAWKLIFTS.COM/PR/) AND MAYBE WE CAN ADD YOUR PHOTOS TO OUR COLLECTION.  
(JPG FORMATS PREFERRED)

E-MAIL YOUR PHOTOS AND COMMENTS TO:  
[PHOTOS@MOHAWKLIFTS.COM](mailto:PHOTOS@MOHAWKLIFTS.COM)

BEST REGARDS & HAPPY LIFTING!

YOUR FRIENDS AT MOHAWK LIFTS